



**GPS ANGEL**

**INTERPHONE**  
STAY IN TOUCH 

**Product activation manual:**

- Create account via APP
- Register the device
- Alarms setting

# APP GPSANGEL ACCOUNT CREATION

Account/Email

Password

Login

Remember Me [Forgot Password?](#)

Sign Up | Demo

1. Search for «GPSANGEL» without space between GPS and ANGEL on your app store. Download the app and start it.
2. In the first screen tap on “Sign Up” .

Sign Up

Verification code

Password

Confirm Password

Submit

3. Insert your email address in first field. Pay attention that a blank space is not present at the end of email address. This email will be used as user name.
4. Press on small arrow below, to generate a verification number, which will be sent at your email in few seconds.
5. Insert the verification number received via email, in the field near the arrow.



6. Type a chosen password, length must be at least 6 digits, must contain letters and numbers.
7. Type again password on second field «CONFIRM PASSWORD».
8. Press SUBMIT.

# REGISTER YOUR DEVICE TO YOUR ACCOUNT



1. From HOME screen, tap on the + icon in the top-right corner, to add a GPSANGEL device to your account.

2. Insert the IMEI number printed on the back of device or on the label on the side of white box. You can type this number or scan the bar code, by pressing the  icon and pointing the phone towards the barcode label.

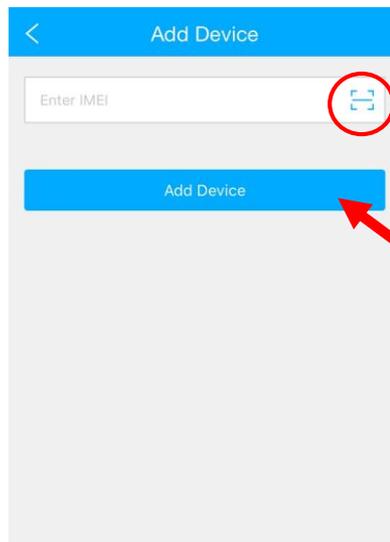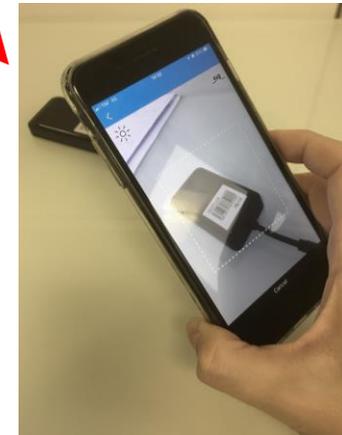

3. Then press «Add Device» to bind your GPSANGEL to your account.

**Edit Device**

Device Name: GPSANGEL20 Arm

Plate No.: EH12731

Driver Name: Armando

Contact Number: Contact Number

Device icon:

Insert additional information regarding the GPSANGEL installed (these data are not compulsory) and press SAVE



To remove a device from an account:

1. Go to "LIST" screen
2. Press the icon below the device to remove.
3. Press "Unbound" icon.

armando.al... +

All(1) Online(1) Offline(0) Inactive(0)

Default Group (1)

GPSANGEL20 Arm 351777091275618 5min STATIC

Detail Tracking Playback



More Actions

- Detail
- Tracking
- Playback
- Command
- Geo Fence
- Alerts
- Console
- Navigation
- Unbound
- Share

Home List Alerts Profile

After the bind procedure, the vehicle icon will appear on the map.


Press refresh icon  if the vehicle is not visible.  
It may take a few seconds before the vehicle appears on the screen because the server needs to update the data.

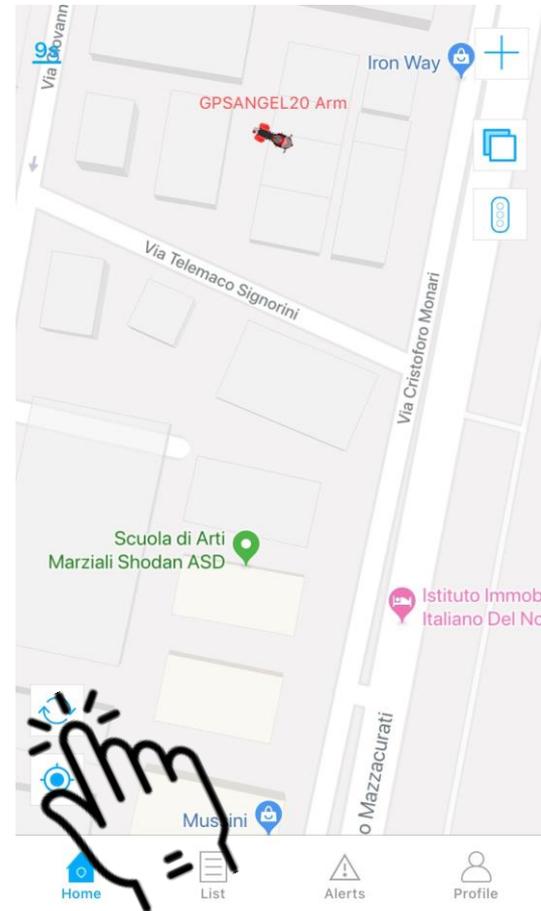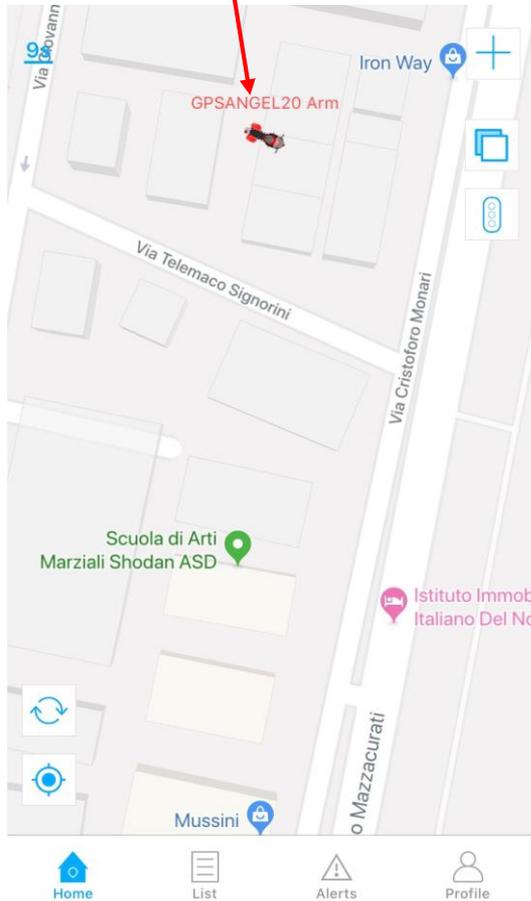

# ALLARMS SETTING

Press vehicle icon to activate vehicle detail screen.

Slide up the lower part of the screen, to access the complete list of commands.

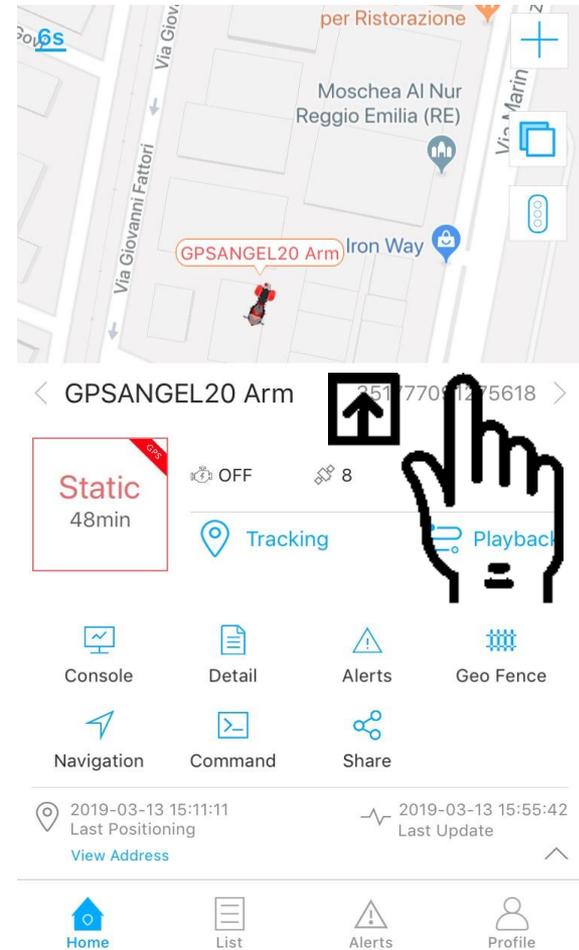

Press COMMAND to enter in command screen



< GPSANGEL20 Arm 351777091275618 >

Static 48min

OFF 8

Tracking Playback

Console Detail Alerts Geo Fence

Navigation Command Share

2019-03-13 15:11:11 Last Positioning View Address

2019-03-13 15:55:42 Last Update

Home List Alerts Profile



Insert your mobile number, adding "00" (and not "+") on which you wish to receive calls and SMS alarms. Press "Send" to send the command to GPSANGEL

< Command

GPSANGEL20 Arm  
IMEI: 351777091275618

SOS number  SOS setting  Delete SOS number

Overspeed alarm Number 1  
0039340001 34

Vibration alarm Number 2

Displacement alarm Number 3


Low battery alarm Description:  
Sos number is used for SOS call and receiving alarm.It supports phone number of 3-20 digits.


Vibration sensitivity

Arm/disarm Send


Arm mode

Remote

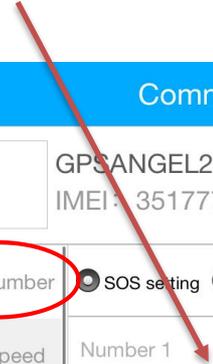


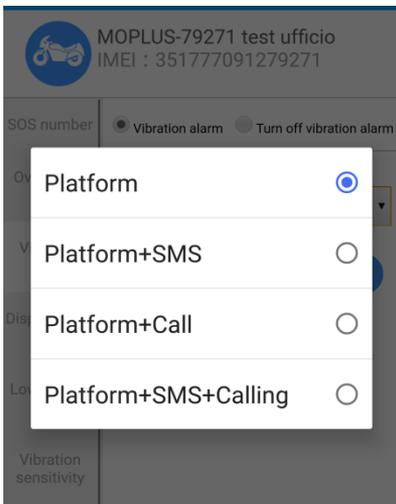


- **Platform:** when selected a notification will be generated by the APP.
- **SMS:** when selected you will receive an SMS alarm message with the google map link to the position.
- **Call:** when selected you will receive a phone call as alarm notification.

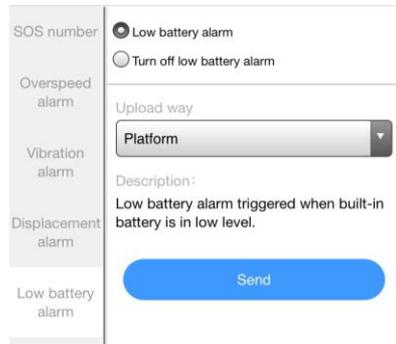

**Low battery alarm (only GPSANGEL 20):** when vehicle battery voltage quando la batteria del veicolo drops below 11 V , GPSANGEL sends an alarm and remains active using its internal battery.

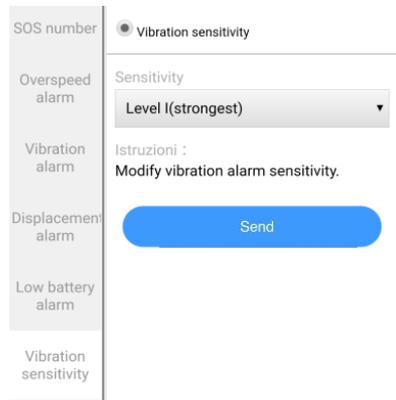

**Vibration sensitivity:** it's the movement-detection sensitivity setting (only GPSANGEL20). Level1 most sensitive, level5 is less sensitive.

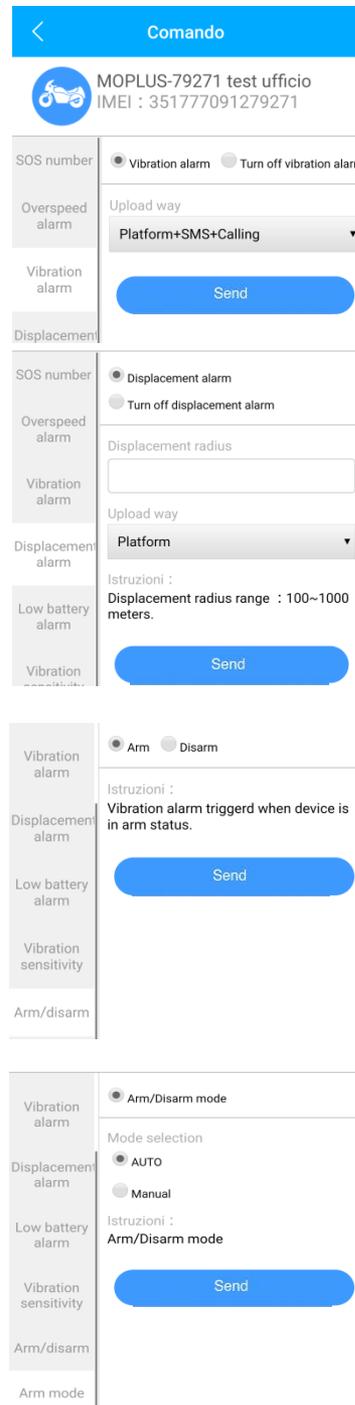

It's the movement-detection alarm. When the vehicle is moved with engine OFF, GPSANGEL sends an alarm notification.

When the vehicle is moved from its position, exceeding a preset distance (from 100mt to 1 km) GPSANGEL sends an alarm.

Command to manually arm and disarm the device.

Toggle manual or automatic mode for device arming.

Vibration alarm

Cut off fuel/power connection  
 Restore fuel/power connection

---

Displacement alarm

Password :

Low battery alarm

Istruzioni :

Fuel/power cut-off is only available during positioning. If the device is not positioning or the speed is over 20km/h, the execution command will delay.

Vibration sensitivity

Arm/disarm

Send

Arm mode

Remote control

### only GPSANGEL20

Cut off feature: trigger the external relais from remote. Relais can be connected to cut fuel pump power or starting motor relais, see user manual for a connection diagram.

To send this command is necessary to type again the account password. This features runs only once the vehicle is steady or its speed drops below 20 km/h.

alarm

User defined command

---

Vibration alarm

User defined command

Displacement alarm

Param Operation:User defined command

Low battery alarm

Send

Vibration sensitivity

Arm/disarm

Arm mode

Remote control

User-defined

User defined: this feature can be used to send SMS command via APP. Check user manual for complete list of SMS commands and their usage.