

KTM 390 ADV '20- / 790 ADV '19- / 890 ADV '21-

M O U N T I N G I N S T R U C T I O N S

REF 20416

HEADLIGHT PROTECTOR



**QUICK RELEASE
3" SECONDS**




ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Protector de faro	Headlight protector	1	3758WM3
2		Soporte superior	Upper support	1	SOPOR2P7-S-3758
3		Soporte inferior	Lower support	1	SOPOR2P7-I-3758
4		Silentblock Ø18x Ø9 x Ø11 x8	Ø18x Ø9 x Ø11 x8 silentblock	4	SILENBGONE--064
5		Tope de goma Ø4,5-4,6 x 1,5mm	Ø4,5-4,6 x 1,5mm bumper foot	2	TOPEGOMA---3758
6		Tornillo ISO 7380 M4x8 (negro)	M4x8 ISO 7380 Allen screw	1	TORNI-I7380-757
7		Arandela nylon M4	M4 nylon washer	1	ARNV00000000311
8		Clip hexagonal M4 Ø3,96 x6,35mm	M4 Ø3,96 x6,35mm exagonal clip	1	CLIP-HEX---3758
9		Tornillo Allen M5x11 Ø11 ISO 7380	M5x11 Ø11 ISO 7380 Allen screw	1	TORNI-AI----520
10		Arandela nylon M5x1	M5x1 nylon washer	2	ARNV00000000245
11		Tornillo Allen M5x16 Ø11 ISO 7380 (KTM 790 ADV '19- / 890 ADV '21-)	M5x16 Ø11 ISO 7380 Allen screw (KTM 790ADV '19- / 890 ADV '21-)	2	TORNI-I7380-493
12		Tornillo Allen M6x16 Ø14 ISO 7380 (KTM 390 ADVENTURE '20-)	M6x16 Ø14 ISO 7380 Allen screw (KTM 390 ADVENTURE '20-)	2	TORNI-I7380-403
13		Casquillo Ø8,5 x Ø13 x3,5	Ø8,5 x Ø13 x3,5 arrowhead	2	CASQUI-----775
14		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	1	TAPON-----85

KTM 390 ADV '20- / 790 ADV '19- / 890 ADV '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

**DISASSEMBLY
DESMONTAJE**

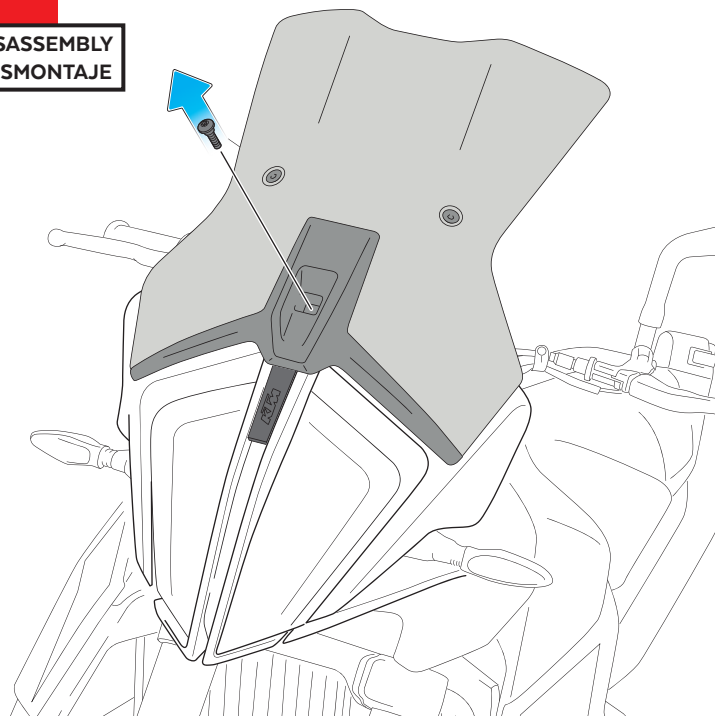


2

**DISASSEMBLY
DESMONTAJE**

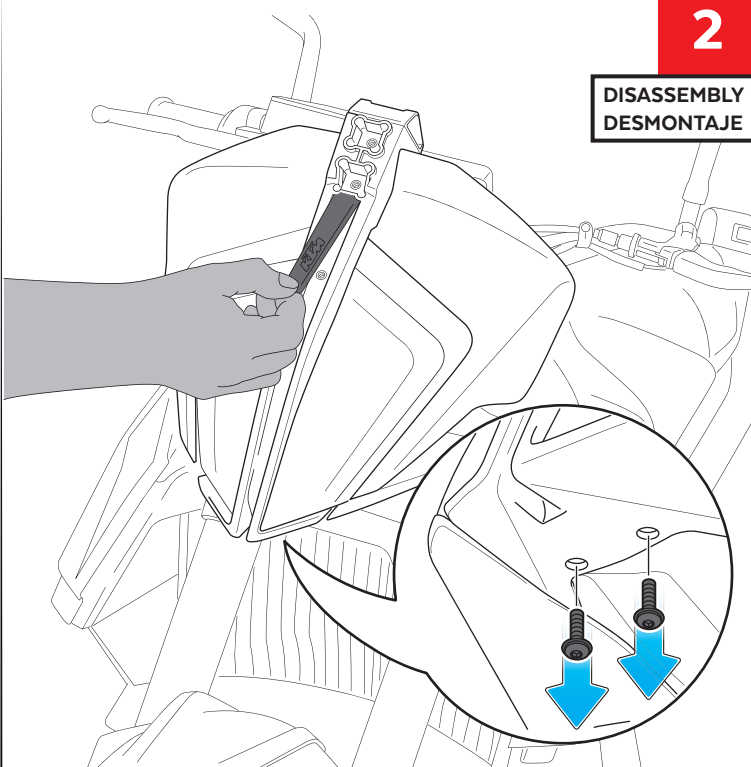


3

**ASSEMBLY
MONTAJE**

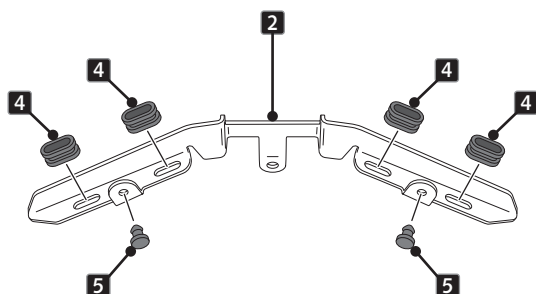

4

**ASSEMBLY
MONTAJE**

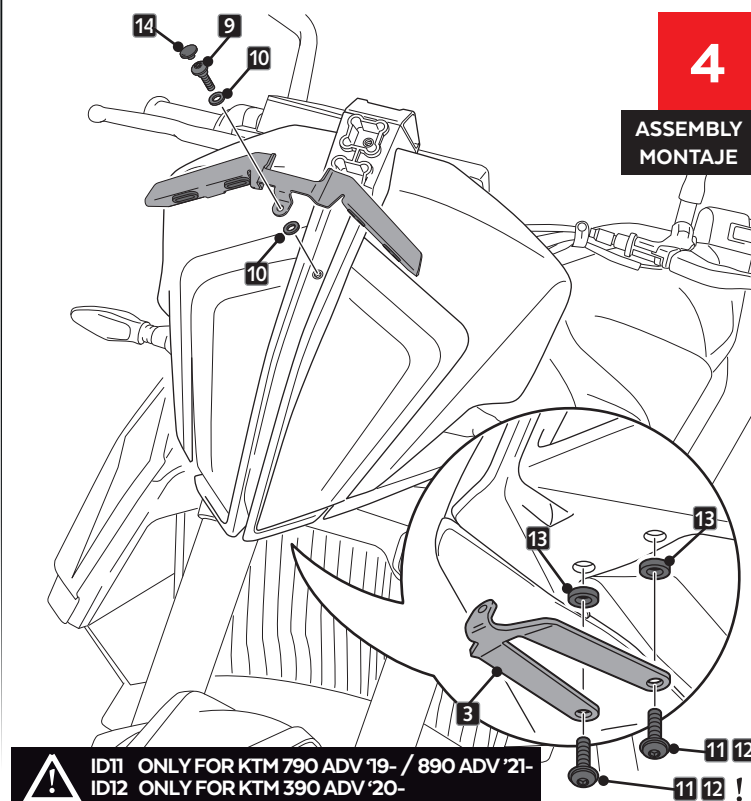

IDT1 ONLY FOR KTM 790 ADV '19- / 890 ADV '21-
IDT2 ONLY FOR KTM 390 ADV '20-


11 12 !
11 12 !

KTM 390 ADV '20- / 790 ADV '19- / 890 ADV '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


5

ASSEMBLY
MONTAJE

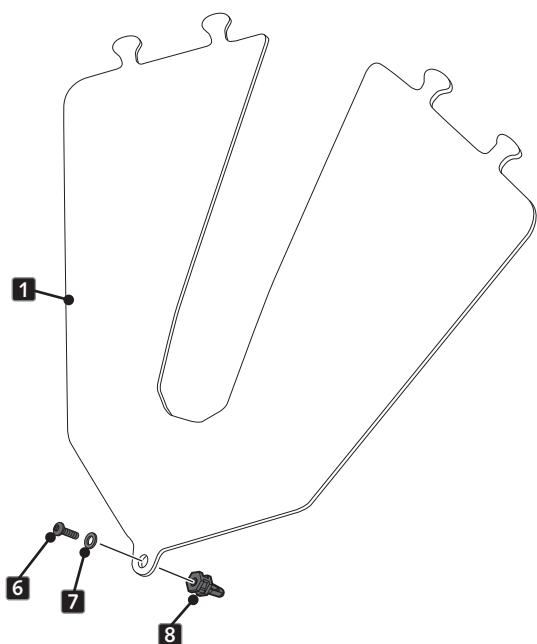


6

ASSEMBLY
MONTAJE

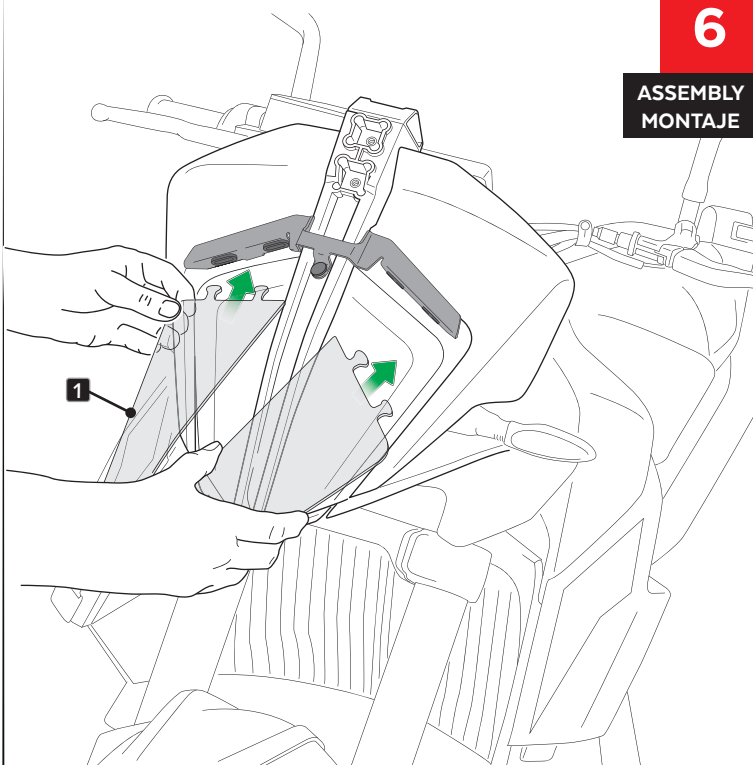


7

ASSEMBLY
MONTAJE

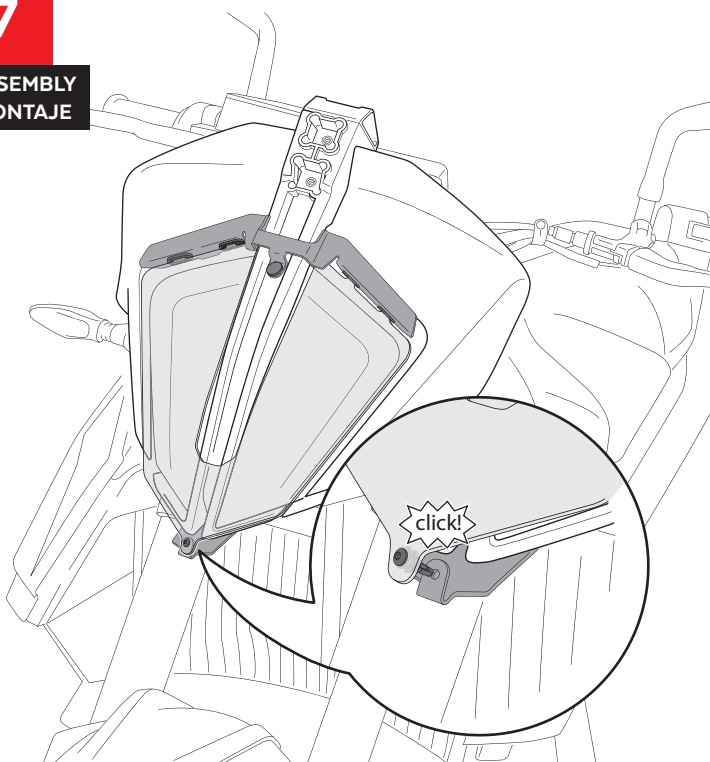

8

ASSEMBLY
MONTAJE

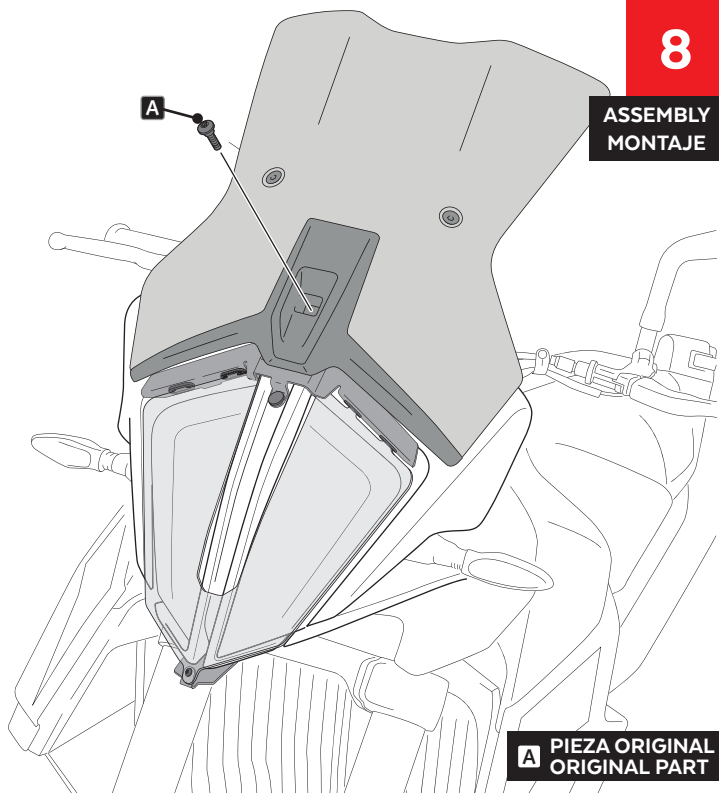

A PIEZA ORIGINAL
ORIGINAL PART