

DUCATI HYPERMOTARD 950 / SP '19 -

M O U N T I N G I N S T R U C T I O N S

REF 3634

WINDSHIELD NEW GENERATION SPORT



1 Person



25 min






EASY



ALLEN

Nº 6
Nº 3

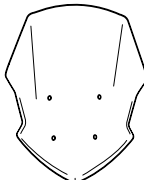

ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula	Screen	1	3634F/H/N/WM3
2		Soporte metálico derecho (R)	Right metal support (R)	1	SOPOR2P2-R-3634
3		Soporte metálico izquierdo (L)	Left metal support (L)	1	SOPOR2P2-L-3634
4		Casquillo Ø8,5x Ø13x 15	Ø8,5x Ø13x 15 bush	4	CASQUI-M----614
5		Tornillo DIN 912 M8x45	DIN912 M8x45 screw	4	TORNI-AD912-508
6		Silentblock M5	M5 silentblock	4	SILENBTM5-046/1
7		Tornillo allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 allen screw	4	TORNI-I7380-493
8		Arandela de nylon M5x1	M5x1 nylon washer	4	ARNV0000000245
9		Tapón tornillo M5 ISO 7380	M5 ISO 7380 allen screw cap	4	TAPON-----85


DUCATI HYPERMOTARD 950 / SP '19 -

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1


**DISASSEMBLY
DESMONTAJE**

A Tornillería original
Original screw

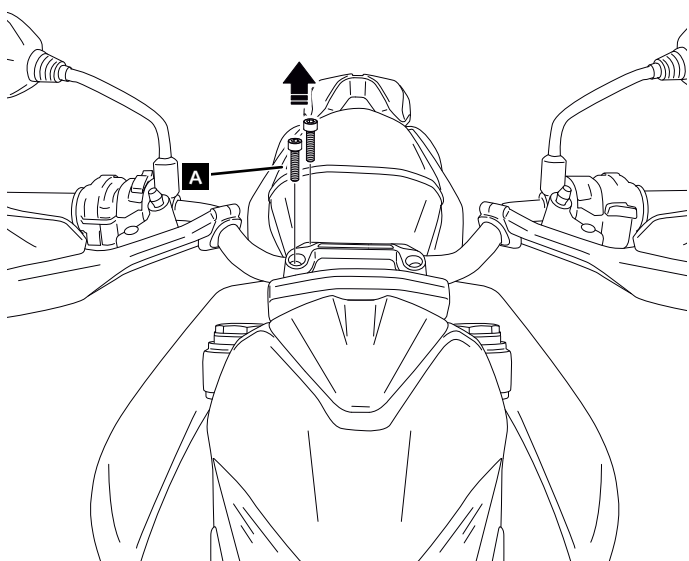

2


**ASSEMBLY
MONTAJE**

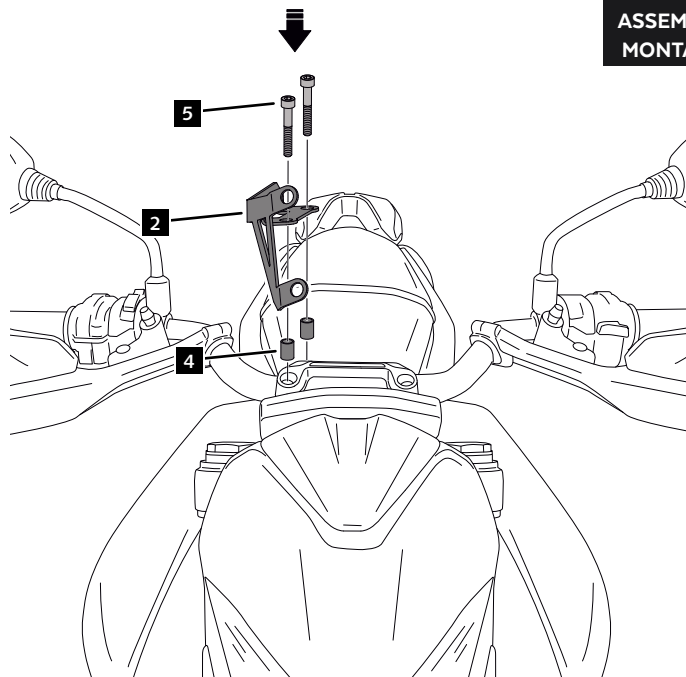

3


**DISASSEMBLY
DESMONTAJE**

A Tornillería original
Original screw

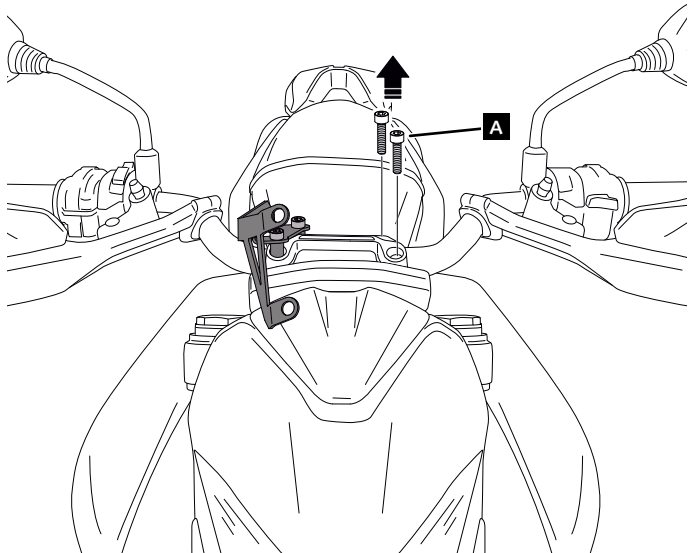

4

**ASSEMBLY
MONTAJE**

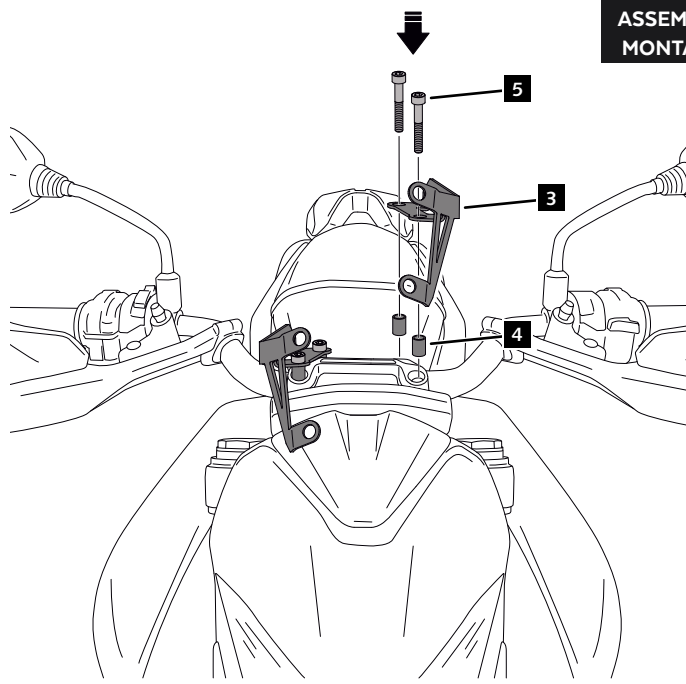


DUCATI HYPERMOTARD 950 / SP '19 -

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

5

ASSEMBLY
MONTAJE

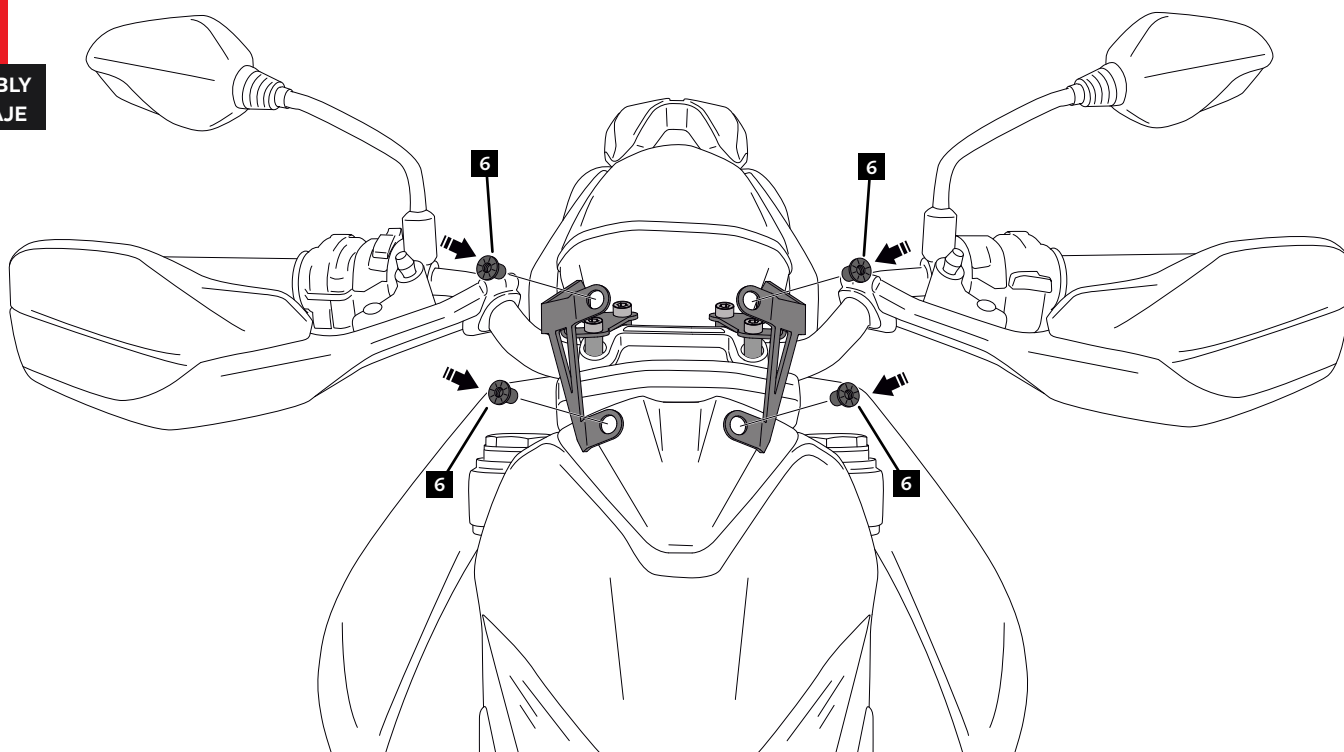

6

ASSEMBLY
MONTAJE

