

TRIUMPH TIGER SPORT 660 '22

M O U N T I N G I N S T R U C T I O N S

REF 21317

TOURING SCREEN



1 Person



25 min



EASY





N° 12



ALLEN


N° 3
N° 5

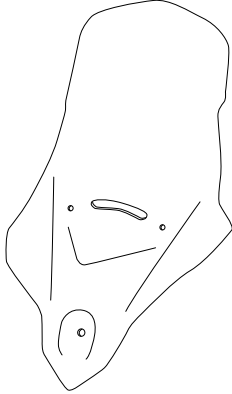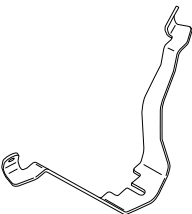ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula touring	Touring screen	1	21317W/H/FM3
2		Soporte fijo	Fixed support	1	SOP1P2----21317
3		Arandela de nylon Ø8,2x Ø13x 1mm	Ø8,2x Ø13x 1mm nylon washer	2	ARNV00000000265
4		Tornillo Allen M5x25 Ø11 ISO 7380	M5x25 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-766
5		Casquillo Ø8,5 xØ13 x3,5	Ø8,5 xØ13 x3,5 arrowhead	2	CASQUI-----775

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

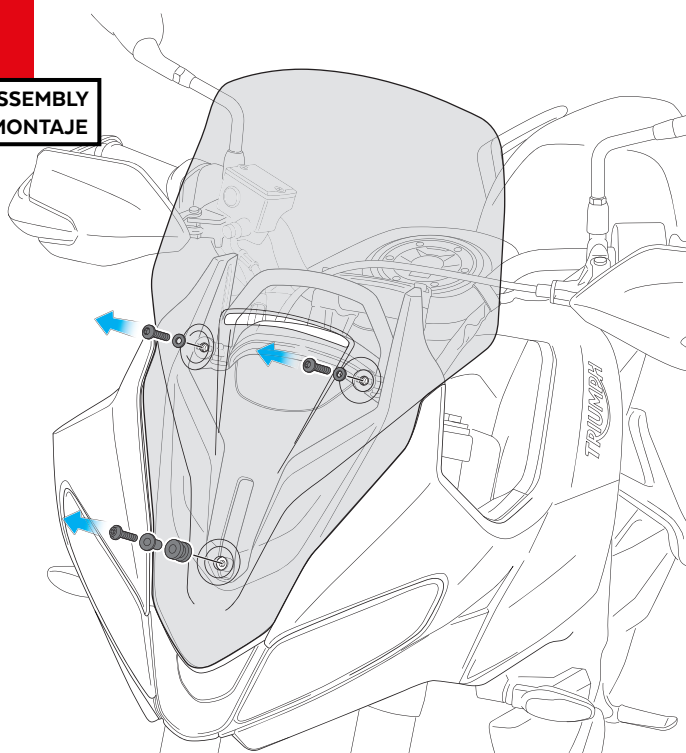


2

DISASSEMBLY
DESMONTAJE

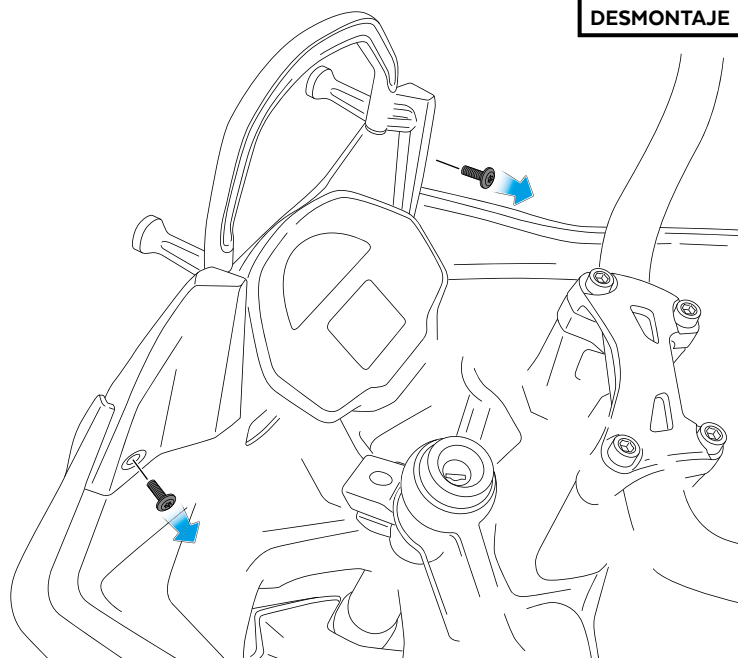


3

DISASSEMBLY
DESMONTAJE

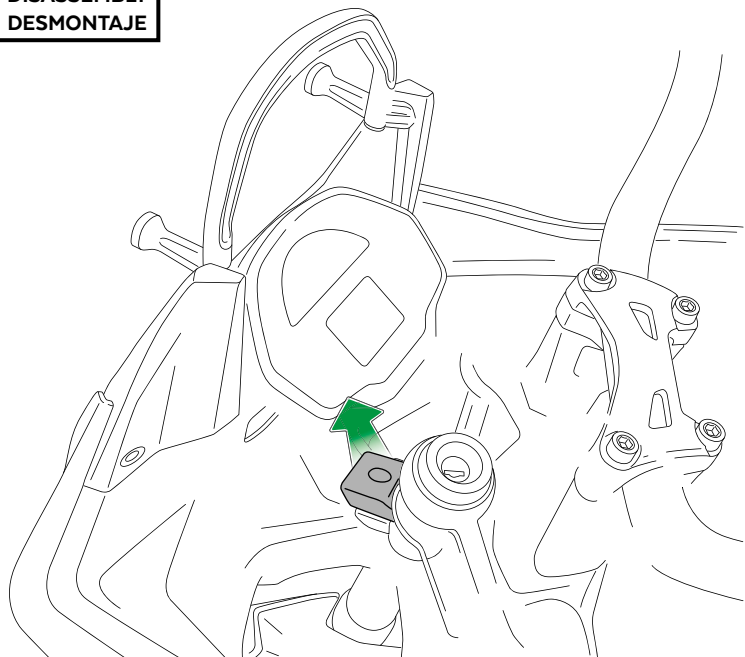

4


DISASSEMBLY
DESMONTAJE

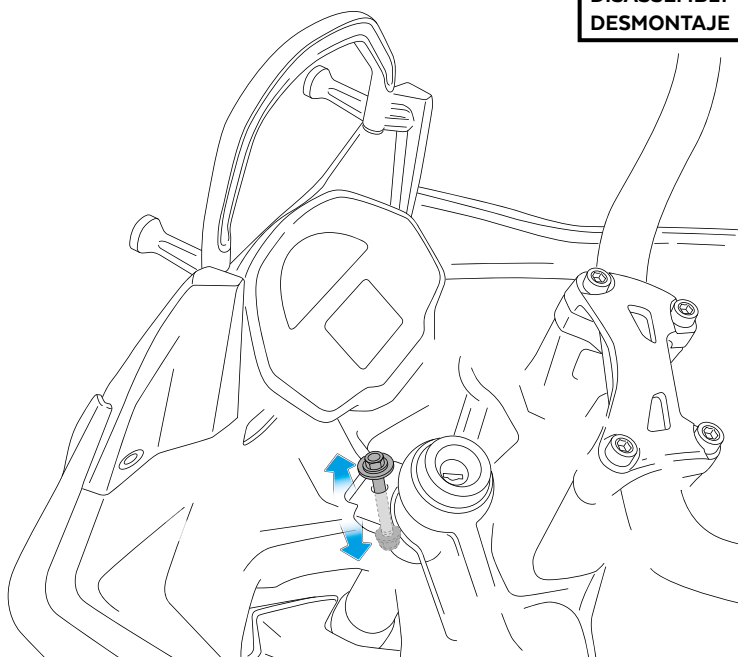

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

5

ASSEMBLY
MONTAJE

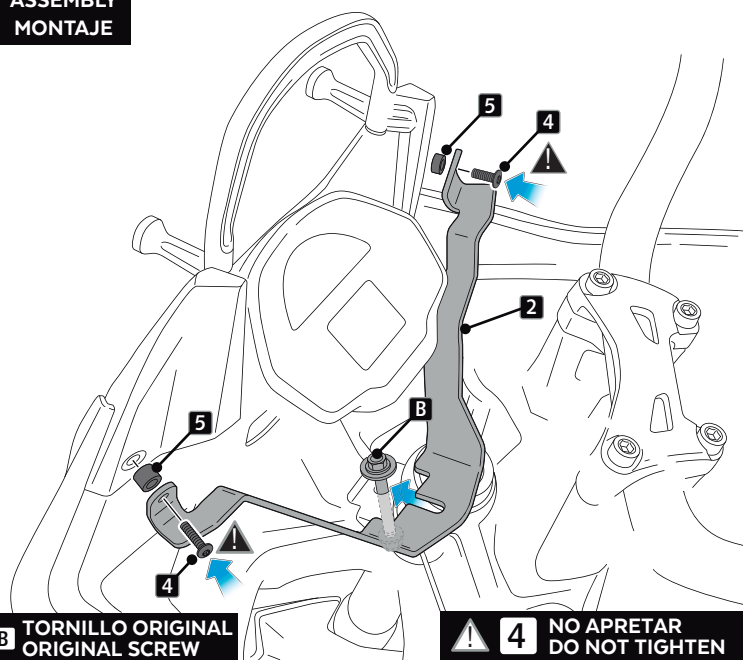


B TORNILLO ORIGINAL
ORIGINAL SCREW

! **4** NO APRETAR
DO NOT TIGHTEN

6

ASSEMBLY
MONTAJE

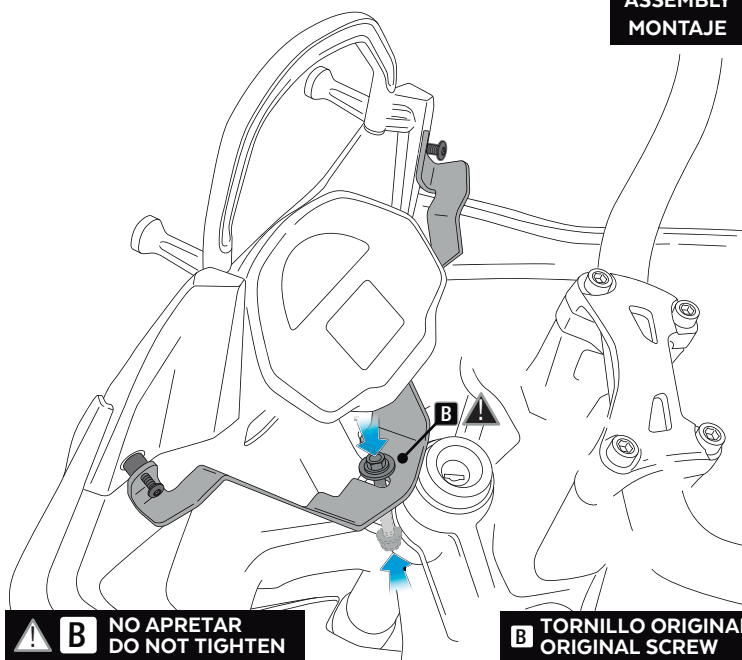


! **B** NO APRETAR
DO NOT TIGHTEN

B TORNILLO ORIGINAL
ORIGINAL SCREW

7

ASSEMBLY
MONTAJE


!
STEP 1.
APRETAR TORNILLOS ID4 / TIGHTEN ID4 SCREWS
STEP 2.
ASEGURAR LA CORRECTA POSICIÓN DEL SOPORTE
Y APRETAR TORNILLO ORIGINAL/
ENSURE THE CORRECT POSITION OF THE SUPPORT
AND TIGHTEN THE ORIGINAL SCREW.

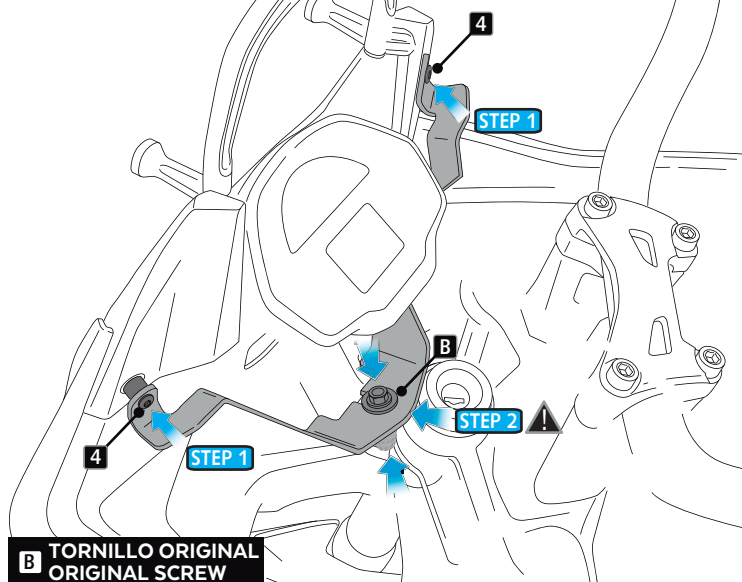

B TORNILLO ORIGINAL
ORIGINAL SCREW

8

ASSEMBLY
MONTAJE

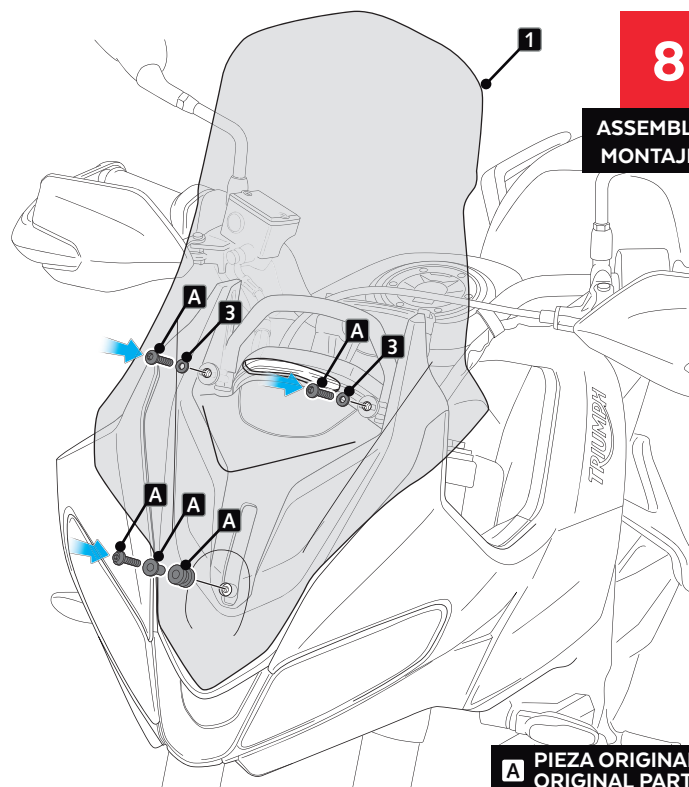

A PIEZA ORIGINAL
ORIGINAL PART