

SYM JET X 125'23-

M O U N T I N G I N S T R U C T I O N S

REF 21534

WINDSHIELD V-TECH TOURING




ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula	Screen	1	21534 H/WM3
2		Casquillo Ø8,5xØ13x15 mm	Ø8,5xØ13x15 mm arrowhead	4	CASQUI-M----614
3		Tapón tornillo DIN933 M6	M6 DIN933 screw cap	2	CAPERUZZTOM6-063
4		Tornillo Allen M6x35 Ø11 ISO 7380	M6x35 Ø11 ISO 7380 Allen screw	4	TORNIAI7380-276
5		Silentblock Ø17xØ10xØ13x10	Ø 17x10xØ13x10 silentblock	4	AROPASACABLES--
6		Casquillo con valona Ø15xØ9x7,5	Ø15xØ9x7,5 Bush with flange	4	CASQUI-1A---324
7		Tapon tornillo M6 ISO7380	M6 ISO7380 screw cap	4	TAPON-----86

SYM JET X 125'23-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

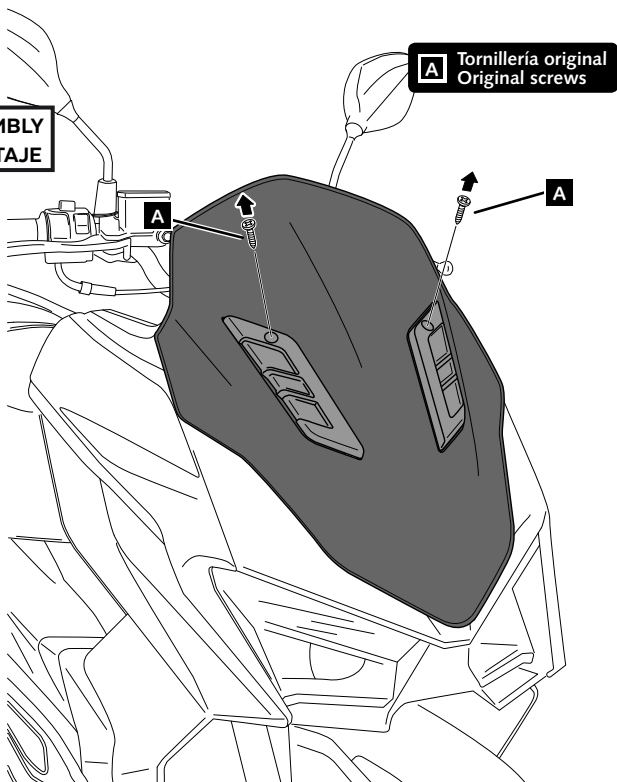


2

DISASSEMBLY
DESMONTAJE

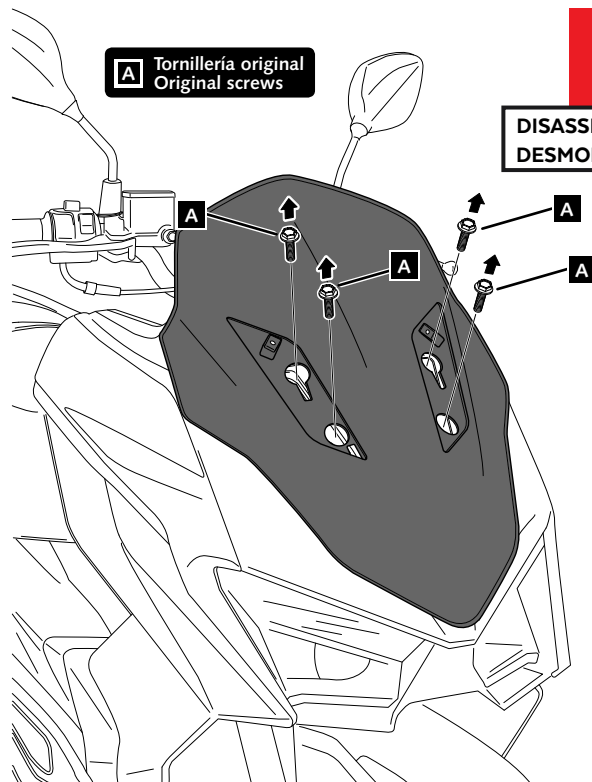


3

ASSEMBLY
MONTAJE

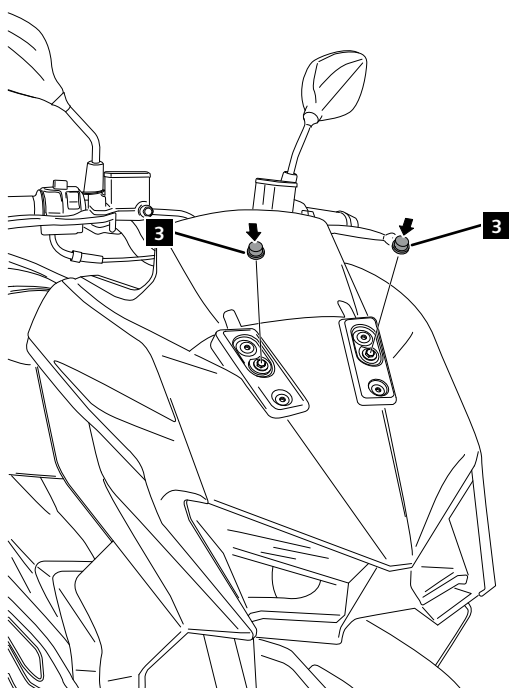

4

ASSEMBLY
MONTAJE

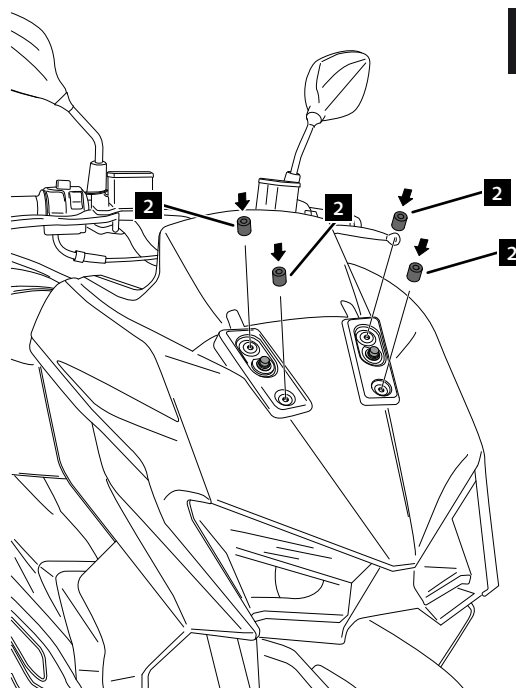


SYM JET X 125'23-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

5

ASSEMBLY
MONTAJE

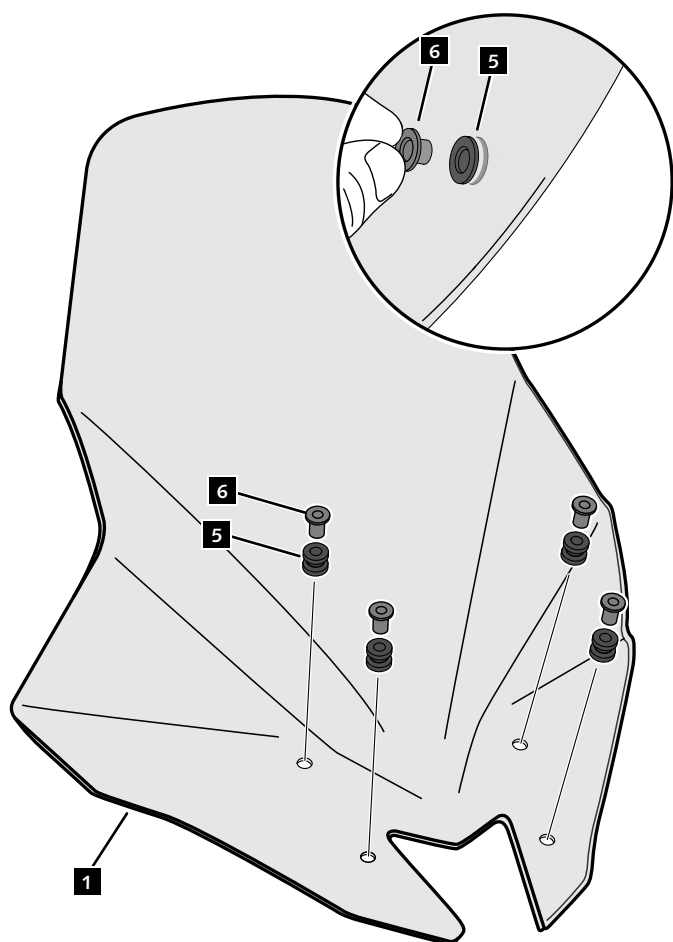

6

ASSEMBLY
MONTAJE

