




Puig
Hi-Tech Parts

HEADLIGHT PROTECTOR

**INVISIBLE
SHIELD**



IMPACT RESISTANT

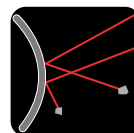

ANTI SCRATCH



INVISIBLE



UV RESISTANT

DUCATI MULTISTRADA V4 '21-

PART NUMBER : 20761W



QR Video



1 Person




15 min



EASY


ID	PIEZA/PART	DESCRIPCIÓN / DESCRIPTION	QTY	REF
1		Protector de faro / Headlight protector	1	PROTEC----20761

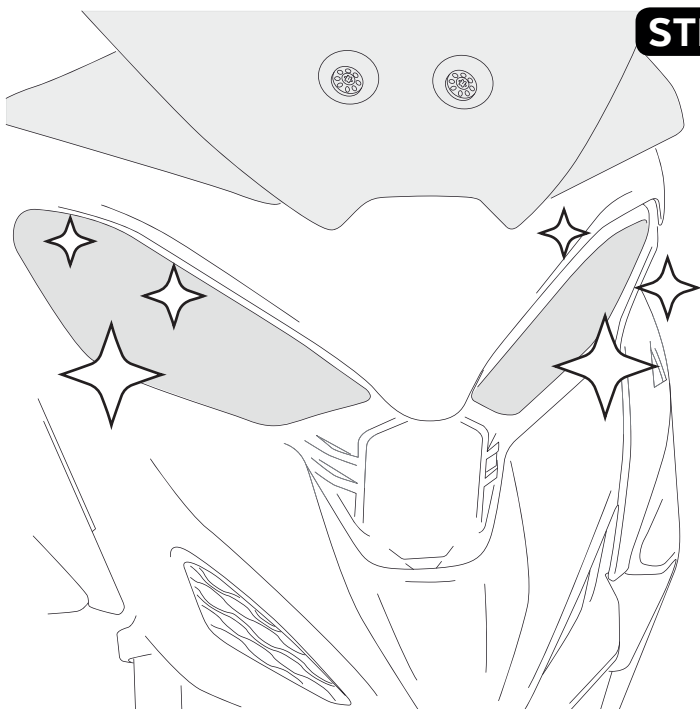

STEP 1

ESP **Limpiar el faro.** Utilizar únicamente un paño limpio y agua con jabón neutro o alcohol isopropílico.
Antes de emplear este u otro tipo de agentes limpiadores verificar que es compatible con el material a limpiar (parte de la moto, faro).
Ante la duda, usar sólo agua con jabón neutro.
Éste es un paso clave para que el resultado final sea óptimo.

ENG **Clean headlight.** Use only a clean cloth and water with neutral soap or isopropyl alcohol.
Before using this or any other type of cleaning agent, verify that it is compatible with the materials to be cleaned (motorbike headlight).
When in doubt, use only water with neutral soap.
This step is key for ensuring a good result and finish of the headlight protector

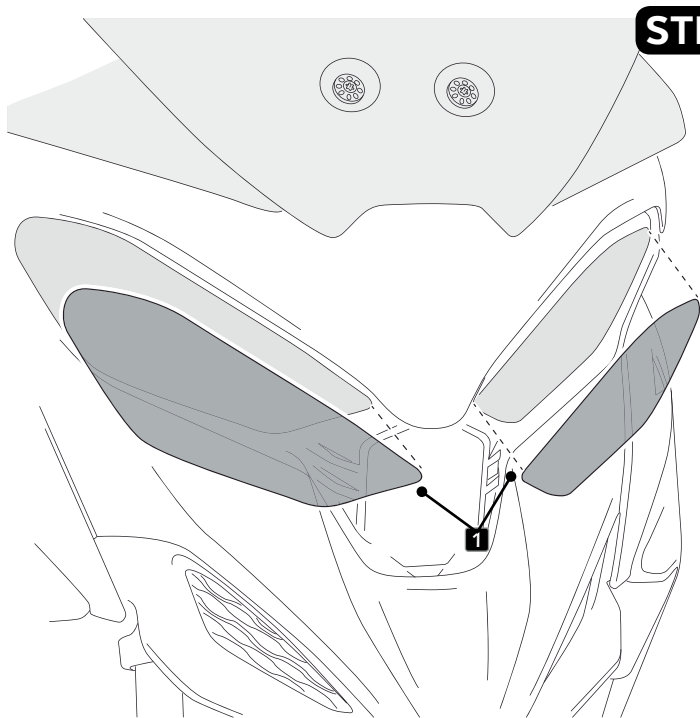

STEP 2

ESP **Manipular el adhesivo con cuidado** de no contaminarlo con grasa, polvo o suciedad (al tocarlo con los dedos).
Rocíe con agua el faro limpio de suciedad. coloque con cuidado la lámina protectora, hasta colocarla en la posición ideal.
una vez colocada, empezar a **aplicar presión con la mano** o con una espátula suave del centro hacia los lados para ir eliminando el agua y las burbujas de aire.
La aplicación ideal del adhesivo se logra cuando la temperatura está entre 21°C y 38°C, y se permite que la unión permanezca estable y sin exponer al sol/viento ni productos de limpieza.

ENG **Handle the adhesive carefully** so as not to contaminate it with grease, dust or dirt (by touching it with your fingers).
Spray water to the clean headlight, and place the headlight protector.
Once we have it on the right position **start aplying pressure to eliminate the water and small bubbles of air,** from the center to the edges.
Ideal adhesive application is accomplished when the temperature is between 21°C and 38°C, without exposing it to direct sunlight, wind or cleaning products