

HONDA CB650R NEO SPORTS CAFÉ '24-

M O U N T I N G I N S T R U C T I O N S

REF 21960

CARENABRÍS NG SPORT / WINDSHIELD NG SPORT



1 Person




20 min



EASY



T40



N° 3
N° 5


ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula Sport	Sport Screen	1	10639H/F/W/JM3
2		Soporte Izquierdo	Left support	1	SOPOR2P3-L21960
3		Soporte derecho	Right support	1	SOPOR2P3-R21960
4		Casquillo Ø13xØ8x3,5mm	Ø13xØ8x3,5mm Arrowhead	2	CASQUI-----775
5		Silentblock M5	M5 Silentblock	4	SILENBTM5-046/1
6		Arandela nylon M5x1	M5x1 Nylon washer	4	ARNV00000000245
7		Tornillo allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 allen screw	6	TORNI-I7380-493
8		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85

HONDA CB650R NEO SPORTS CAFÉ '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

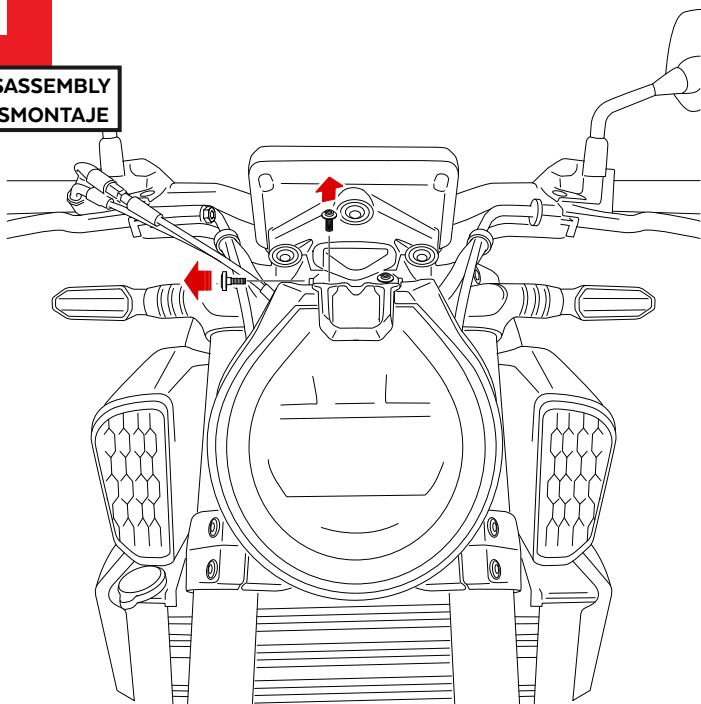

2

ASSEMBLY
MONTAJE

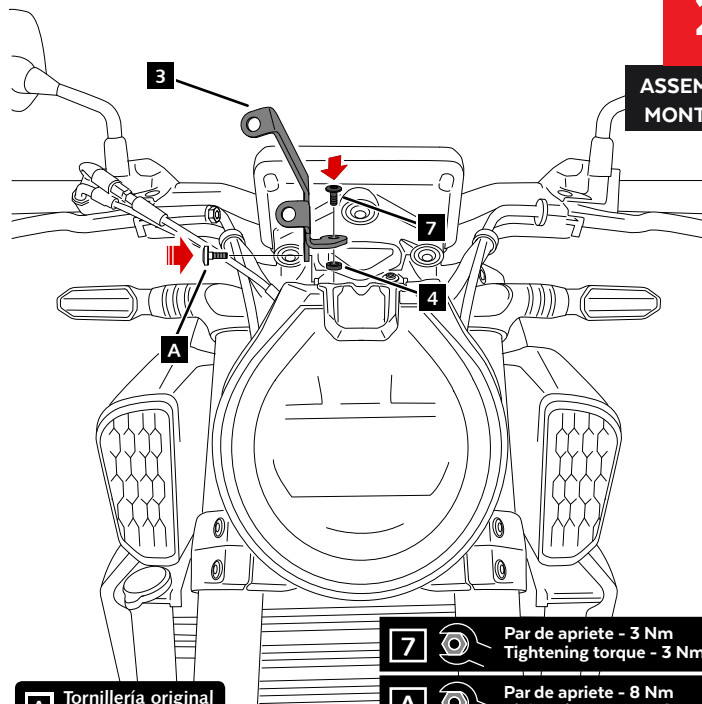


7 Par de apriete - 3 Nm
Tightening torque - 3 Nm

A Par de apriete - 8 Nm
Tightening torque - 8 Nm

A Tornillería original
Original screws


3

DISASSEMBLY
DESMONTAJE

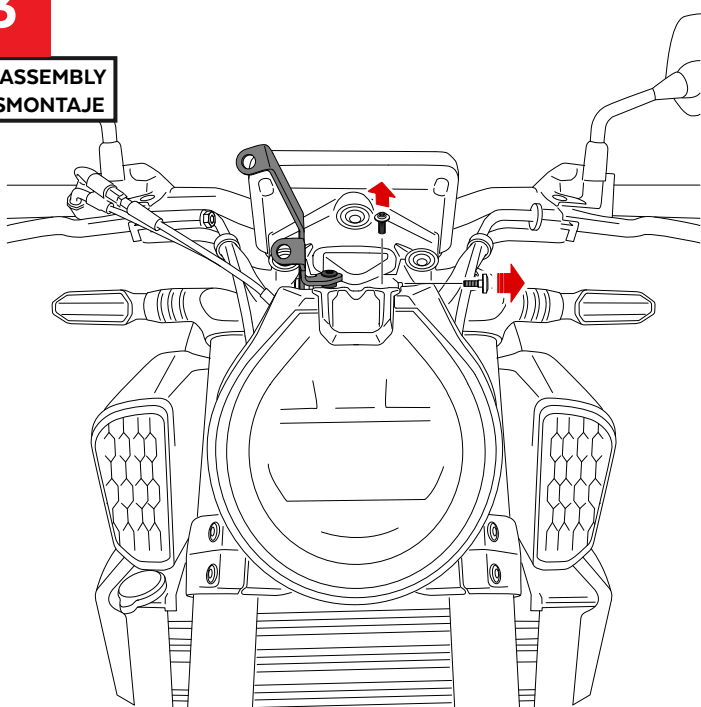

4

ASSEMBLY
MONTAJE

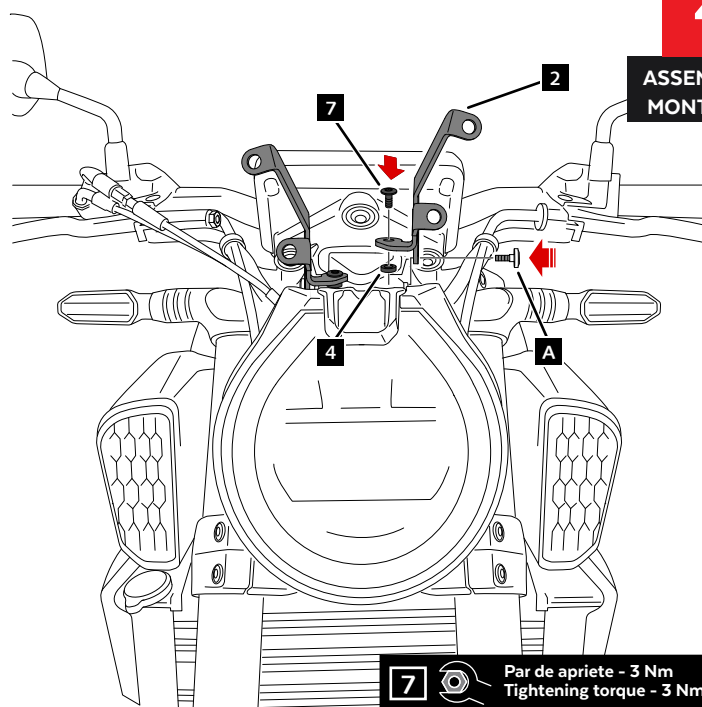

7 Par de apriete - 3 Nm
Tightening torque - 3 Nm

A Par de apriete - 8 Nm
Tightening torque - 8 Nm


A Tornillería original
Original screws

HONDA CB650R NEO SPORTS CAFÉ '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


4

ASSEMBLY
MONTAJE

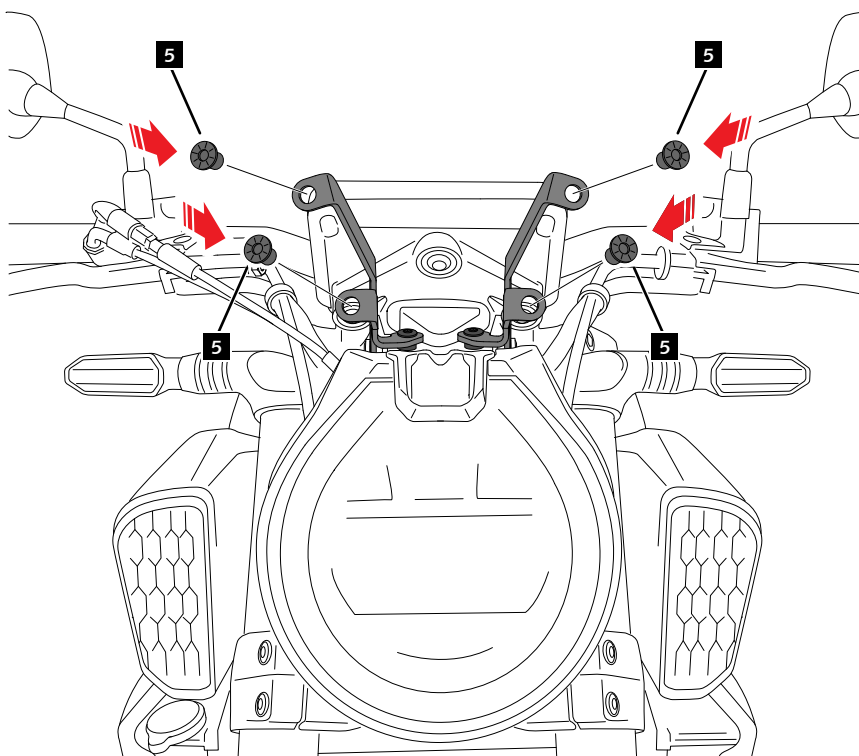

5

ASSEMBLY
MONTAJE

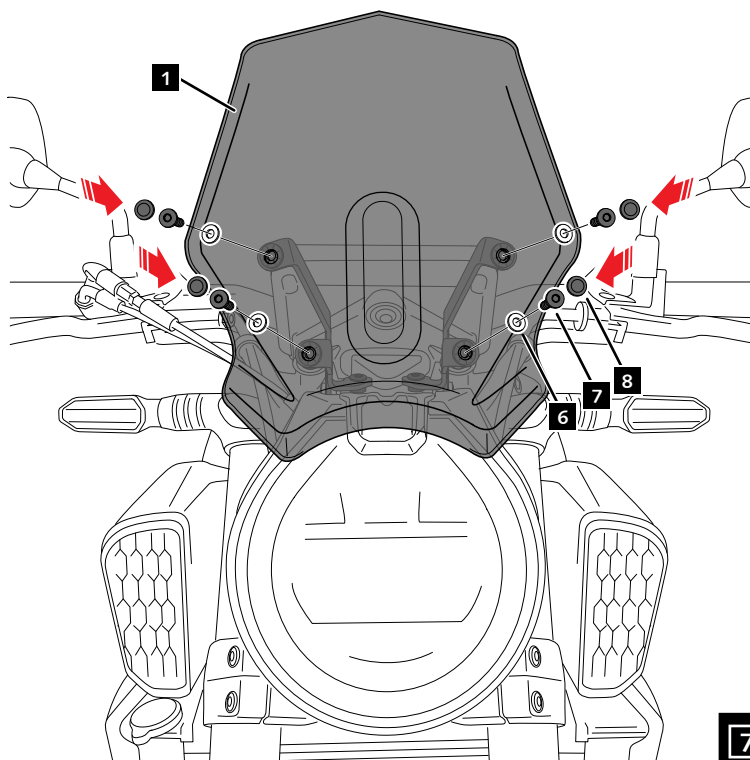

Par de apriete - 1,5 Nm
Tightening torque - 1,5 Nm