

# BMW R1300GS '23- / R1300GS ADVENTURE '24-

## M O U N T I N G I N S T R U C T I O N S

REF 21895

GUARDABARROS TRASERO / REAR MUDGUARD



1 Person



30 min



EASY



N° 17

ALLEN  
N° 3  
N° 5  
N° 6  
N° 8



TORX  
T30  
T50




| ID | PIEZA/PART | DESCRIPCIÓN                              | DESCRIPTION                           | QTY | REF             |
|----|------------|------------------------------------------|---------------------------------------|-----|-----------------|
| 1  |            | Guardabarros                             | Rear Mudguard                         | 1   | 21895 J/C M3    |
| 2  |            | Soporte adaptador                        | Adapter support                       | 1   | SOPORIP4--21895 |
| 3  |            | Soporte aluminio                         | Aluminum Support                      | 1   | SOPORFUN-21895- |
| 4  |            | Silentblock                              | Silentblock                           | 3   | SILENBGONE--064 |
| 5  |            | Tornillo Allen M5x14 ISO 7380            | M5x14 ISO 7380 Allen screw            | 3   | TORNI-I7380-610 |
| 6  |            | Casquillo con valona M5                  | M5 Bush with flange                   | 3   | CASQUI-----517  |
| 7  |            | Arandela Grower DIN127 M6                | DIN127 M6 washer                      | 3   | ARAND-D127--528 |
| 8  |            | Tapón tornillo M5 ISO 7380               | M5 ISO 7380 screw cap                 | 3   | TAPON-----85    |
| 9  |            | Tornillo Allen M10x55 DIN 7984 (A4 Inox) | M10x55 DIN 7984 (A4 Inox) Allen screw | 1   | TORNI-D7984-940 |
| 10 |            | Tuerca autoblocante M10                  | M10 lock nut                          | 1   | TUEA-D985.8-M10 |
| 11 |            | Casquillo Ø10,5 xØ14 x20 mm              | Ø10,5 xØ14 x20 mm Arrowhead           | 1   | CASQUII01420299 |
| 12 |            | Tornillo Allen M10x35 DIN 7984 (A4 Inox) | M10x35 DIN 7984 (A4 Inox) Allen screw | 1   | TORNI-D7984-941 |
| 13 |            | Tornillo Allen M10x20 DIN 7984 (A4 Inox) | M10x20 DIN 7984 (A4 Inox) Allen screw | 1   | TORNI-D7984-942 |
| 14 |            | Tornillo Allen M6x10 DIN 7984 (A4 Inox)  | M6x10 DIN 7984 (A4 Inox) Allen screw  | 2   | TORNI-D7984-943 |
| 15 |            | Tornillo Allen M6x16 DIN 7984 (A4 Inox)  | M6x16 DIN 7984 (A4 Inox) Allen screw  | 1   | TORNI-D7984-944 |
| 16 |            | Tornillo Allen M6x30 DIN 7984 (A4 Inox)  | M6x30 DIN 7984(A4 Inox) Allen screw   | 1   | TORNI-D7984-946 |
| 17 |            | Abrazadera cables negra 100x2,5mm        | 100x2,5mm cables ties                 | 1   | BRIDANI00X2'5-N |

# BMW R1300GS '23- / R1300GS ADVENTURE '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY  
DESMONTAJE

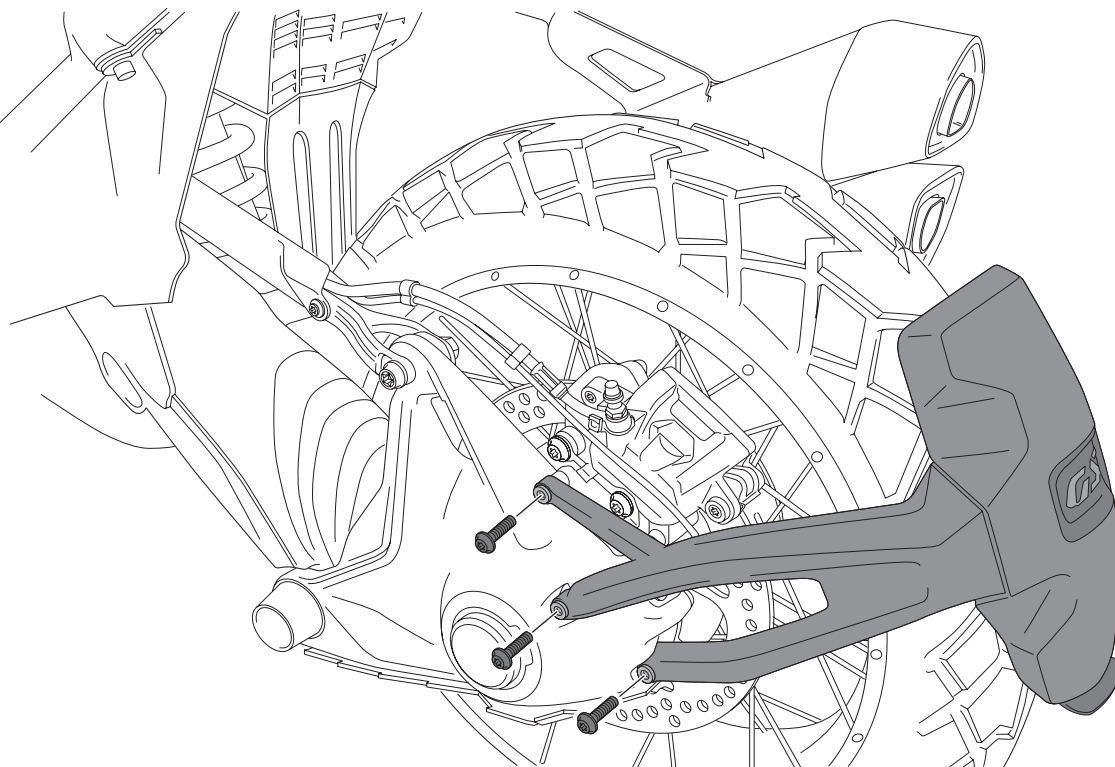

2

DISASSEMBLY  
DESMONTAJE

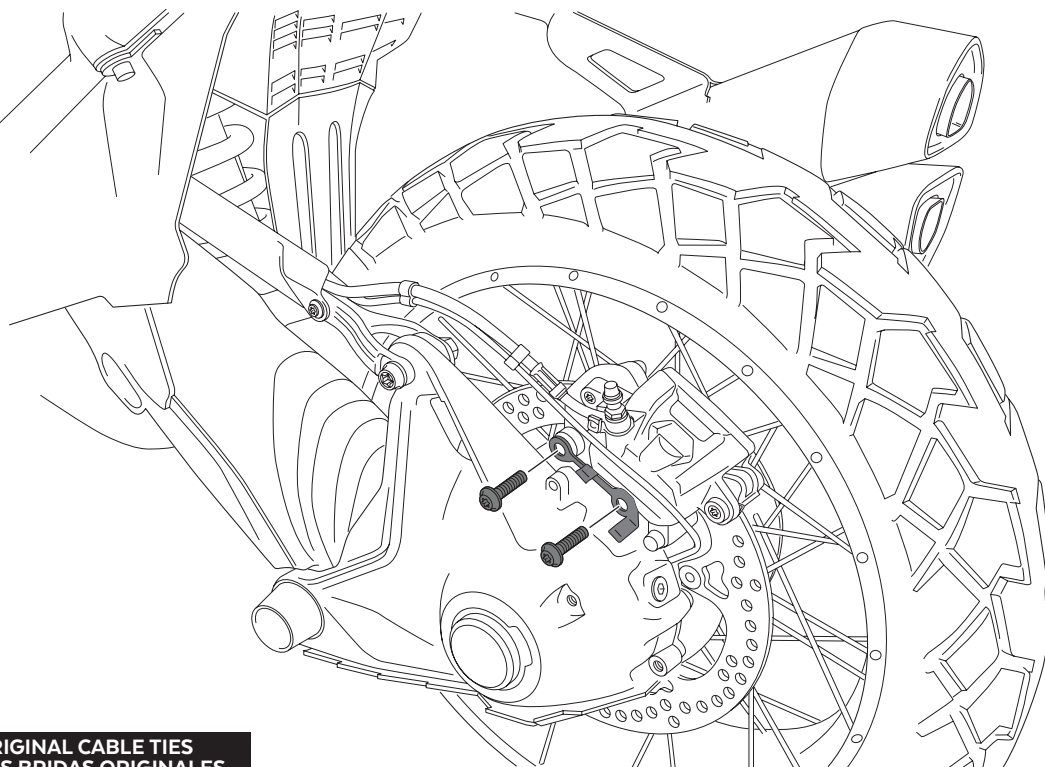


REMOVE ORIGINAL CABLE TIES  
RETIRAR LAS BRIDAS ORIGINALES

# BMW R1300GS '23- / R1300GS ADVENTURE '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**3**


ASSEMBLY  
MONTAJE

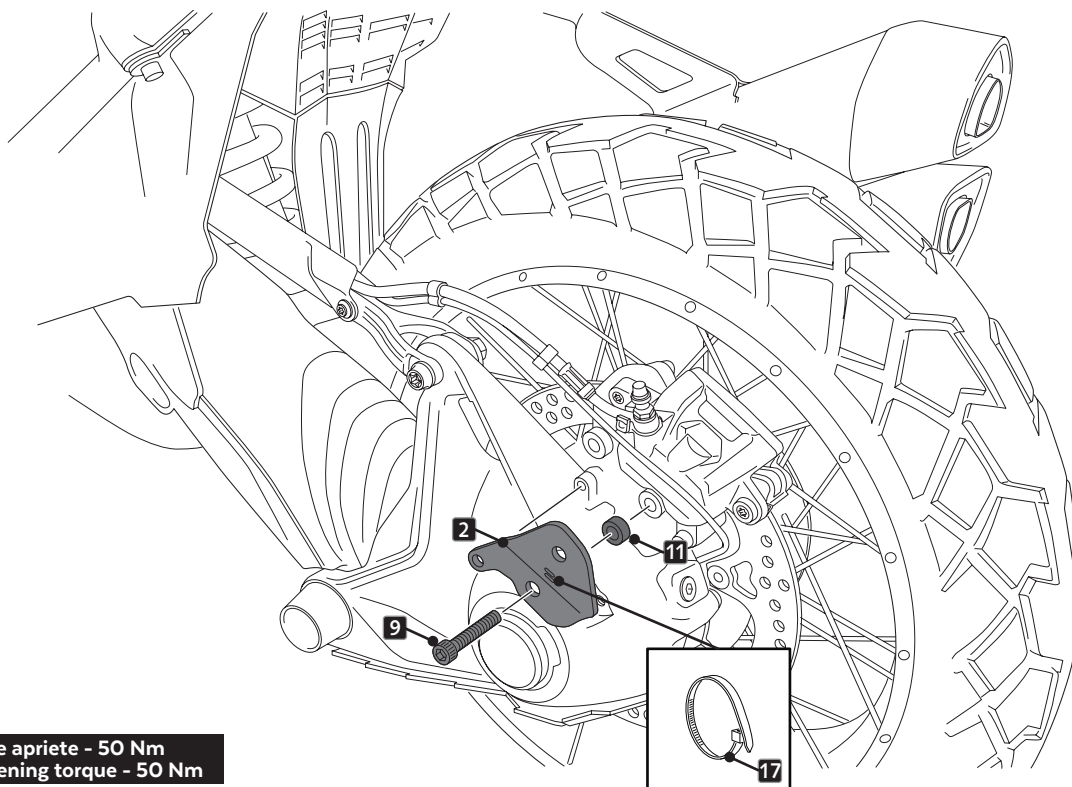

**9** Par de apriete - 50 Nm  
Tightening torque - 50 Nm

**4**

ASSEMBLY  
MONTAJE

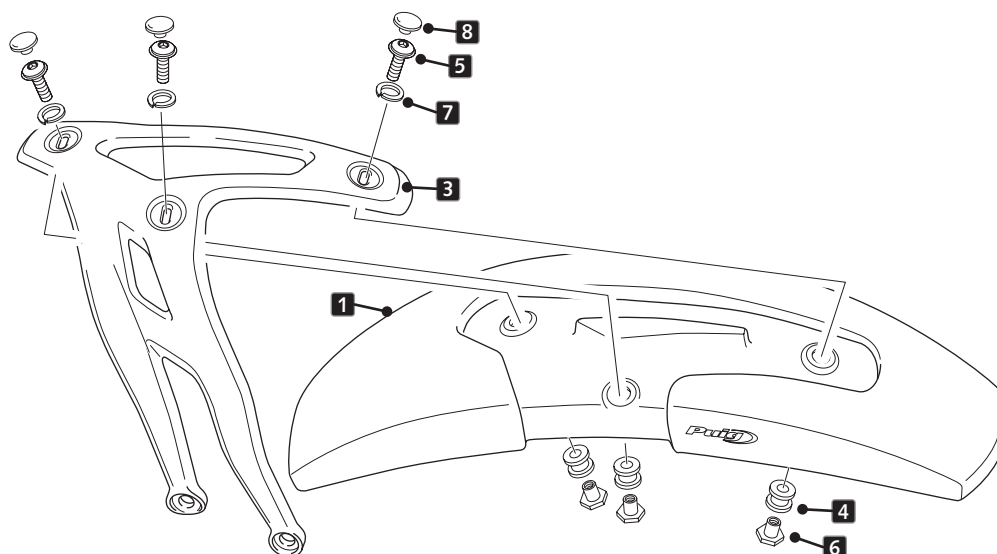


# BMW R1300GS '23- / R1300GS ADVENTURE '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**5A**

ASSEMBLY  
MONTAJE

OPTION A :  
PUIG REAR MUDGUARD **WITHOUT**  
ORIGINAL REAR MUDGUARD

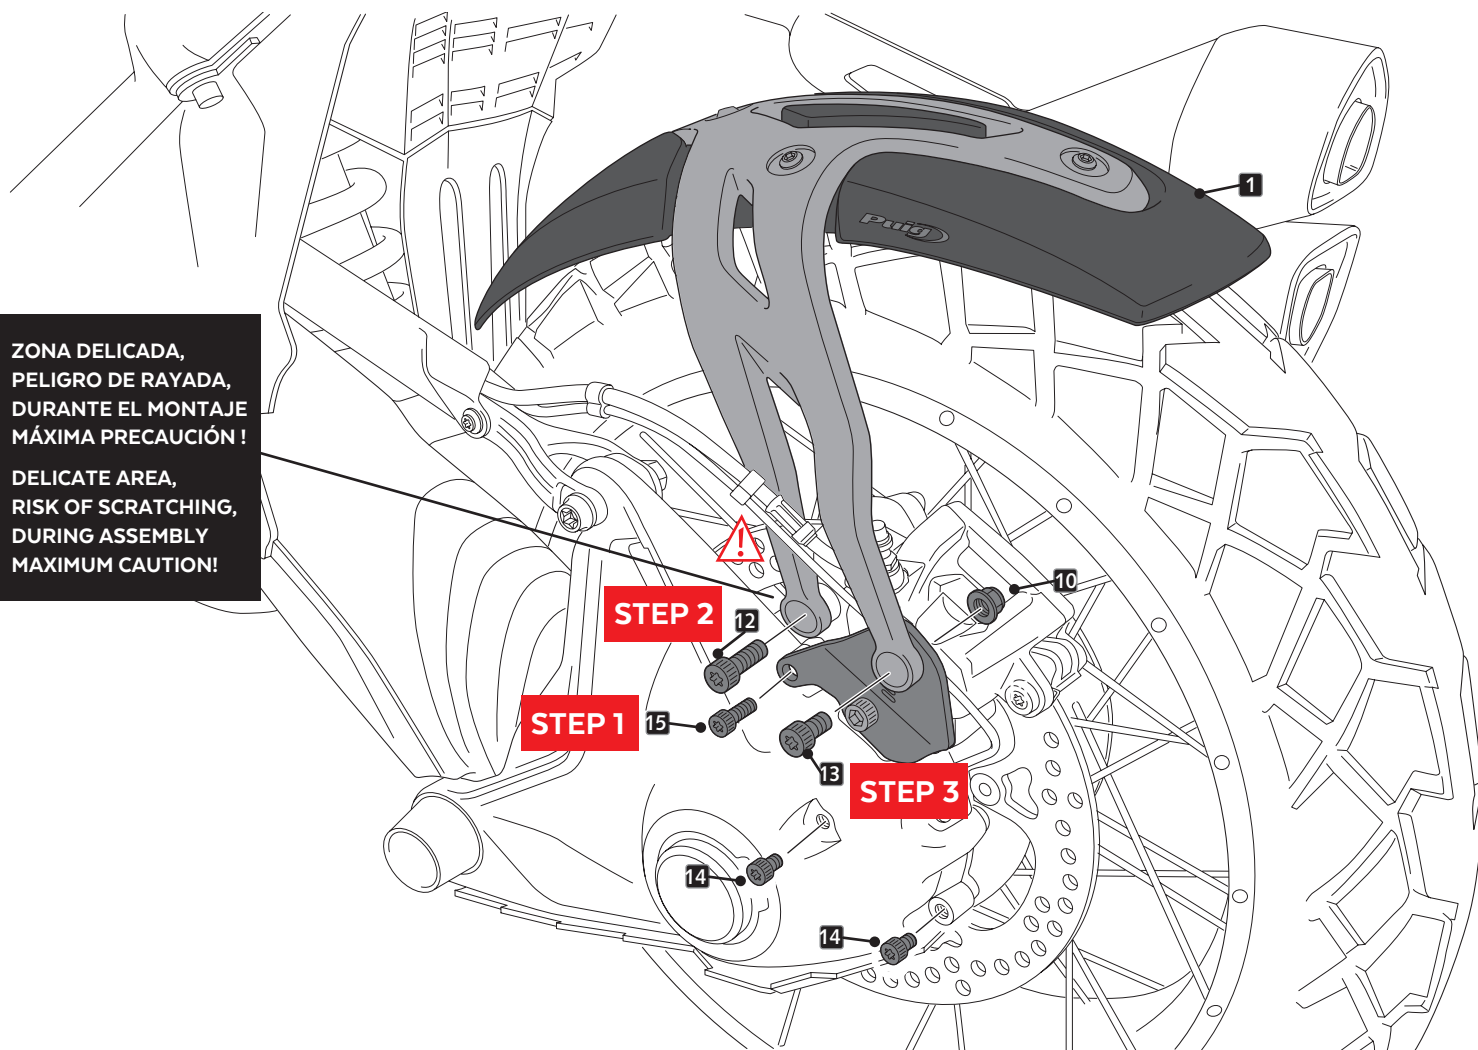

**5** Par de apriete - 3 Nm  
Tightening torque - 3 Nm

**12** Par de apriete - 50 Nm  
Tightening torque - 50 Nm


**13** Par de apriete - 50 Nm  
Tightening torque - 50 Nm

**14** Par de apriete - 8 Nm  
Tightening torque - 8 Nm

**15** Par de apriete - 8 Nm  
Tightening torque - 8 Nm

SE RECOMIENDA REALIZAR EL REAPIRIETE  
DE LA TORNILLERA CADA 1000 Km  
IT IS RECOMMENDED TO CHECK TIGHTENING  
OF THE BOLTS EVERY 1000 Km

**14** SE RECOMIENDA UTILIZAR LÍQUIDO FIJADOR DE ROSCAS.  
**15** IT IS RECOMMENDED TO USE THREAD LOCKING LIQUID

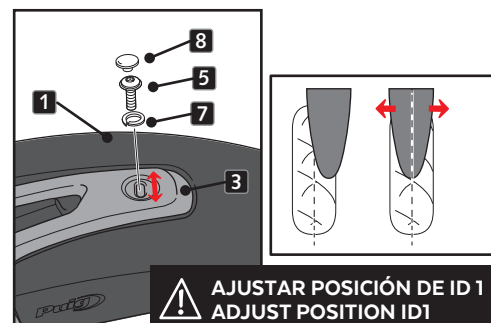

**AJUSTAR POSICIÓN DE ID 1  
ADJUST POSITION ID1**

# BMW R1300GS '23- / R1300GS ADVENTURE '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**5B**

ASSEMBLY  
MONTAJE

OPTION B :  
PUIG REAR MUDGUARD **WITH**  
ORIGINAL REAR MUDGUARD

ZONA DELICADA,  
PELIGRO DE RAYADA,  
DURANTE EL MONTAJE  
MÁXIMA PRECAUCIÓN !

DELICATE AREA,  
RISK OF SCRATCHING,  
DURING ASSEMBLY  
MAXIMUM CAUTION!

**STEP 2**

**STEP 1**

**STEP 3**

**A** PIEZA ORIGINAL  
ORIGINAL PART

**5** Par de apriete - 3 Nm  
Tightening torque - 3 Nm

**12** Par de apriete - 50 Nm  
Tightening torque - 50 Nm

**13** Par de apriete - 50 Nm  
Tightening torque - 50 Nm

**16** Par de apriete - 8 Nm  
Tightening torque - 8 Nm



**A** Par de apriete - 8 Nm  
Tightening torque - 8 Nm

SE RECOMIENDA REALIZAR EL REAPRIETE  
DE LA TORNILLERA CADA 1000 Km

IT IS RECOMMENDED TO CHECK TIGHTENING  
OF THE BOLTS EVERY 1000 Km



**A** SE RECOMIENDA UTILIZAR LÍQUIDO FIJADOR DE ROSCAS.  
**16** IT IS RECOMMENDED TO USE THREAD LOCKING LIQUID

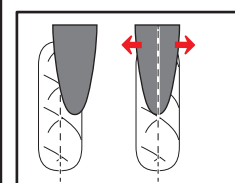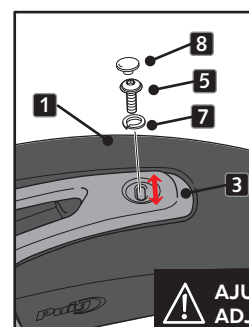

**AJUSTAR POSICIÓN DE ID 1  
ADJUST POSITION ID1**