

# HD SPORSTER RH1250 S' 22-

## M O U N T I N G I N S T R U C T I O N S

REF 21325

**SEMIFAIRING FURY SPORT MODEL  
BLACK**

REF 21587

**SEMIFAIRING FURY SPORT MODEL  
MATT BLACK**



ALLEN  
Nº 3

TORX  
T45


| ID | PIEZA/PART | DESCRIPCIÓN                       | DESCRIPTION                    | QTY | REF              |
|----|------------|-----------------------------------|--------------------------------|-----|------------------|
| 1  |            | Semicarenado                      | Semifairing                    | 1   | 10947N/JM3       |
| 2  |            | Cúpula sport                      | Sport screen                   | 1   | 10948W/H/N/FM3   |
| 3  |            | Soporte metálico derecho ( R )    | Right metal support ( R )      | 1   | SOPOR2P4-R21325  |
| 4  |            | Soporte metálico izquierdo ( L )  | Left metal support ( L )       | 1   | SOPOR2P4-L21325  |
| 5  |            | Casquillo Ø13xØ8,5 x15            | Ø13xØ8,5 x15 Arrowhead         | 4   | CASQUI-M---614   |
| 6  |            | Tornillo M8x45 DIN912 ( TX45 )    | M8x45 DIN912 (TX45) screw      | 4   | TORNI-D912--906  |
| 7  |            | Silentblock M5                    | M5 silentblock                 | 2   | SILENTBTM5-046/1 |
| 8  |            | Arandela de goma Ø4,5 x Ø11 x 2mm | Ø4,5 x Ø11 x 2mm Rubber washer | 3   | ARAND-EPDM--722  |
| 9  |            | Tuerca autoblocante M5 DIN982     | M5 DIN982 Lock nut             | 1   | TUERCA-D982-746  |
| 10 |            | Silentblock Ø12xØ6x9              | Ø12xØ6x9 Silentblock           | 2   | AROPASACABLES-3  |
| 11 |            | Casquillo con valona Ø12xØ6,8x7,3 | Ø12xØ6,8x7,3 Bush with flange  | 2   | CASQUI-1A---750  |
| 12 |            | Tornillo Allen M5x16 Ø11 ISO 7380 | M5x16 Ø11 ISO 7380 Allen screw | 3   | TORNI-I7380-493  |
| 13 |            | Tornillo Allen M5x20 Ø11 ISO 7380 | M5x20 Ø11 ISO 7380 Allen screw | 2   | TORNIAI7380-387  |
| 14 |            | Arandela de nylon M5              | M5 nylon washer                | 4   | ARNV00000000245  |
| 15 |            | Tapón tornillo M5 ISO 7380        | M5 ISO 7380 screw cap          | 5   | TAPON-----85     |

# HD SPORSTER RH1250 S' 22-

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

**DISASSEMBLY  
DESMONTAJE**

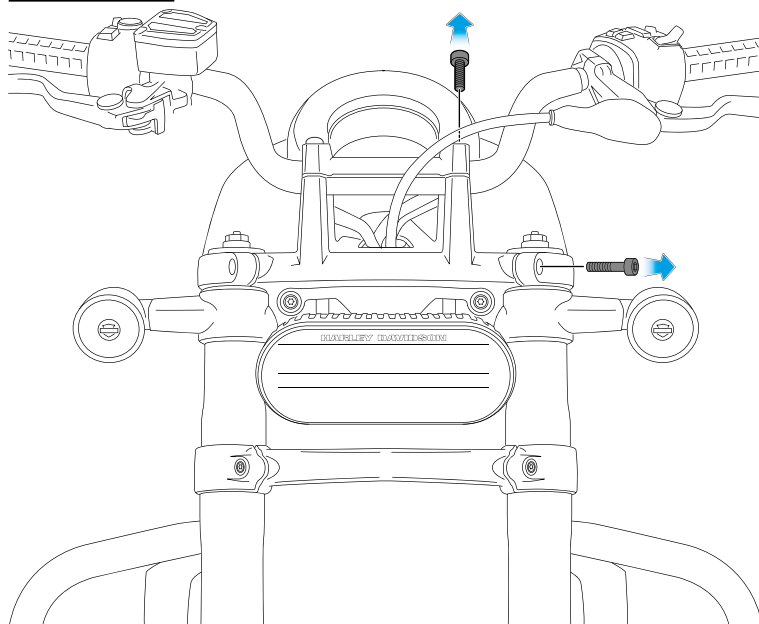


**2**

**ASSEMBLY  
MONTAJE**

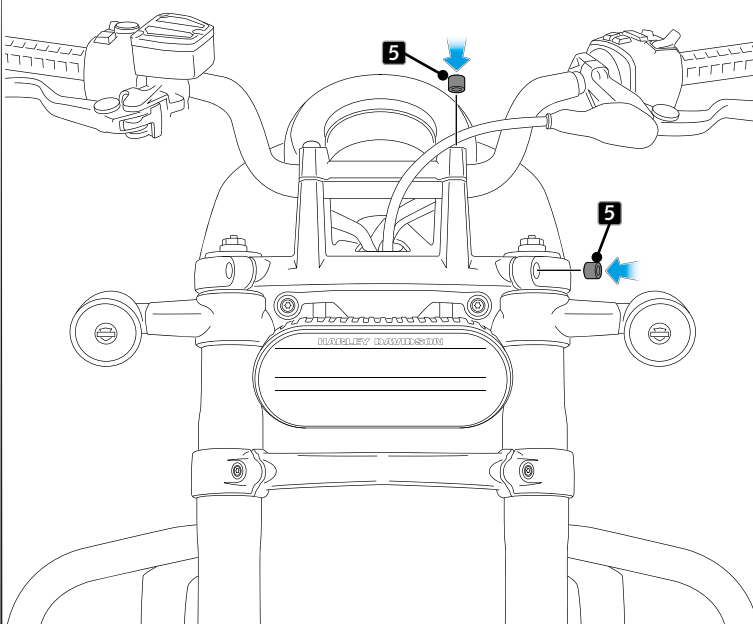

**3**

**ASSEMBLY  
MONTAJE**

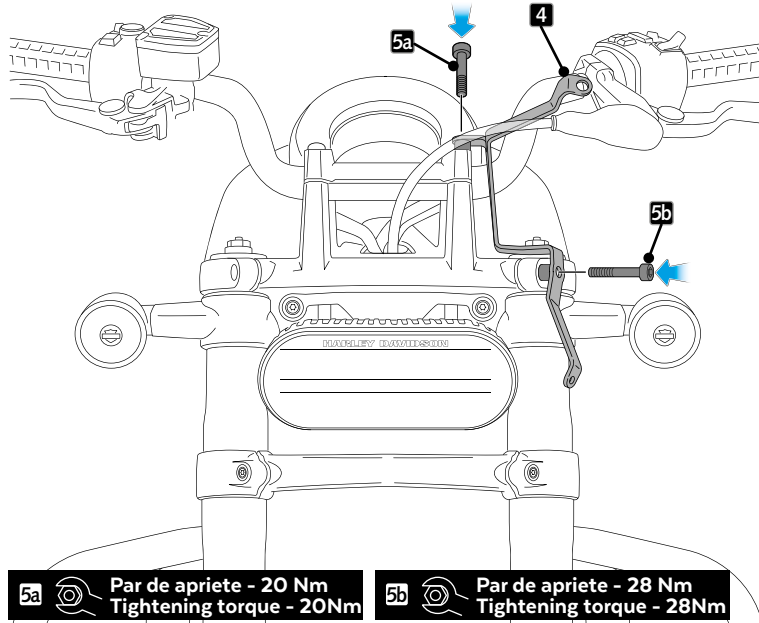


**5a** Par de apriete - 20 Nm  
Tightening torque - 20Nm

**5b** Par de apriete - 28 Nm  
Tightening torque - 28Nm

**4**

**DISASSEMBLY  
DESMONTAJE**

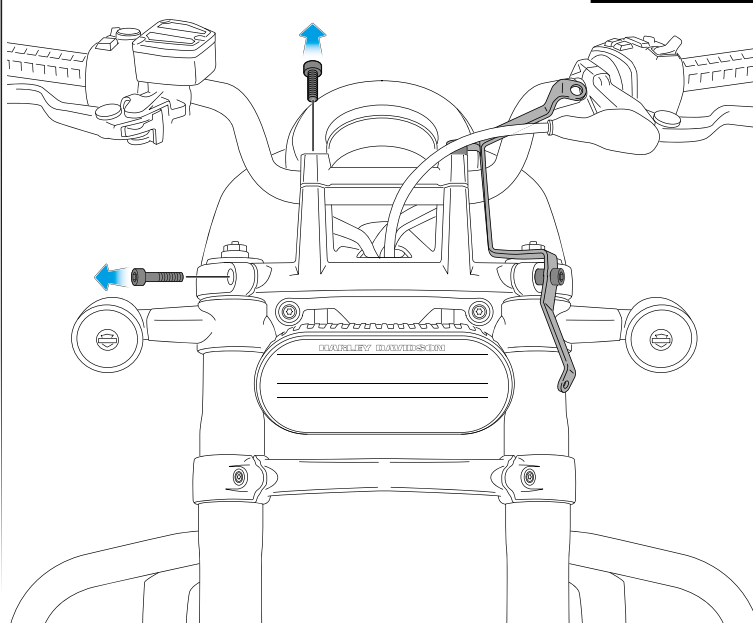


# HD SPORSTER RH1250 S' 22-

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**5**

ASSEMBLY  
MONTAJE

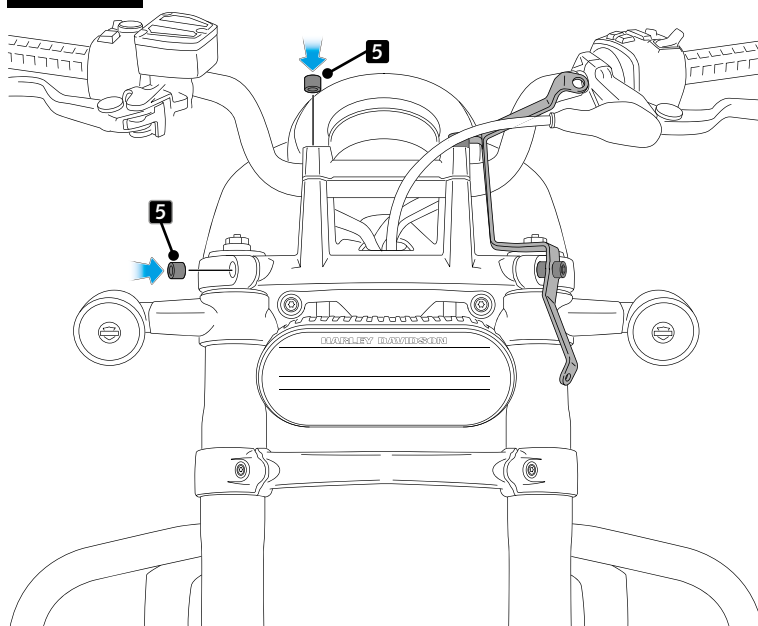


**6**

ASSEMBLY  
MONTAJE

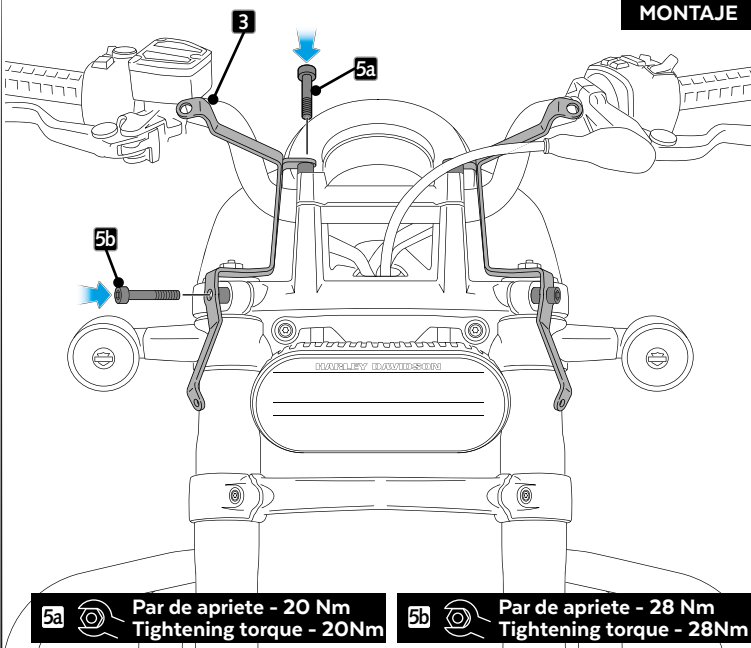


**7**

ASSEMBLY  
MONTAJE

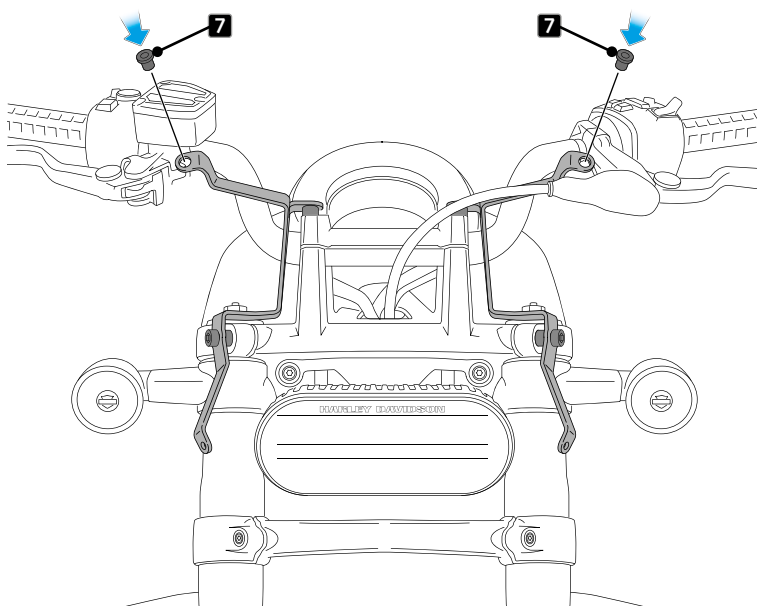

**8**

ASSEMBLY  
MONTAJE

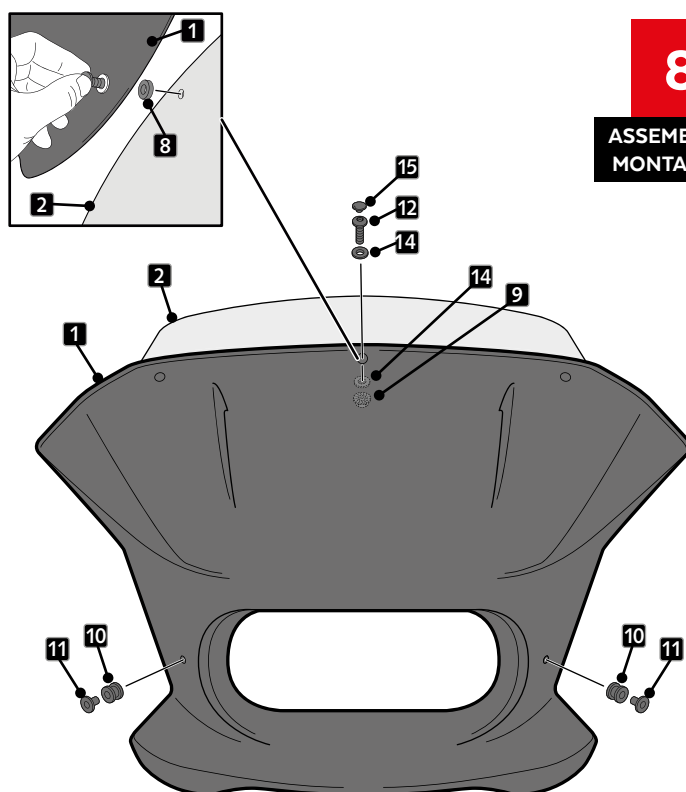


# HD SPORSTER RH1250 S' 22-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

9

ASSEMBLY  
MONTAJE

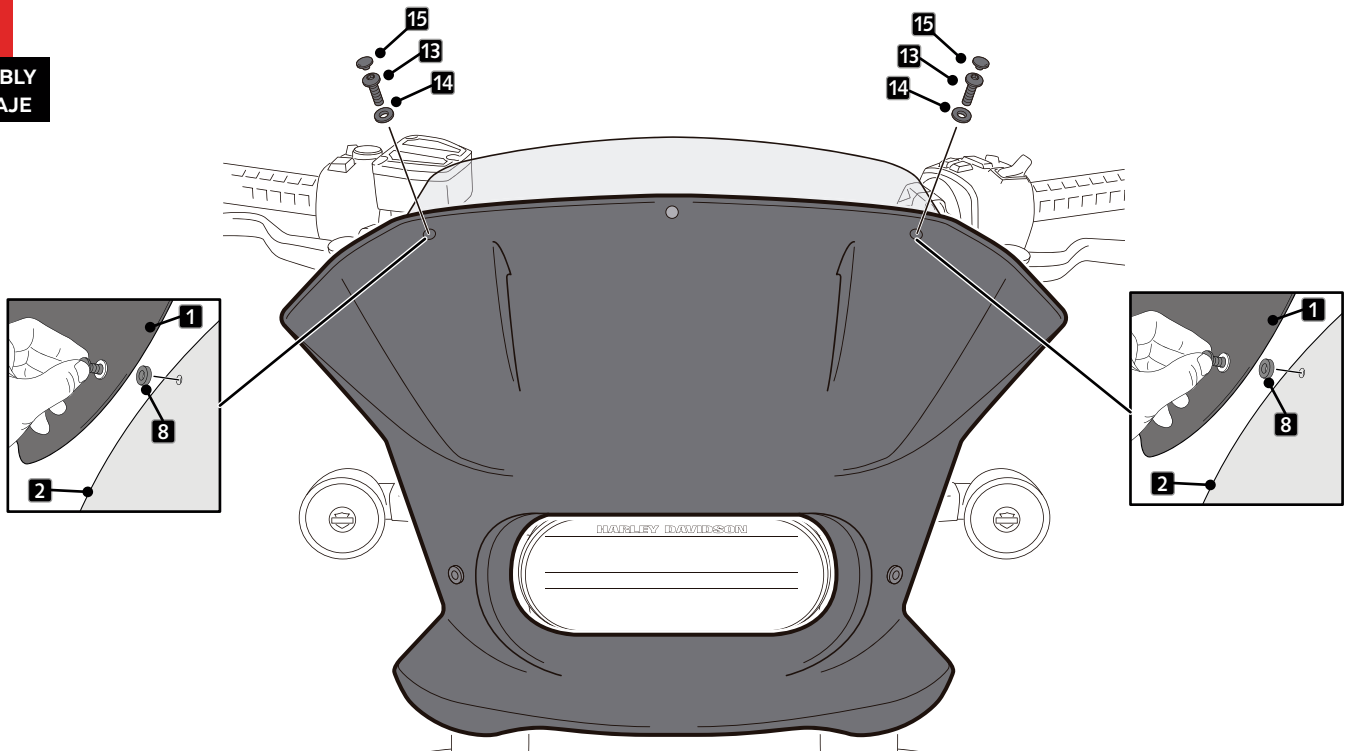

10

ASSEMBLY  
MONTAJE

