



MODEL DUCATI MULTISTRADA 1200
DUCATI MULTISTRADA 1260

YEAR 2015 - 2017
2018 -->

LINE SLIP ON

MUFFLER DELTA RACE

SCHEMATIC

ELENCO PARTI / PARTS LIST

#	QTÀ / QTY	DESCRIZIONE / DESCRIPTION	CODICE / CODE
1	1	DB killer / DB killer	50.DK.123.0
2	1	Silenziatore / Muffler	DELTA RACE
3	1	Staffa / Bracket	50.SS.1086.0
4	2	Rondella di sicurezza / Safety washer	50.73.604.1
5	2	Vite M8 x 16 / Screw M8 x 16	50.73.098.1
6	1	Vite M8x25 / Screw M8x25	50.73.064.1
7	1	Rondella in alluminio nera / Black aluminium washer	50.73.221.1
8	1	Dado M8 flangiato / Flanged nut M8	50.73.393.1
9	1	Staffa / Bracket	50.SS.952.0
10	1	Vite M6 x 20 / Screw M6 x 20	50.73.422.1
11	2	Rondella M6 / Washer M6	50.73.187.1
12	2	Dado M6 autobloccante / M6 locknut	50.73.112.1
13	1	Fascetta Ø 56/59 mm / Pipe clamp Ø 56/59 mm	50.FA.009.1
14	1	Vite M6x35 / Screw M6x35	50.73.228.1
15	1	Rondella alluminio / Aluminium washer	50.73.349.1
16	1	Morsetti in alluminio / Aluminium clamps	50.73.138.1
17	1	Molla / Spring	50.73.142.1
18	2	Grani M3 / Grub screws M3	50.73.140.1
19	1	Fascetta passacavi / fairlead clamp	50.73.796.0
20	1	Tubo elimina Kat / Pipe no Kat	9773D033C1A
21	1	Tubo elimina Kat / Pipe no Kat	9773D033C1B
22	1	Tubo elimina Kat / Pipe no Kat	9773D033C1C
23	1	Tubo elimina Kat / Pipe no Kat	9773D033C1D
24	1	Cover in carbonio / Carbon cover	50.CR.030.1
25	3	Fascetta con bussola / Pipe clamp with bush	50.73.795.0
26	3	Vite M5 x 8 / Screw M5 x 8	50.73.233.1
27	3	Rondella M5 / Washer M5	50.73.351.1
28	5	Molla lunga / Long spring	50.71.080.1
29	5	Tubo in gomma per molla / Rubber pipe for spring	50.73.210.1

NOTE:

Assemblaggio cavo della valvola a farfalla:

1) Estrarre il cavo della valvola a farfalla dalla sua sede.

2) Prendere la molla e inserire le prime spire sul cavo d'acciaio di comando della valvola a farfalla.

3) Ruotando la molla , essa si avvolgerà' completamente al cavo d'acciaio.

4) Quando la molla e' ben inserita sul cavo d'acciaio montare il distanziale per fine corsa valvola e serrare i grani.

5) Fissare il cavo sulla fascetta 50.73.796.0.

Throttle cable assembly:


1) Remove the throttle cable from its seat.

2) Take the spring and enter the first coil on the steel cable throttle valve control.

3) Turning the spring, it will completely wrap the steel cable.

4) When the spring is correctly mounted on the steel cable, assemble the aluminium clamp and tighten the grub screws.

5) Secure the cable with the 50.73.796.0 clamp.

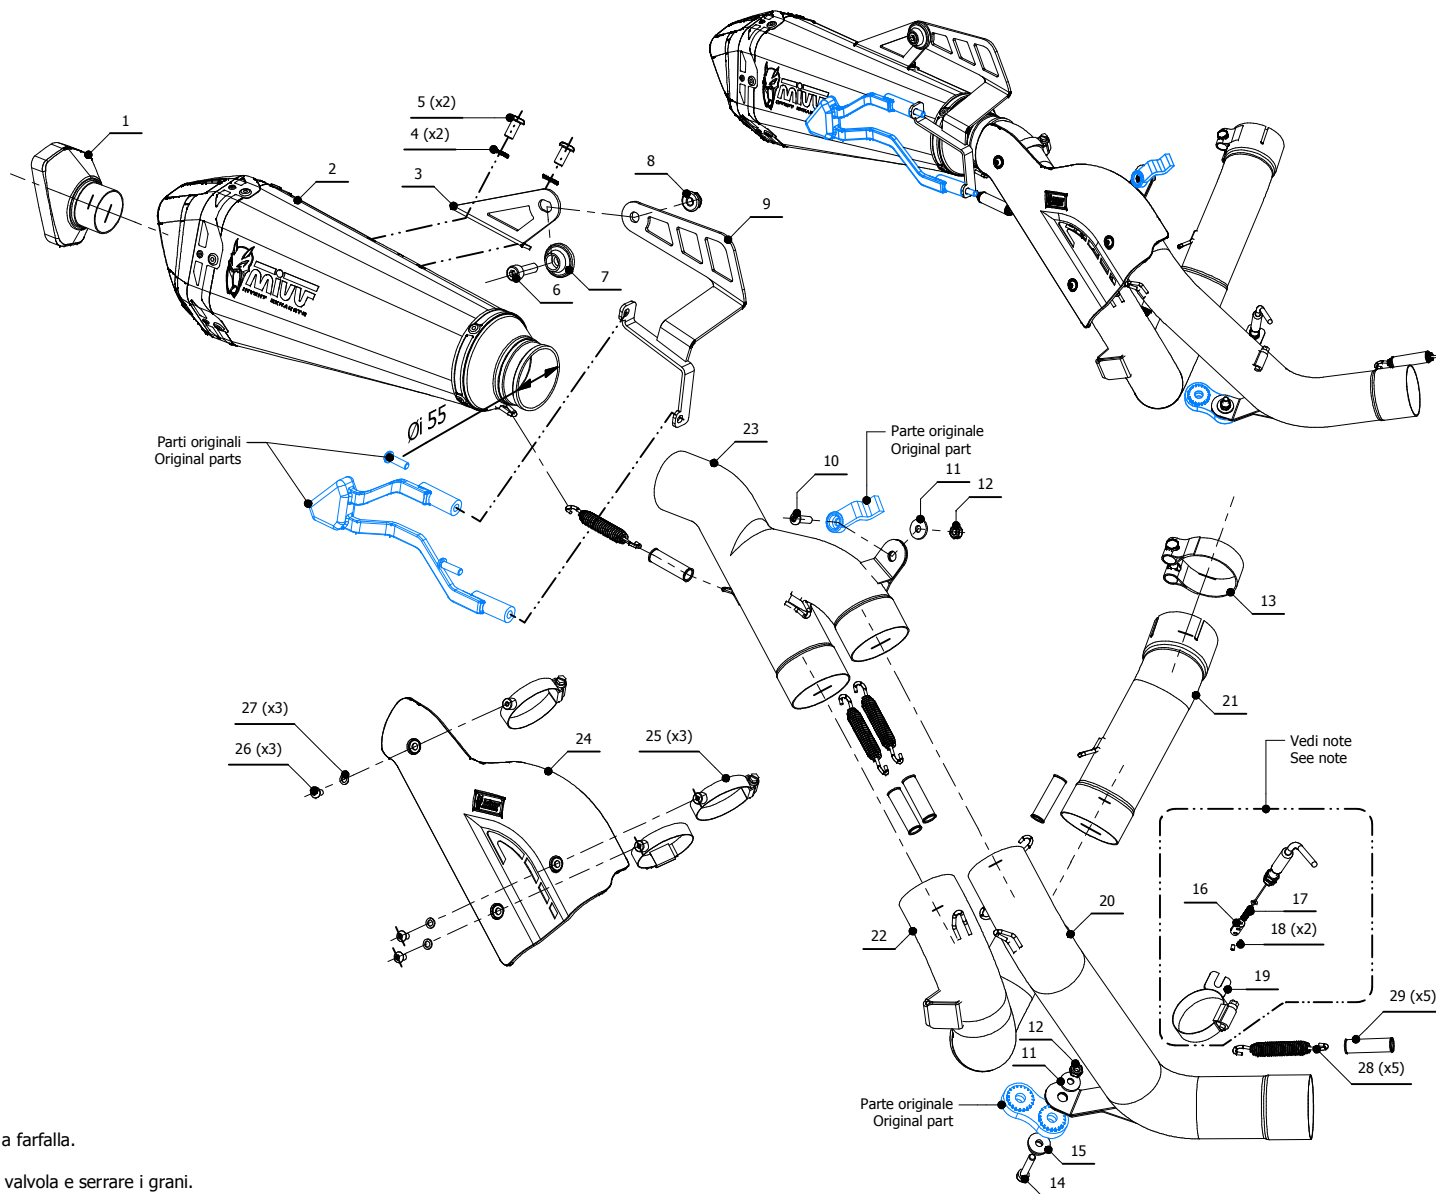

APPLICAZIONI / APPLICATIONS

CODICE / CODE	SILENZIATORE / MUFFLER	TUBO / PIPE
D.033.SDRX	INOX (COPPA CARBONIO) / ST. STEEL (CARBON CAP)	INOX / ST. STEEL
D.033.SDRB	STEEL BLACK	