


SHAD

KAWASAKI Z900 '17

K0Z997IF

3P
SYSTEM

DESIGNED IN
BARCELONA



1 262150 x1



2 304071 x2
M6 x 50
Din 912



3 303017 x6
Ø6




4 260523 x2
Ø16 Ø9 x25



5 304221 x2
M6 x 45
Din 7380



6 260596 x2
Ø16 Ø9 x20

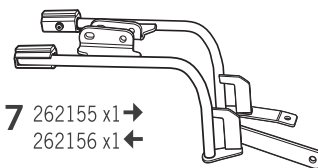

7 262155 x1 →
262156 x1 ←



8 303045 x8
Ø8



9 304053 x4
M8 x 30
Din 7380



10 302024 x4
M8



11 304283 x1
M10 x 70
Din 912



12 303025 x5
Ø10



13 302032 x1
M10



14 304177 x1
M6 x 55
Din 912



15 302021 x1
M6

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.


(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the side bag holder system or the 3P System after the top master.

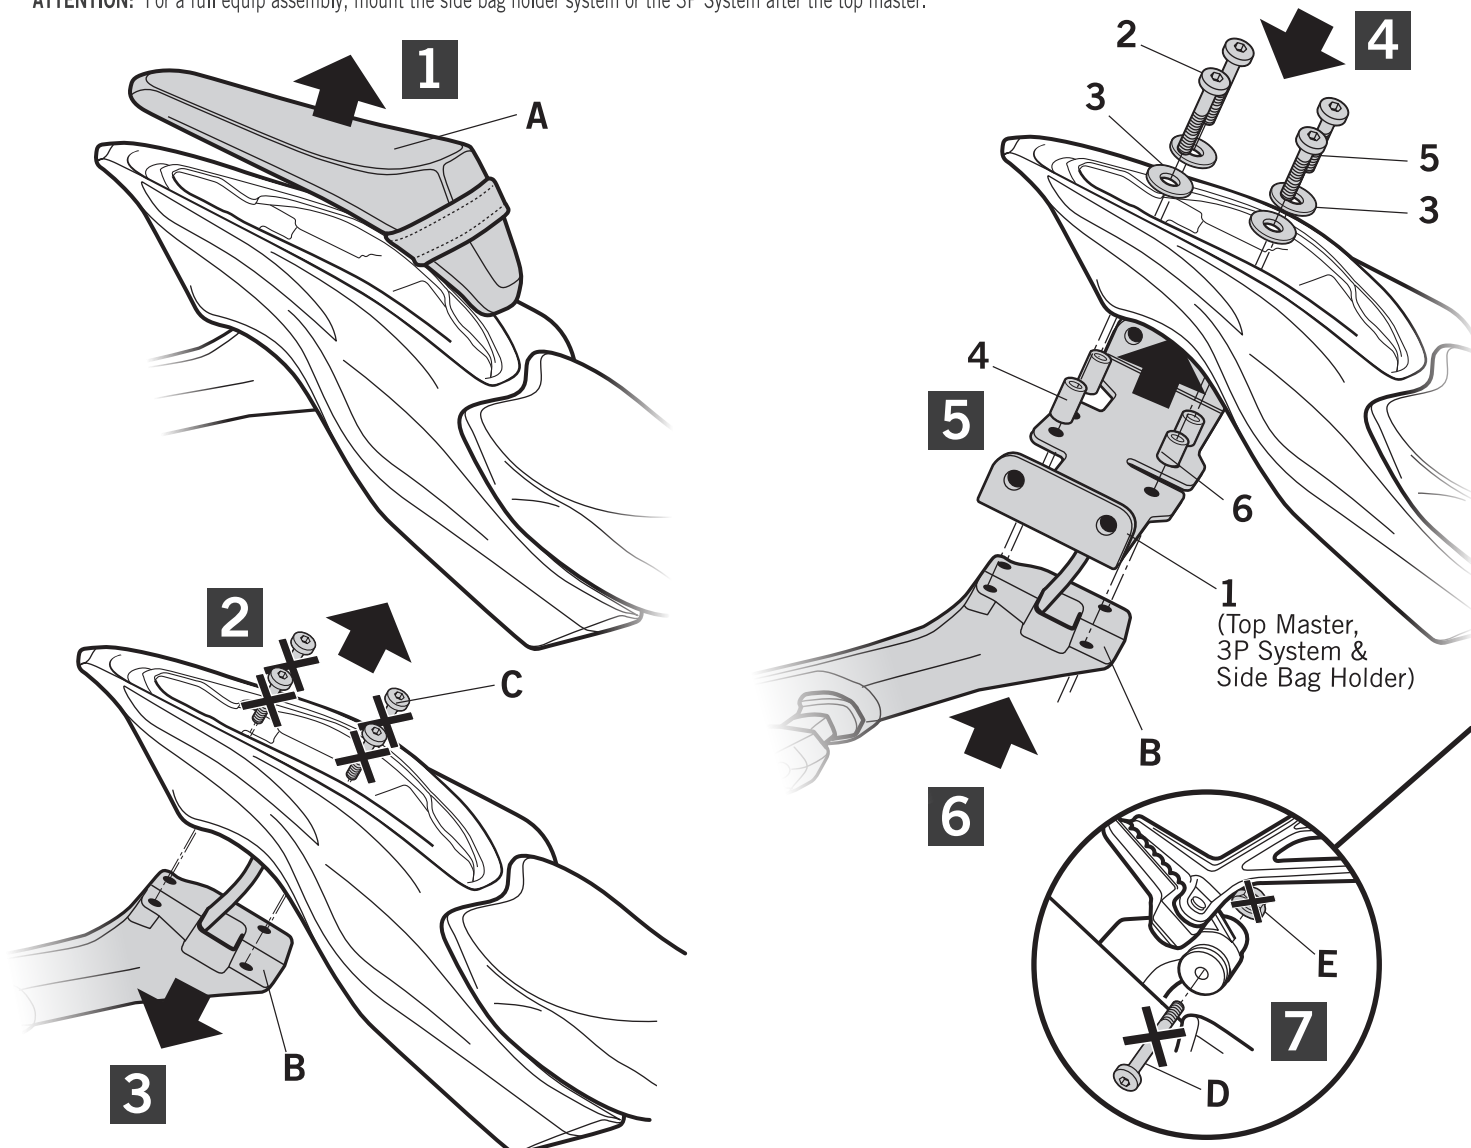

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

