


SHAD

YAMAHA MT09 TRACER '15

Y0MT95iF

3P
SYSTEM

DESIGNED IN
BARCELONA

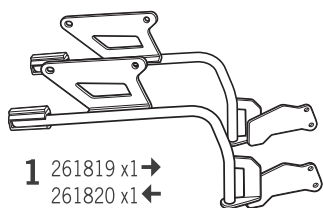

1 261819 x1 →
261820 x1 ←



2 303045 x4
Ø8



3 303017 x4
Ø6



4 304052 x4
M6 x 20 Din 7380



5 304039 x4
M8 x 40 Din 7380



6 261121 x4
Ø20 Ø11 x 18

! WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.


F Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the top master before the 3P System.

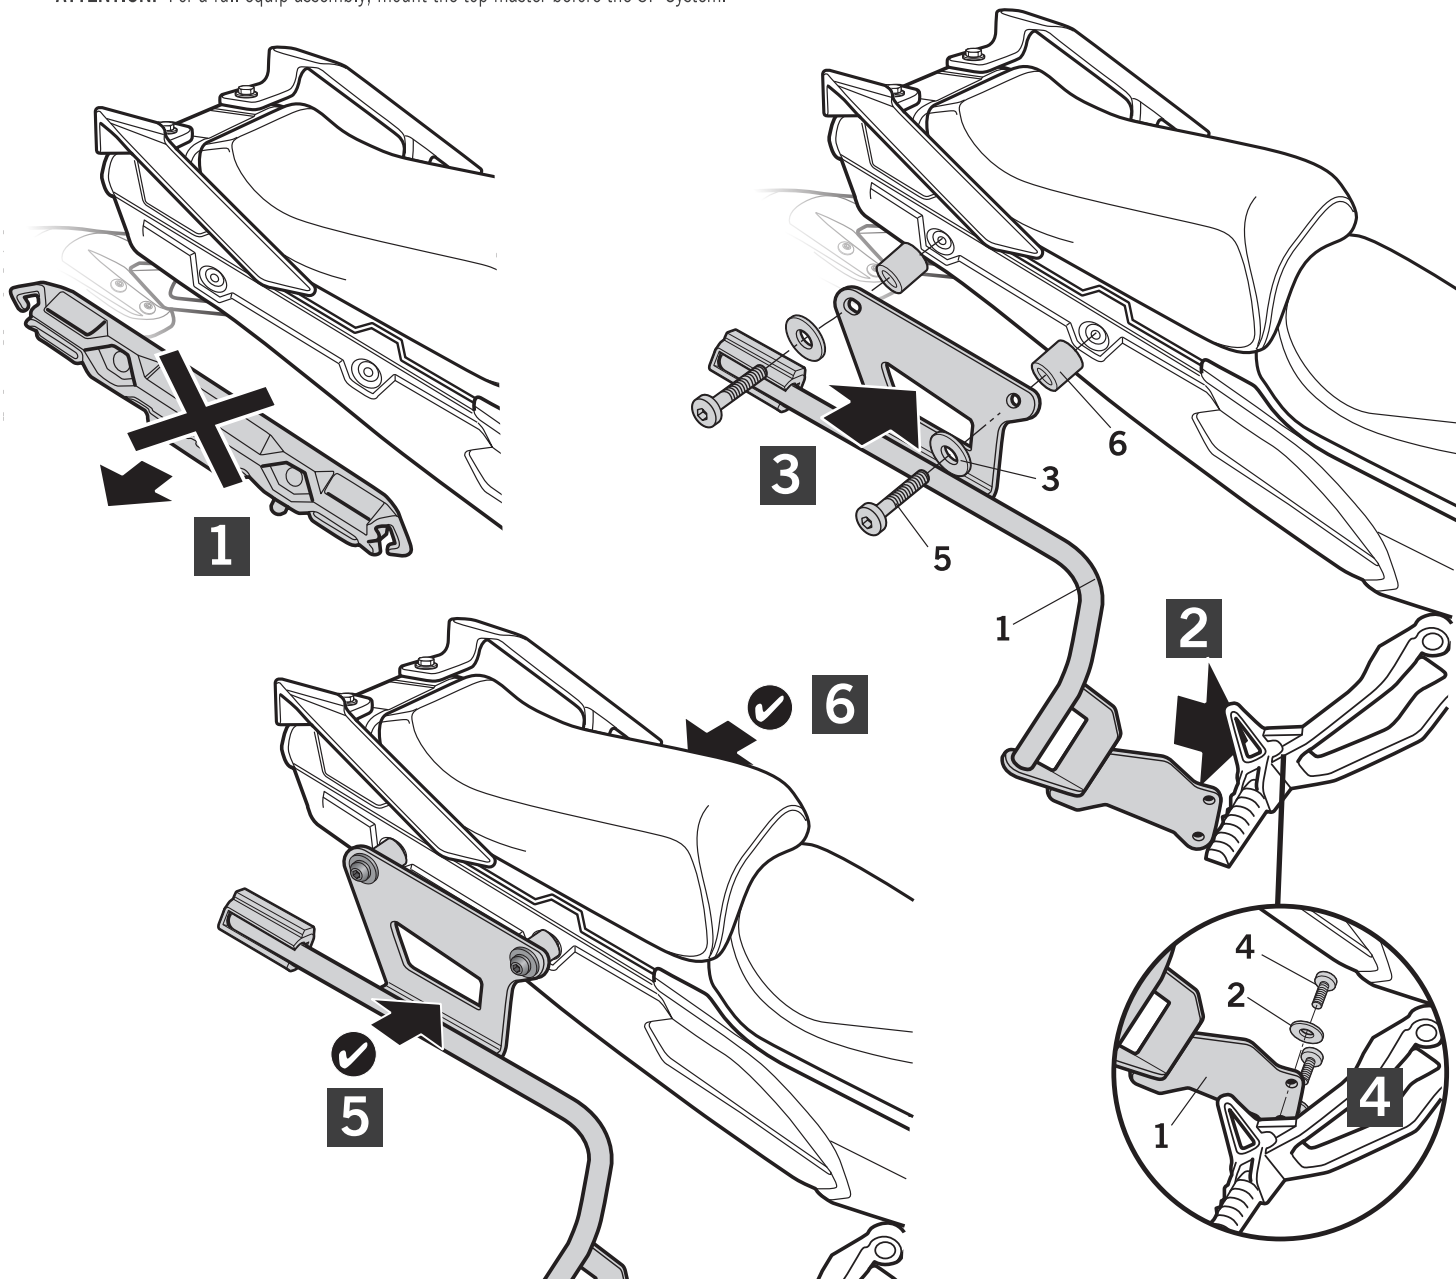

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

TOP MASTER
+
3P SYSTEM

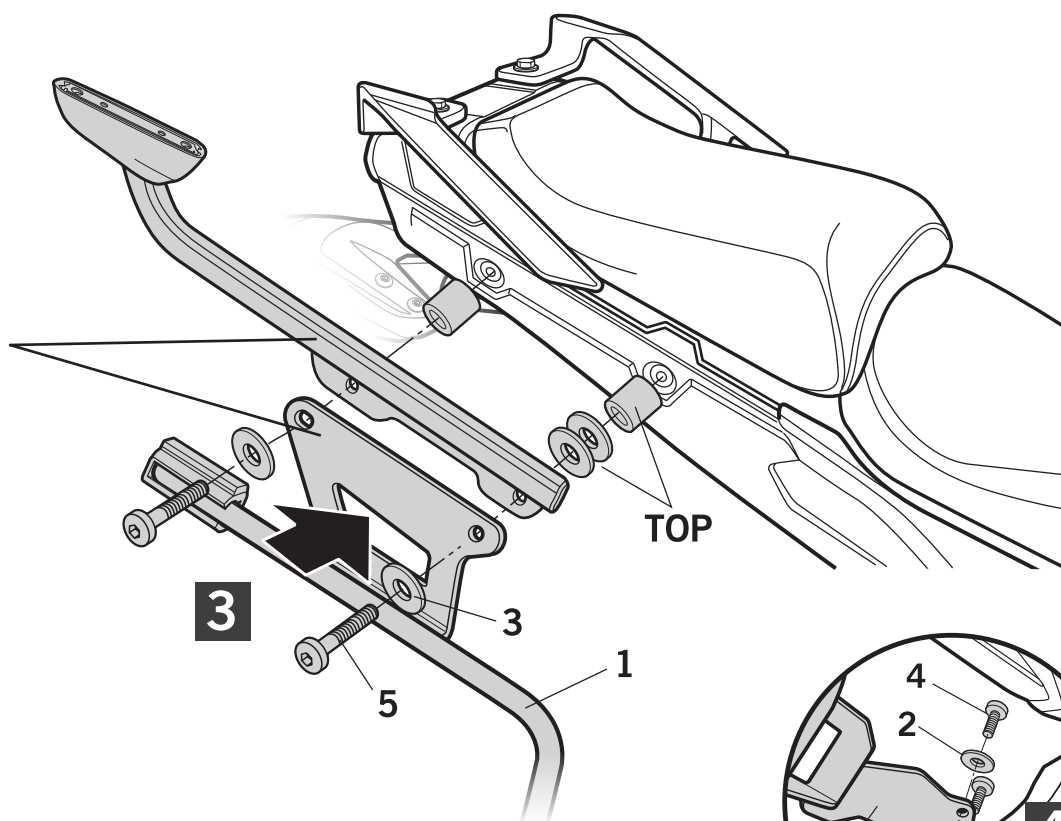

TOP MASTER
+
3P SYSTEM

