


SHAD

KAWASAKI Z650 '17

K0Z667IF

3P
SYSTEM

DESIGNED IN
BARCELONA

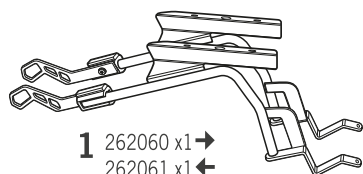

1 262060 x1 →
262061 x1 ←



2 260523 x2
Ø16 Ø9 x 25



3 260900 x2
Ø16 Ø9 x 36



4 303045 x4
Ø8



5 304169 x2
M8 x 50 DIN 7380



6 304170 x2
M8 x 60 DIN 7380



7 304178 x2
M6 x 60 DIN 912



8 302021 x2
M6



9 303017 x6
Ø6



10 260648 x4
Ø16 Ø9 x 5



11 260919 x4



12 260917 x2



13 260695 x4

WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.


(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the Top master later the 3P system.

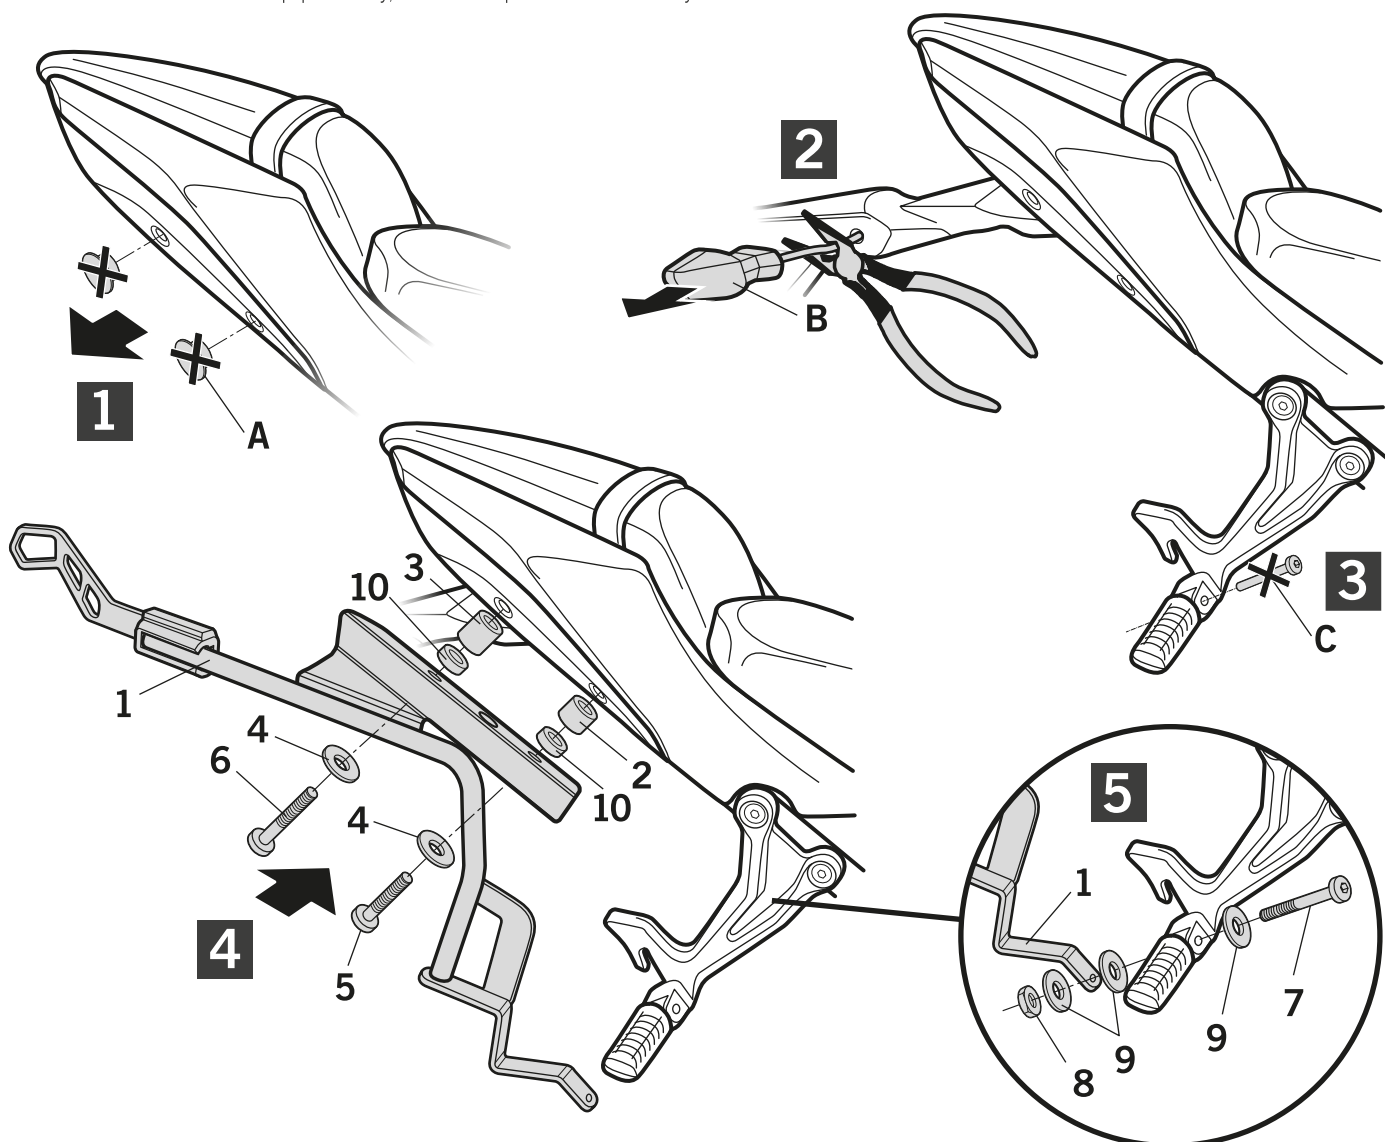

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

