


SHAD

KAWASAKI Z900 RS '18

K0ZR98IF

3P
SYSTEM

DESIGNED IN
BARCELONA

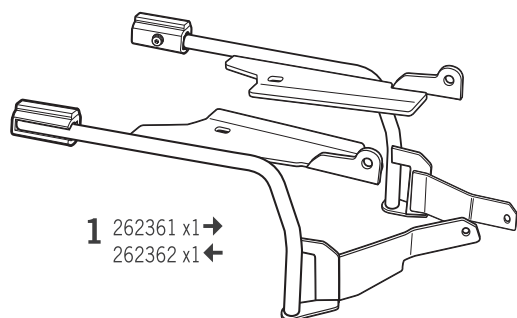

1 262361 x1 →
262362 x1 ←

2 260564 x2
Ø16 Ø9 x33

3 303045 x4
Ø8

4 304170 x2
M8 x 60 Din 7380

5 304028 x2
M8 x 25 Din 7380

6 260648 x2
Ø16 Ø9 x5

7 304039 x4
M8 x 40 Din 7380

8 303020 x4
Ø8

9 260213 x2
Ø16 Ø9 x12

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.


(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)


Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the 3P System before the top master.

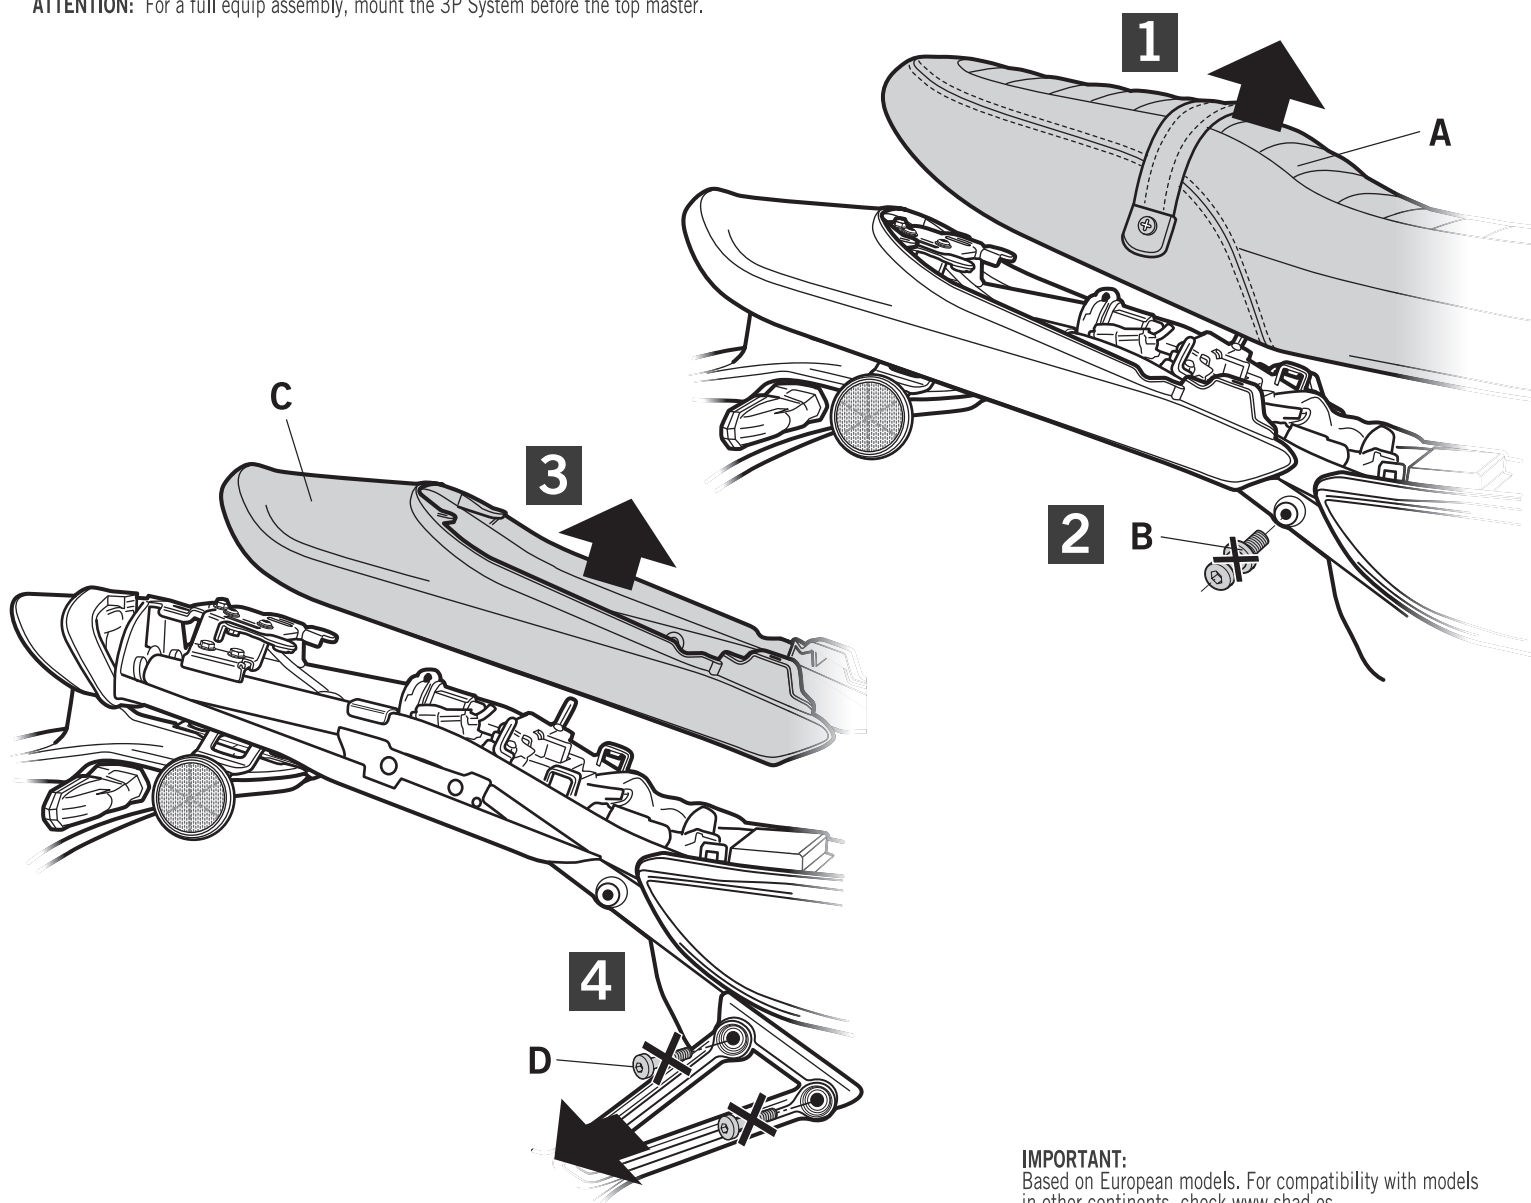

IMPORTANT:

Based on European models. For compatibility with models in other continents, check www.shad.es

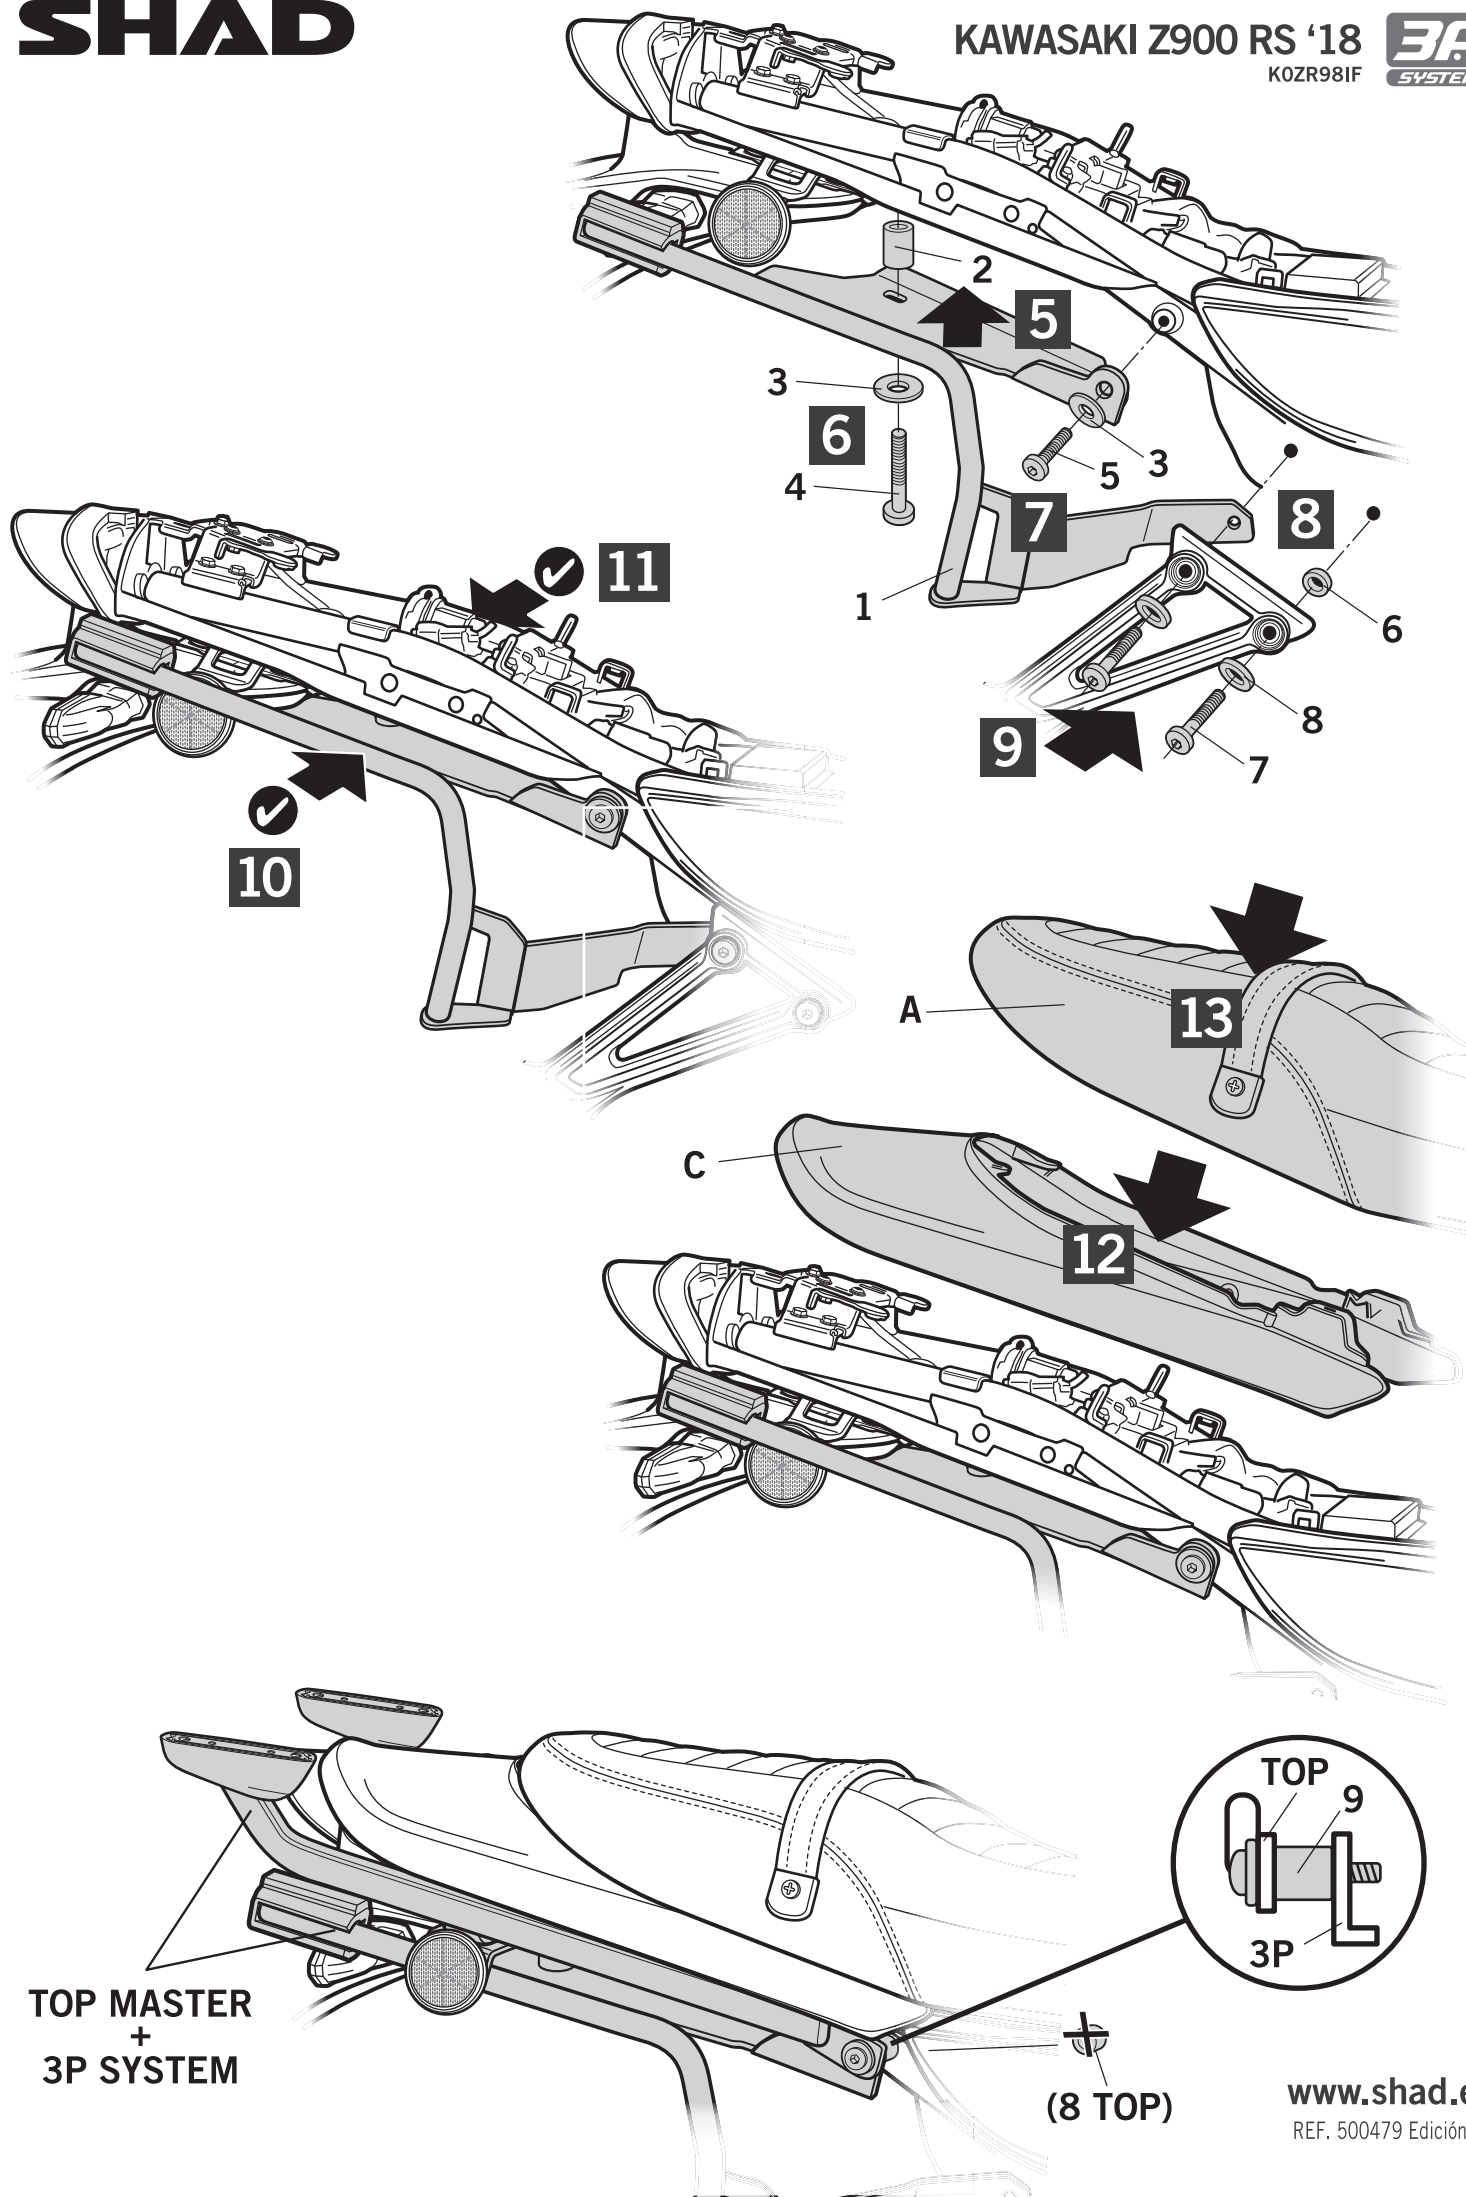

TOP MASTER
+
3P SYSTEM

(8 TOP)