


SHAD

DUCATI MONSTER 1200 / 797 '16-'19 SUPERSPORT 937 '16-'19 SIDE BAG HOLDER DOMN17SE



1 262198 x1




2 261029 x2
Ø20 Ø10 x 15



3 303045 x10
Ø8



4 304169 x2
M8 x 50 Din 7380

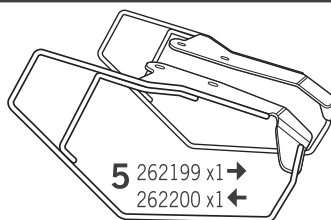

5 262199 x1 →
262200 x1 ←



6 304028 x4
M8 x 25 Din 7380



7 302024 x4
M8

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

ATTENTION: For a full equip assembly, mount the Top Master system before the Side Bag Holder.

