


# SHAD

## BMW F 850GS / 750GS '18

W0FS88IF




1 262335 x2

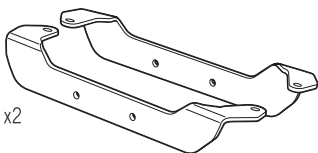


2 260648 x4  
Ø16 Ø9 x 5



3 262336 x1 →  
262337 x1 ←

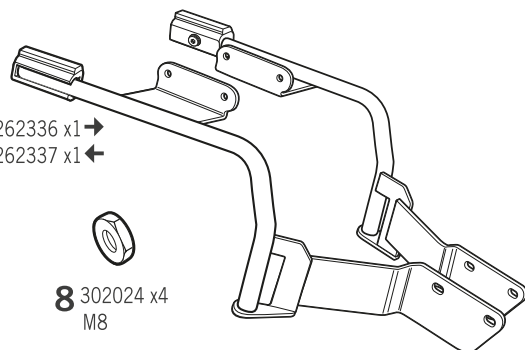

4 304169 x2  
M8 x 50 DIN 7380



5 303045 x12  
Ø8



6 304039 x6  
M8 x 40 DIN 7380



7 304028 x4  
M8 x 25 DIN 7380



8 302024 x4  
M8



### ! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)



Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

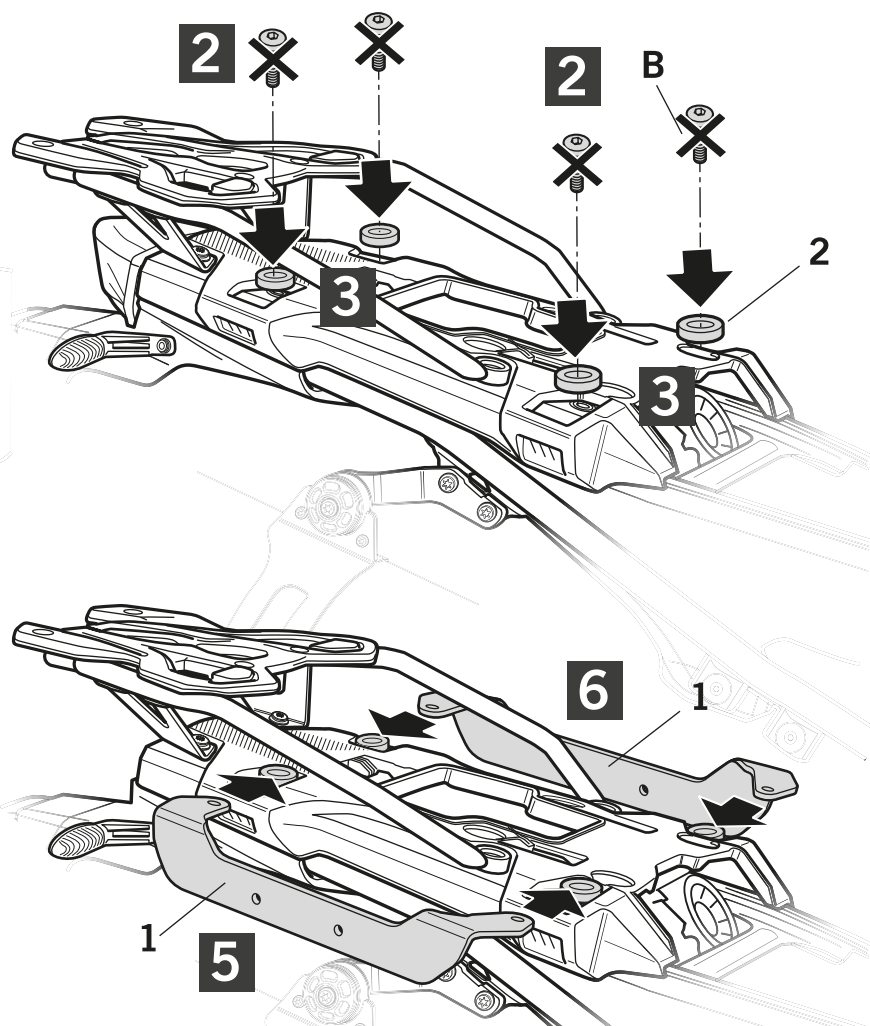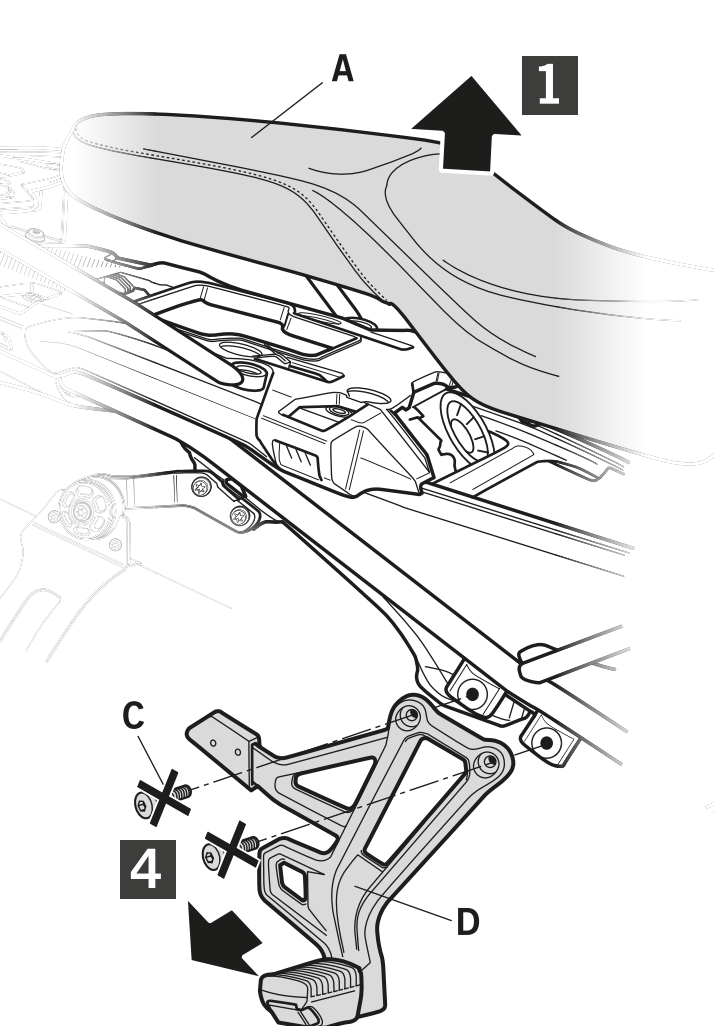

IMPORTANT: Based on European models. For compatibility with models in other continents, check [www.shad.es](http://www.shad.es)

