


# SHAD

## HONDA CB 650 F '14

### KIT TOP HOCF64ST



1 261719 x1 →  
261720 x1 ←

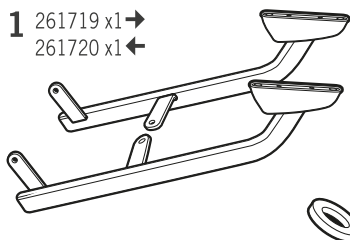

2 260760 x2  
Ø20 Ø11 x 16



3 303025 x2  
Ø10



4 304209 x2  
M10 x 45



5 304036 x2  
M8 x 45 Din 7380



6 303020 x2  
Ø8



7 260417 x2  
Ø16 Ø9 x 16



8 303018 x4  
Ø8



9 304081 x4  
M8 x 20 Din 7380



### ! WARNING!

**(GB)** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.



**(E)** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

**(D)** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

**(I)** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

**(F)** Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

**ATTENTION:** For a full equip assembly, mount the 3p system before the top master.

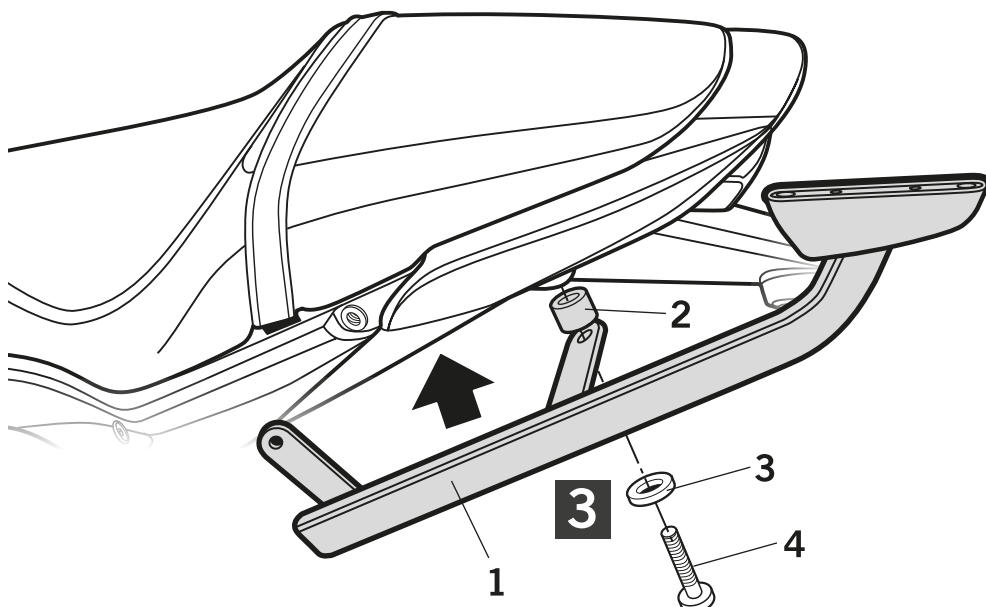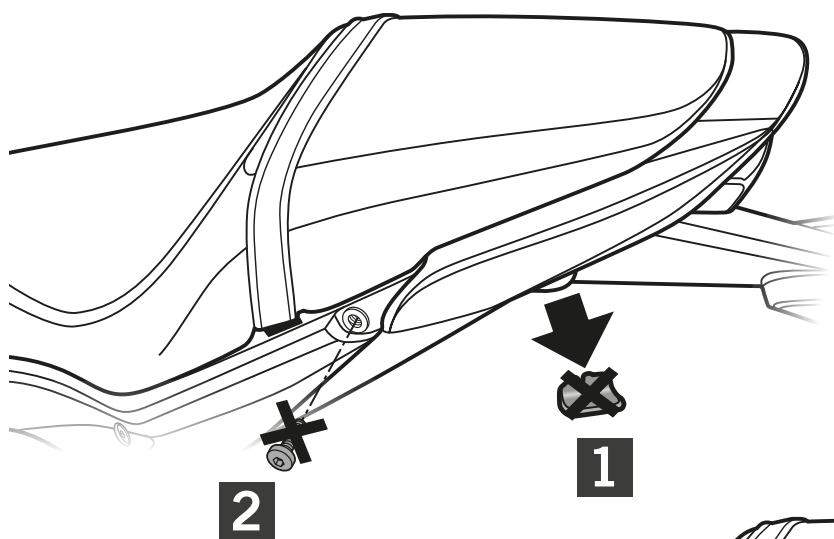

**IMPORTANT:** Based on European models. For compatibility with models in other continents, check [www.shad.es](http://www.shad.es)

