

SHAD


YAMAHA T-MAX 500 '08

KIT RESPALDO YOTM52RV



1 261121 x1
Ø20 Ø11 x 18

2 261788 x1

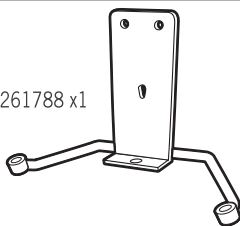


3 304258 x2
M8 x 35 Din 933



4 303020 x3
Ø8



5 304039 x1
M8 x 40 Din 7380

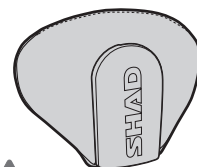

NOT INCLUDED



WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

