



SHAD

KAWASAKI VULCAN S 650 '15

KIT SISSY BAR KOVL65SN



1 HIRC00 x1

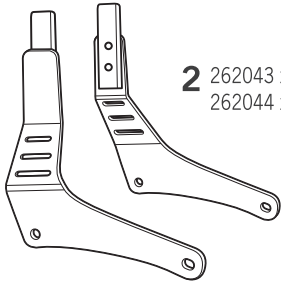

2 262043 x1 →
262044 x1 ←



3 304170 x2
M8 x 60 DIN 7380



4 304075 x2
M10 x 70 DIN 961



5 303045 x6
Ø8



6 260564 x2
Ø16 Ø9 x 33



7 261277 x2
Ø20 Ø11 x 25



8 303025 x2
Ø10






9 304211 x4
M8 x 15 DIN 933


WARNING!

- GB** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.
- E** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.
- D** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.
- I** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.
- F** Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the 3p system before the Sissy Bar.

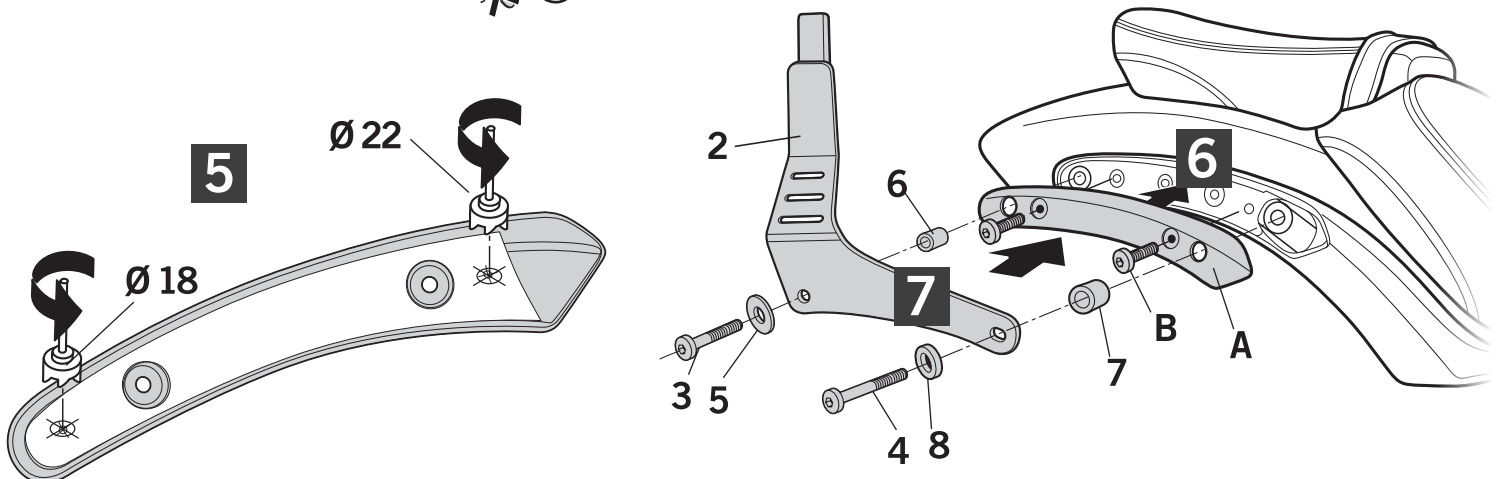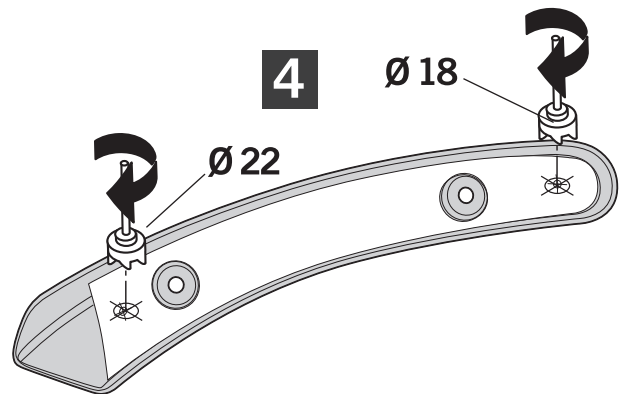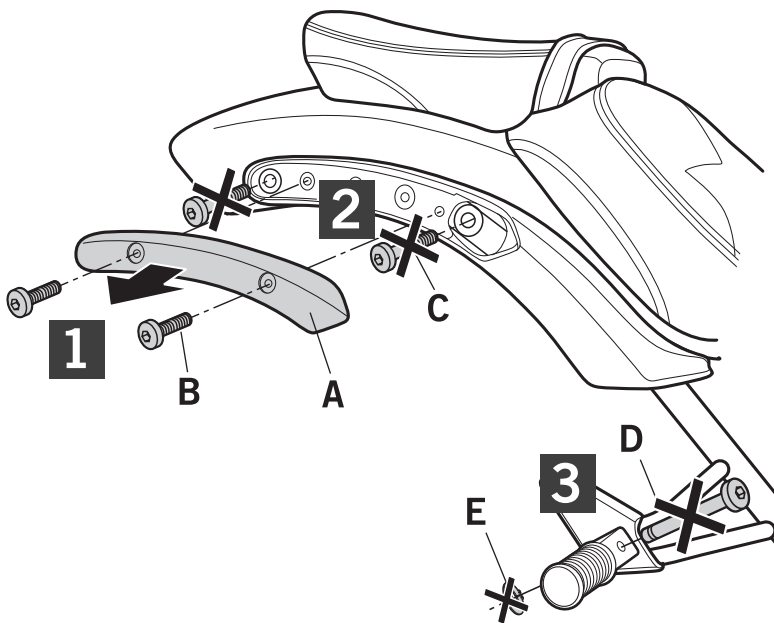

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

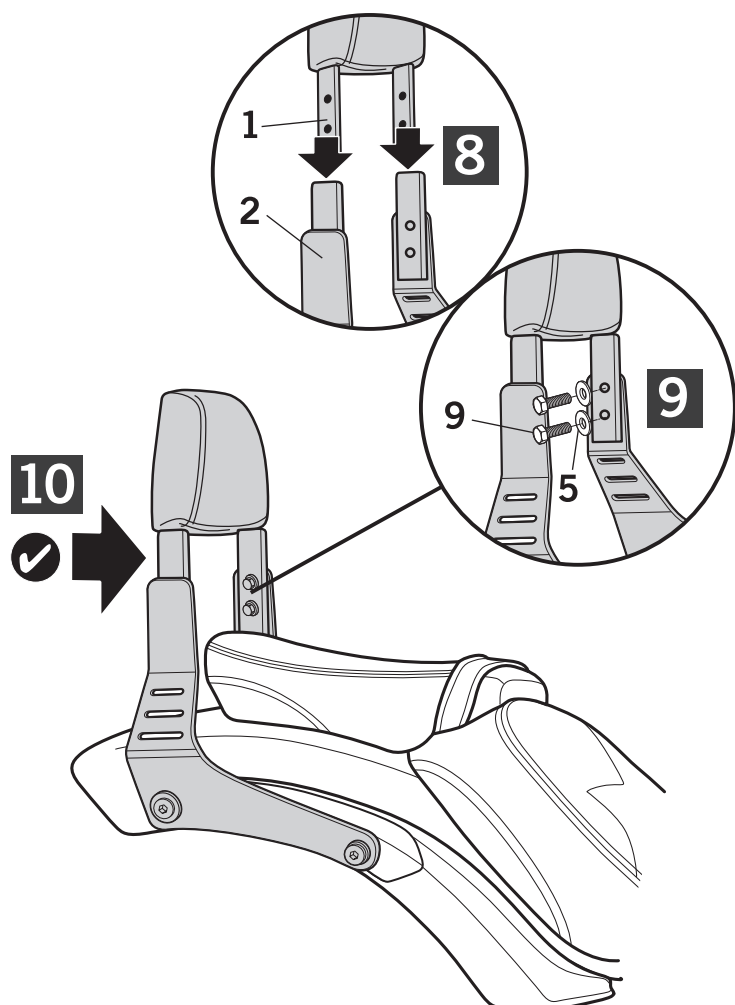

**SISSY BAR
+
3P SYSTEM**

