


SHAD

HONDA GL 1800 GOLDWING '18

KIT TOP HOGL15T

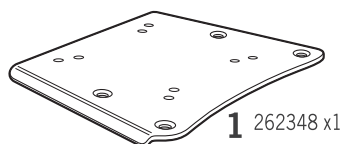

1 262348 x1



2 260564 x2
Ø16 Ø9 x 33




3 304230 x2
M8 x 60 DIN 7991



4 303025 x4
Ø10



5 261598 x2
Ø14 Ø9 x 48



6 304331 x2
M8 x 75 DIN 7991

WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

