


SHAD

HONDA FORZA 125 / 350 '21

TOP MASTER HOFR11ST

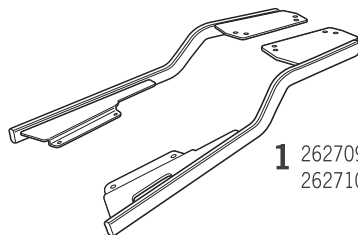

1 262709 x1 →
262710 x1 ←



2 260622 x4
Ø25 Ø14-Ø9 x 6



3 303045 x4
Ø8



4 304039 x4
M8 x 40 Din 7380



5 303020 x4
Ø8



WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)





Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

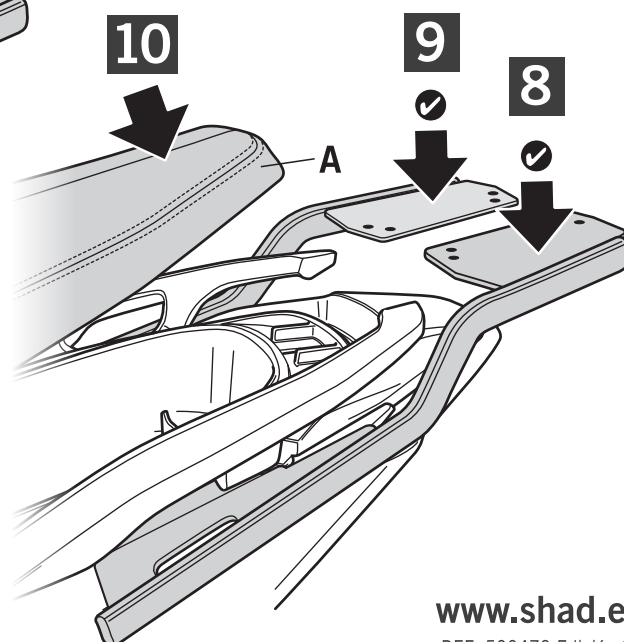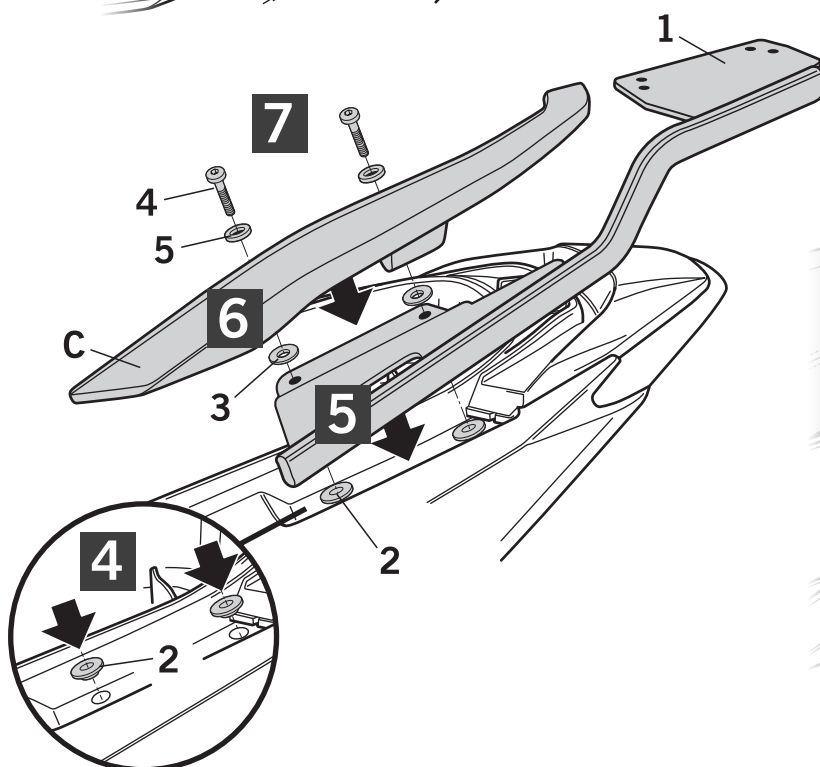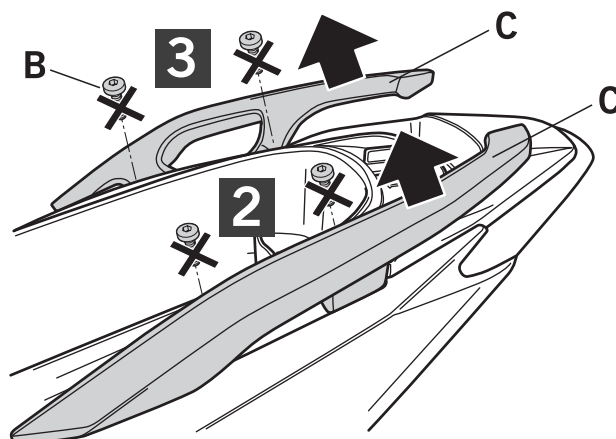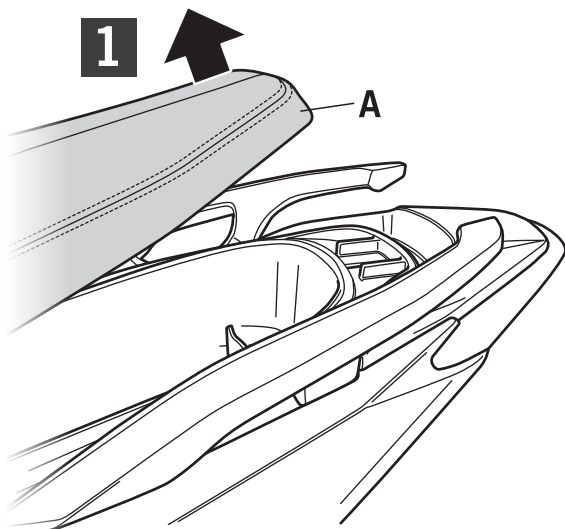

www.shad.es

REF. 500479 Edición 1ª

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es