


SHAD

YAMAHA TRACER 900 '21

Y0TR91IF

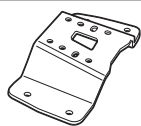

1 262791 x1



2 304052 x2
M6 x 20 Din 7380



3 303000 x12
Ø6



4 302021 x6
M6



5 304038 x2
M6 x 22 Din 912




6 262790 x2



7 262789 x1



8 304037 x2
M6 x 35 Din 912

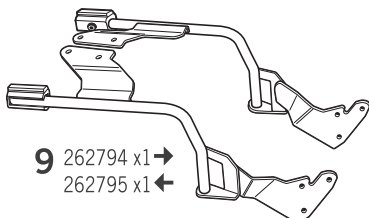

9 262794 x1 →
262795 x1 ←



10 304053 x4
M8 x 30 Din 7380



11 303045 x26
Ø8



12 302024 x4
M8



13 304081 x6
M8 x 20 Din 7380

! WARNING!


(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

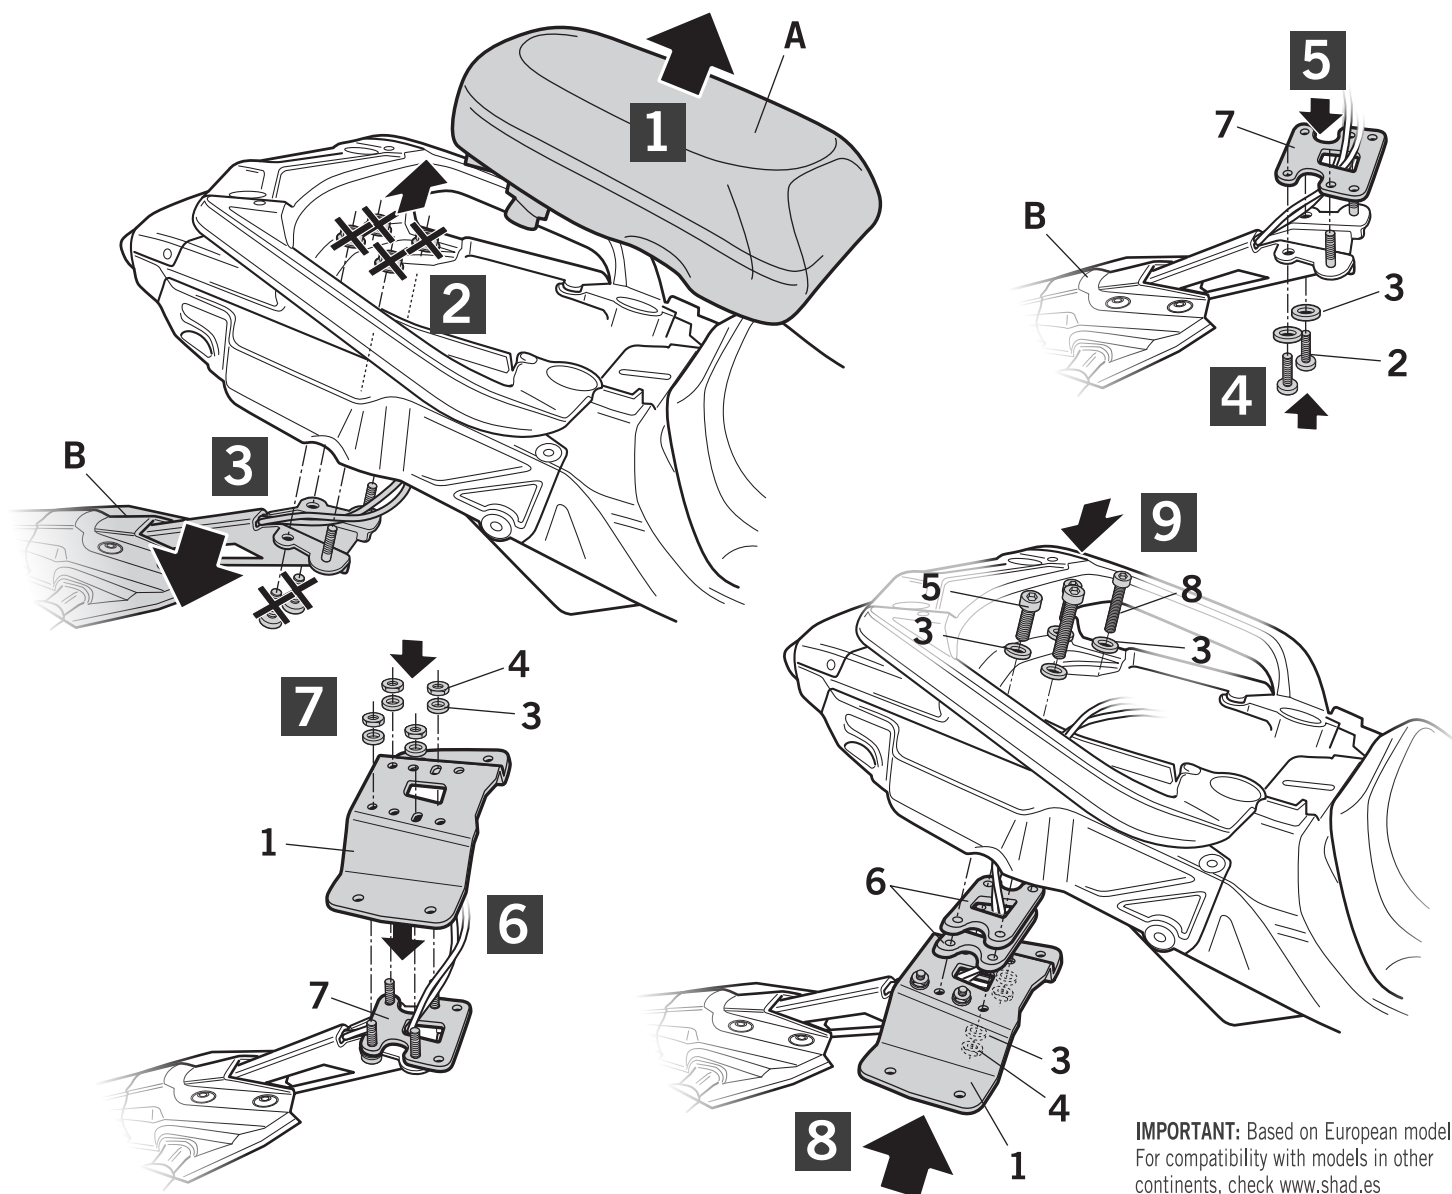

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

