


SHAD

HONDA X-ADV 750 '21

H0XD71IF



1 262703 x1 →
262704 x1 ←



2 262699 x1 →
262700 x1 ←



3 262701 x1 →
262702 x1 ←



4 304039 x6
M8 x 40
Din 7380



5 303045 x14
Ø8




6 260740 x2
Ø20 Ø11 x 11



9 303027 x4
Ø8



10 260213 x2
Ø16 Ø9 x 12

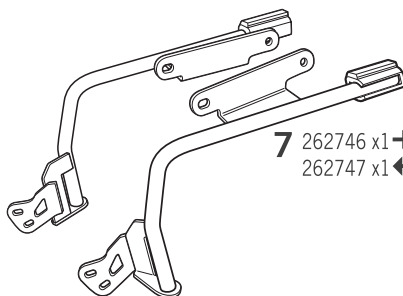

7 262746 x1 →
262747 x1 ←



8 304028 x4
M8 x 25
DIN 7380



11 261042 x1
Ø16 Ø9 x 15



12 304170 x1
M8 x 60
DIN 7380



WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.




(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

ATTENTION: For a full equip assembly, mount the 3P System after the top master.

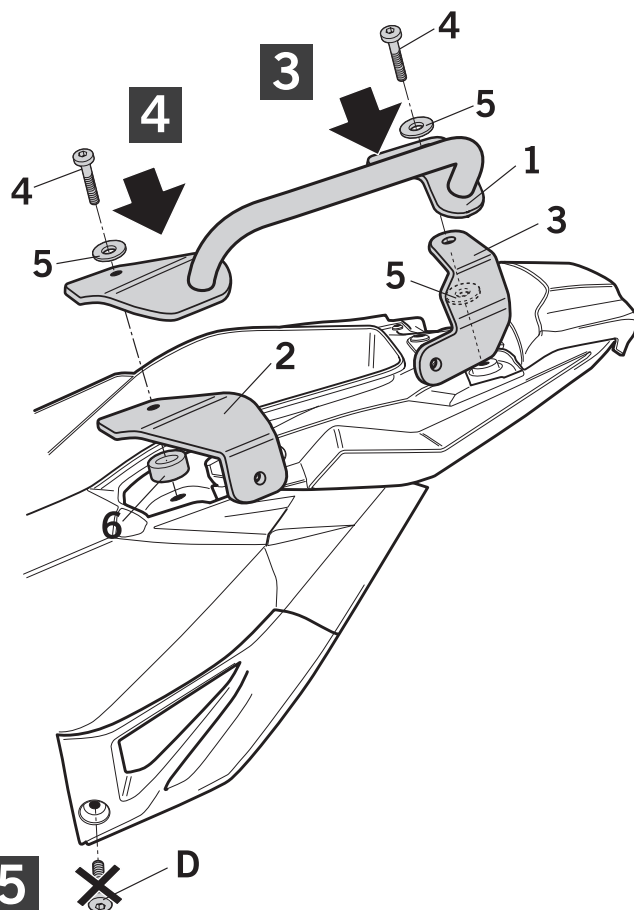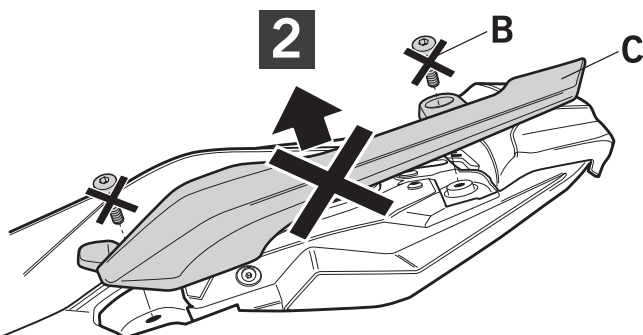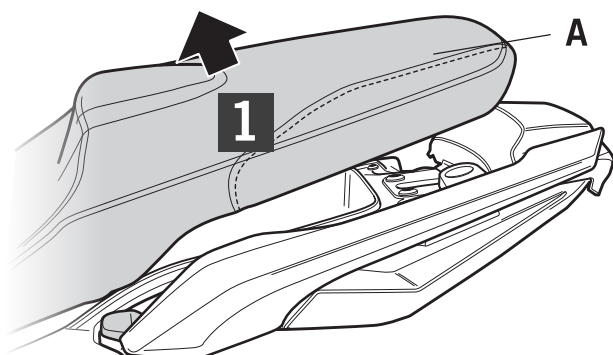


IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es


SHAD

HONDA X-ADV 750 '21




H0XD711F

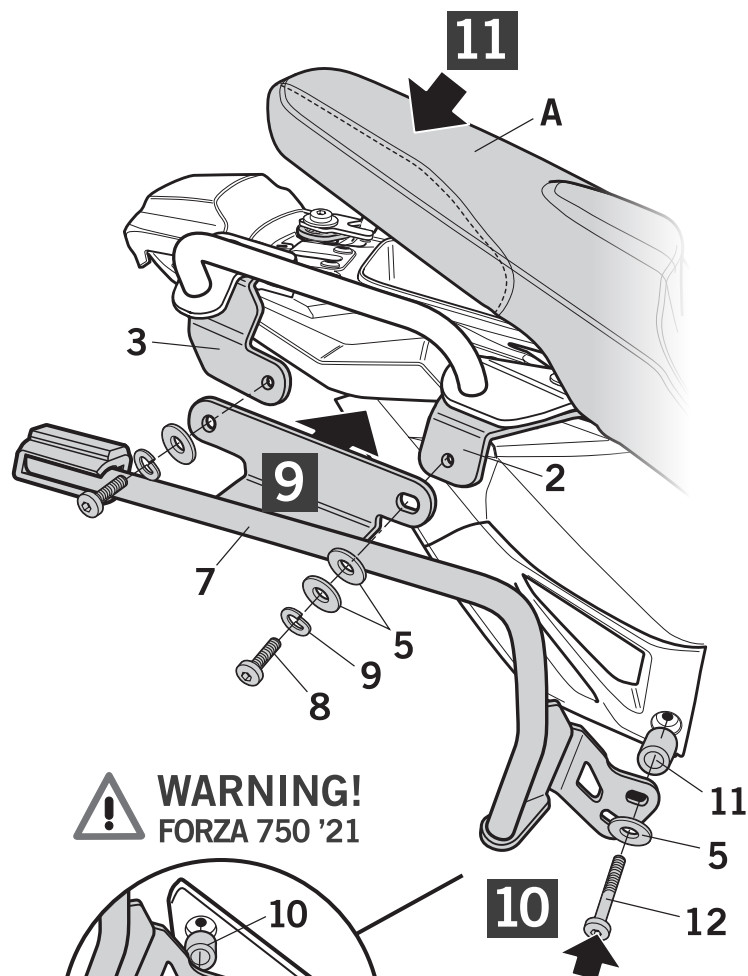

WARNING!
FORZA 750 '21

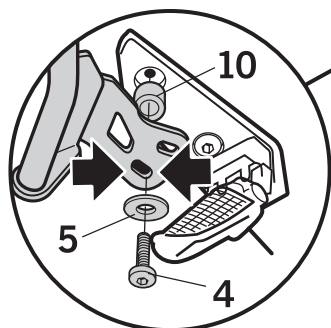

TOP MASTER
+
3P SYSTEM

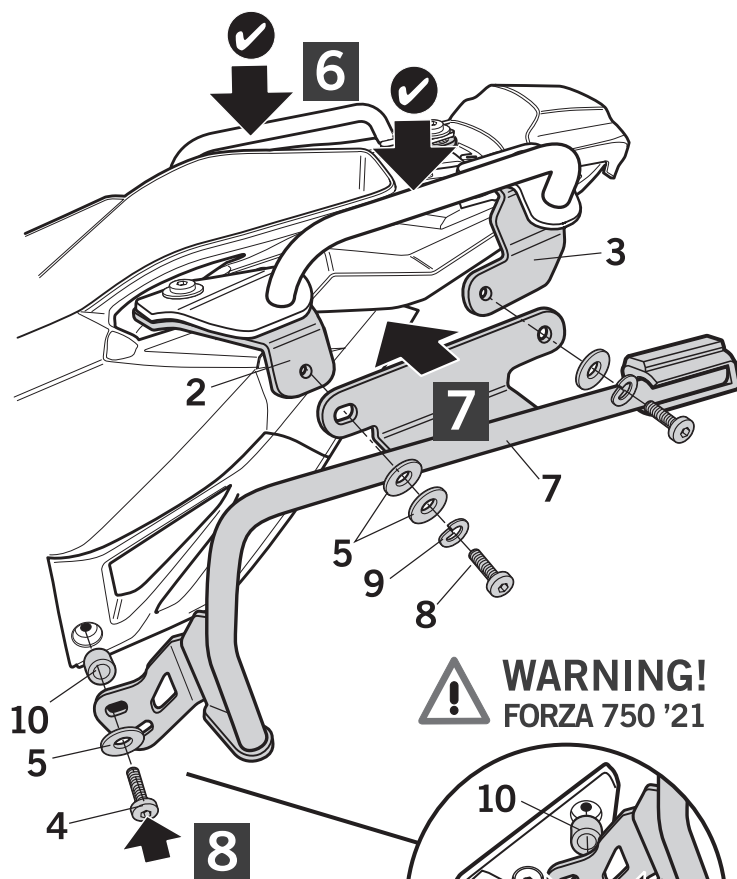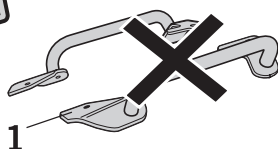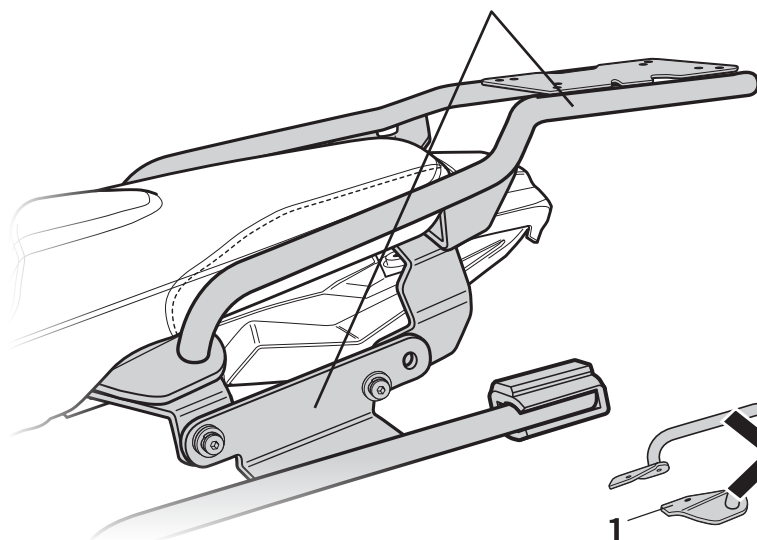

WARNING!
FORZA 750 '21

