


SHAD

ZONTES U1 125 / U 125 '20

ZOU110IF

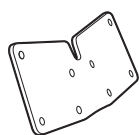


1 262675 x1




2 260213 x4
Ø16 Ø9 x12



3 303020 x6
Ø8




4 304169 x4
M8 x 50 DIN 7380

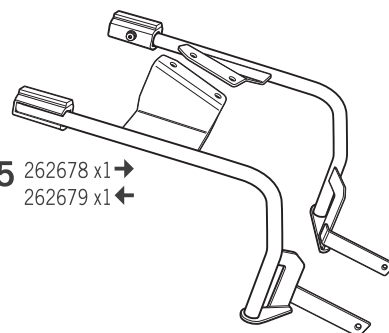

5 262678 x1 →
262679 x1 ←



6 303045 x10
Ø8



7 304053 x6
M8 x 30 DIN 7380



8 302024 x6
M8



9 260648 x2
Ø16 Ø9 x5

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.




(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

ATTENTION: For a full equip assembly, mount the 3P System after the top master.

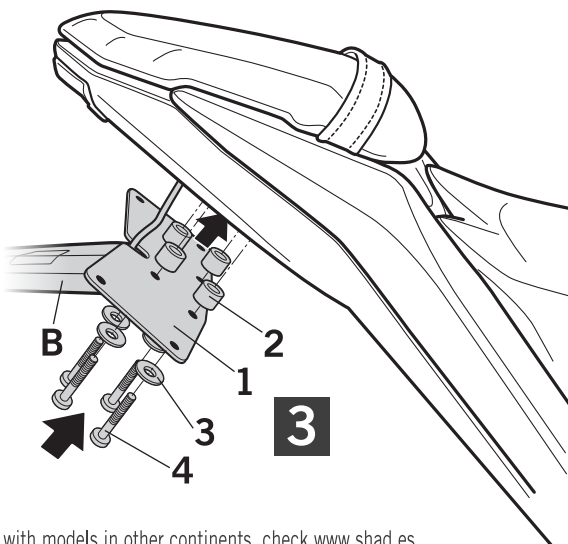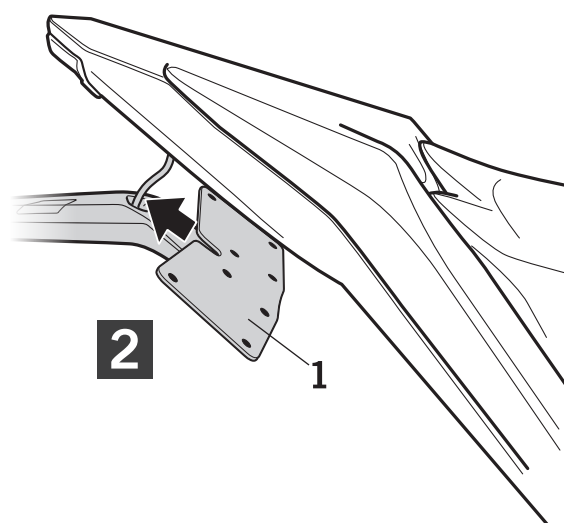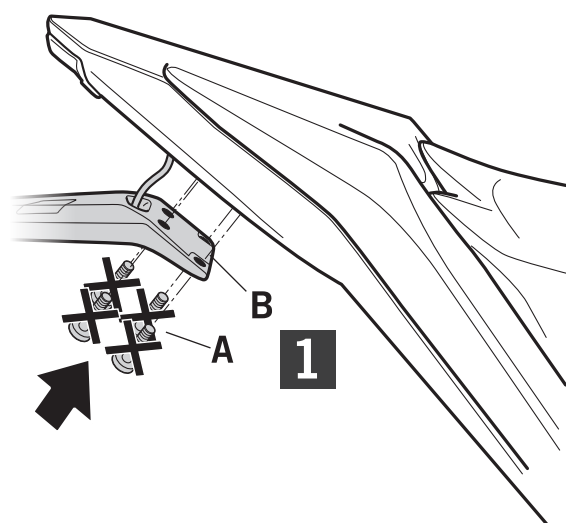

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

