


SHAD


VOGE 500 DS '20
V0DS50IF

3P
SYSTEM

DESIGNED IN
BARCELONA

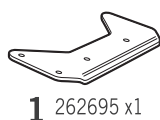

1 262695 x1

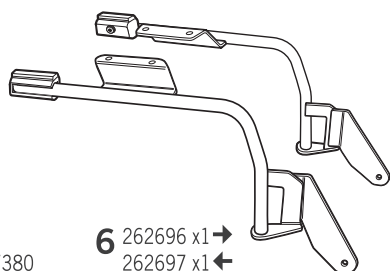

6 262696 x1 →
262697 x1 ←




2 260493 x2
Ø20-12 Ø8,5 x 14-3



3 260686 x2
Ø16 Ø9 x 8



4 303045 x14
Ø8



5 304169 x2
M8 x 50 DIN 7380



7 304028 x6
M8 x 25 Din 7380



8 302024 x4
M8



WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)






Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

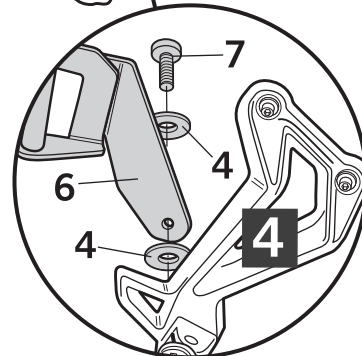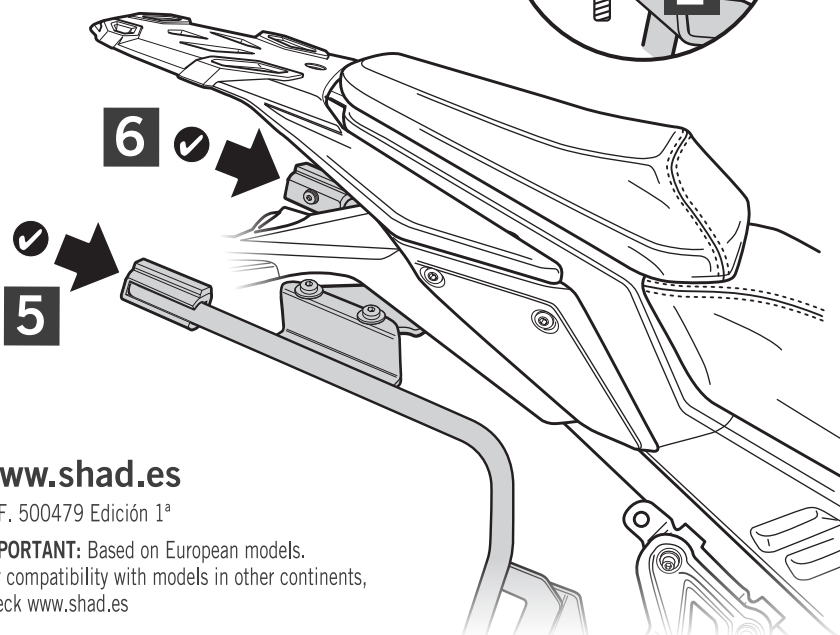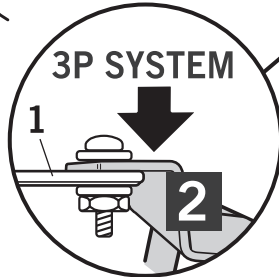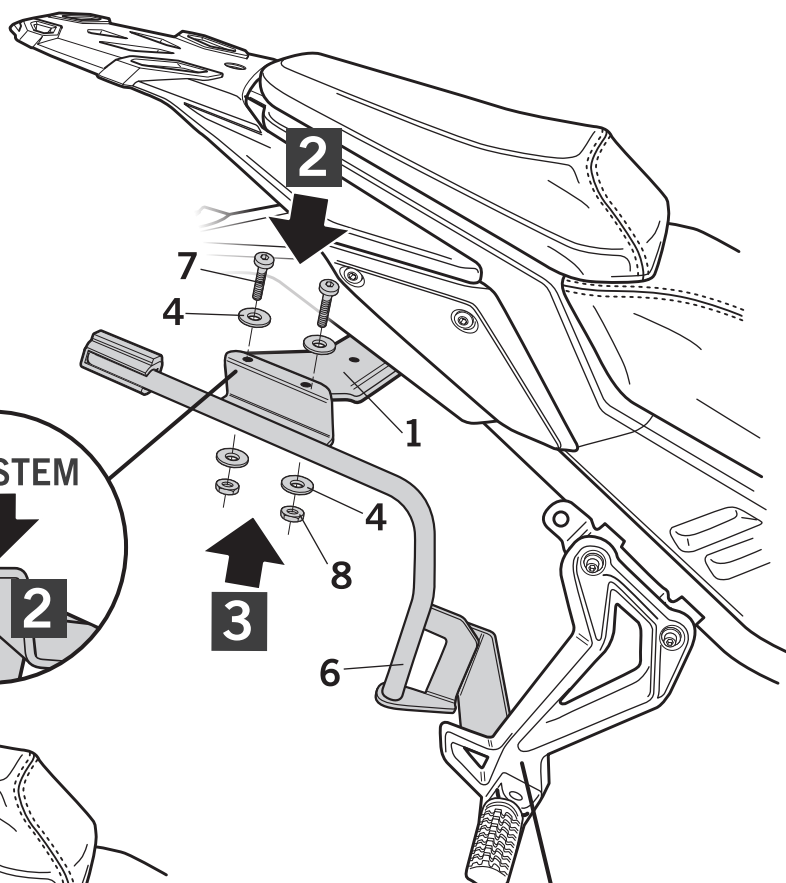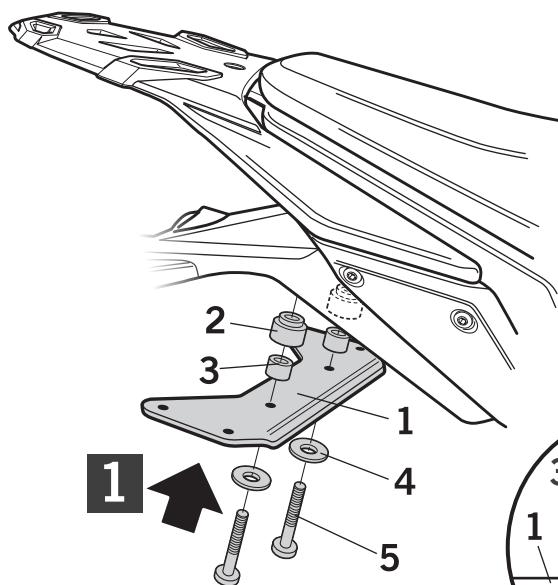

www.shad.es

REF. 500479 Edición 1ª

IMPORTANT: Based on European models.
For compatibility with models in other continents,
check www.shad.es