


SHAD

VOGE AC 300 '20

VOAC30IF

3P
SYSTEM

DESIGNED IN
BARCELONA

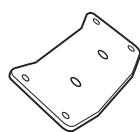

1 262680 x1



2 260641 x2
Ø16 Ø9 x 22




3 303017 x10
Ø6



4 304071 x2
M6 x 50 DIN 912

5 262683 x1 →
262684 x1 ←

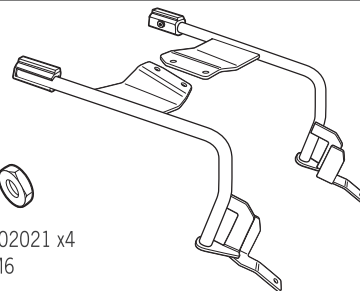

6 303045 x8
Ø8



7 302024 x4
M8



8 304053 x4
M8 x 30 Din 7380



9 304177 x2
M6 x 55 DIN 912



10 302021 x4
M6

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)



Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

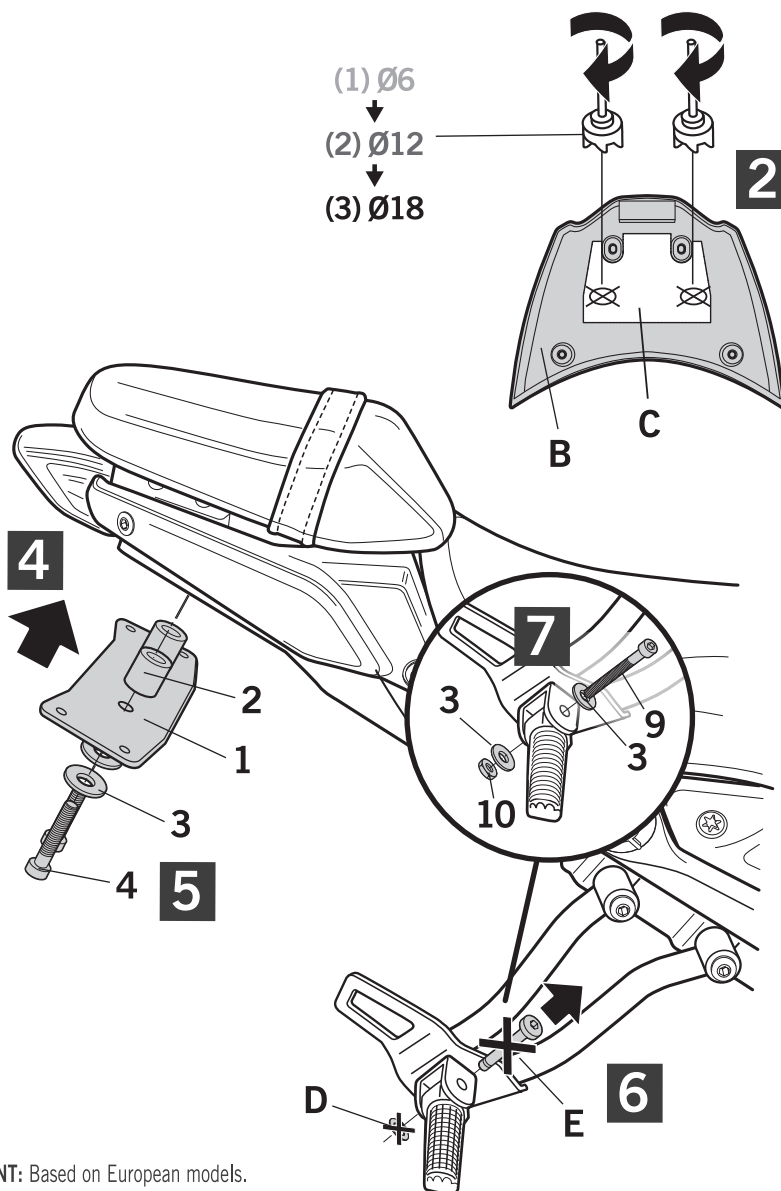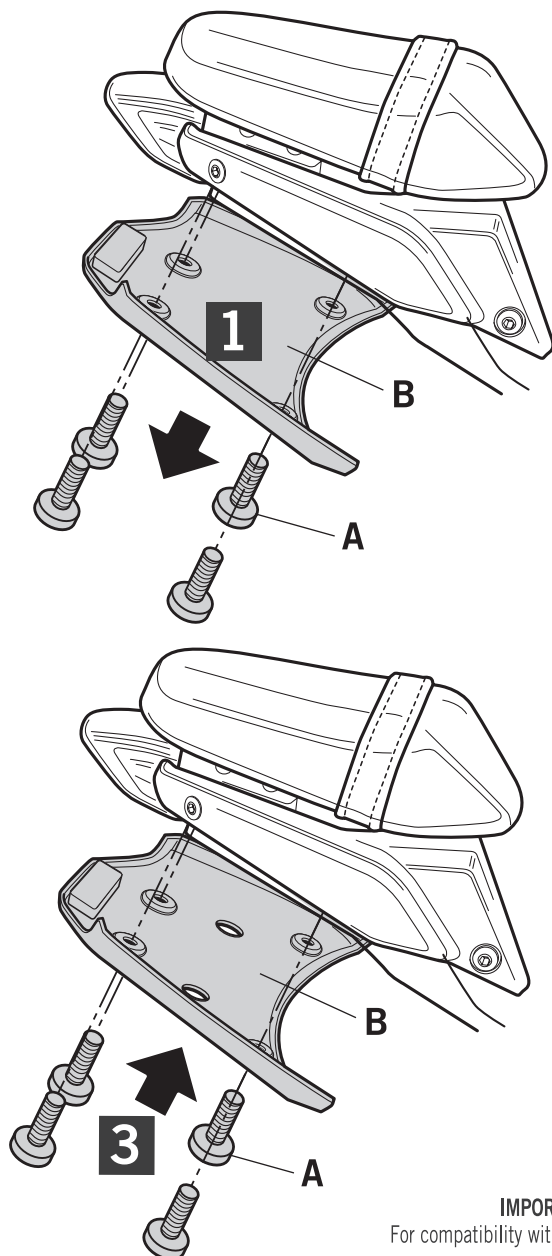

IMPORTANT: Based on European models.

For compatibility with models in other continents, check www.shad.es

