


SHAD

BMW S 1000 XR '20
WOSX10IF

3P
SYSTEM


DESIGNED IN
BARCELONA

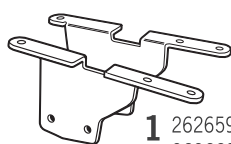

1 262659 x1 →
262660 x1 ←



2 260648 x3
Ø16 Ø9 x 5

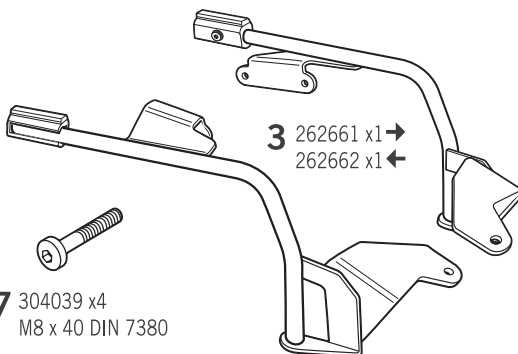

3 262661 x1 →
262662 x1 ←



4 304053 x4
M8 x 30 Din 7380



5 303045 x8
Ø8



6 302024 x4
M8



7 304039 x4
M8 x 40 DIN 7380



8 303020 x4
Ø8

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.


(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

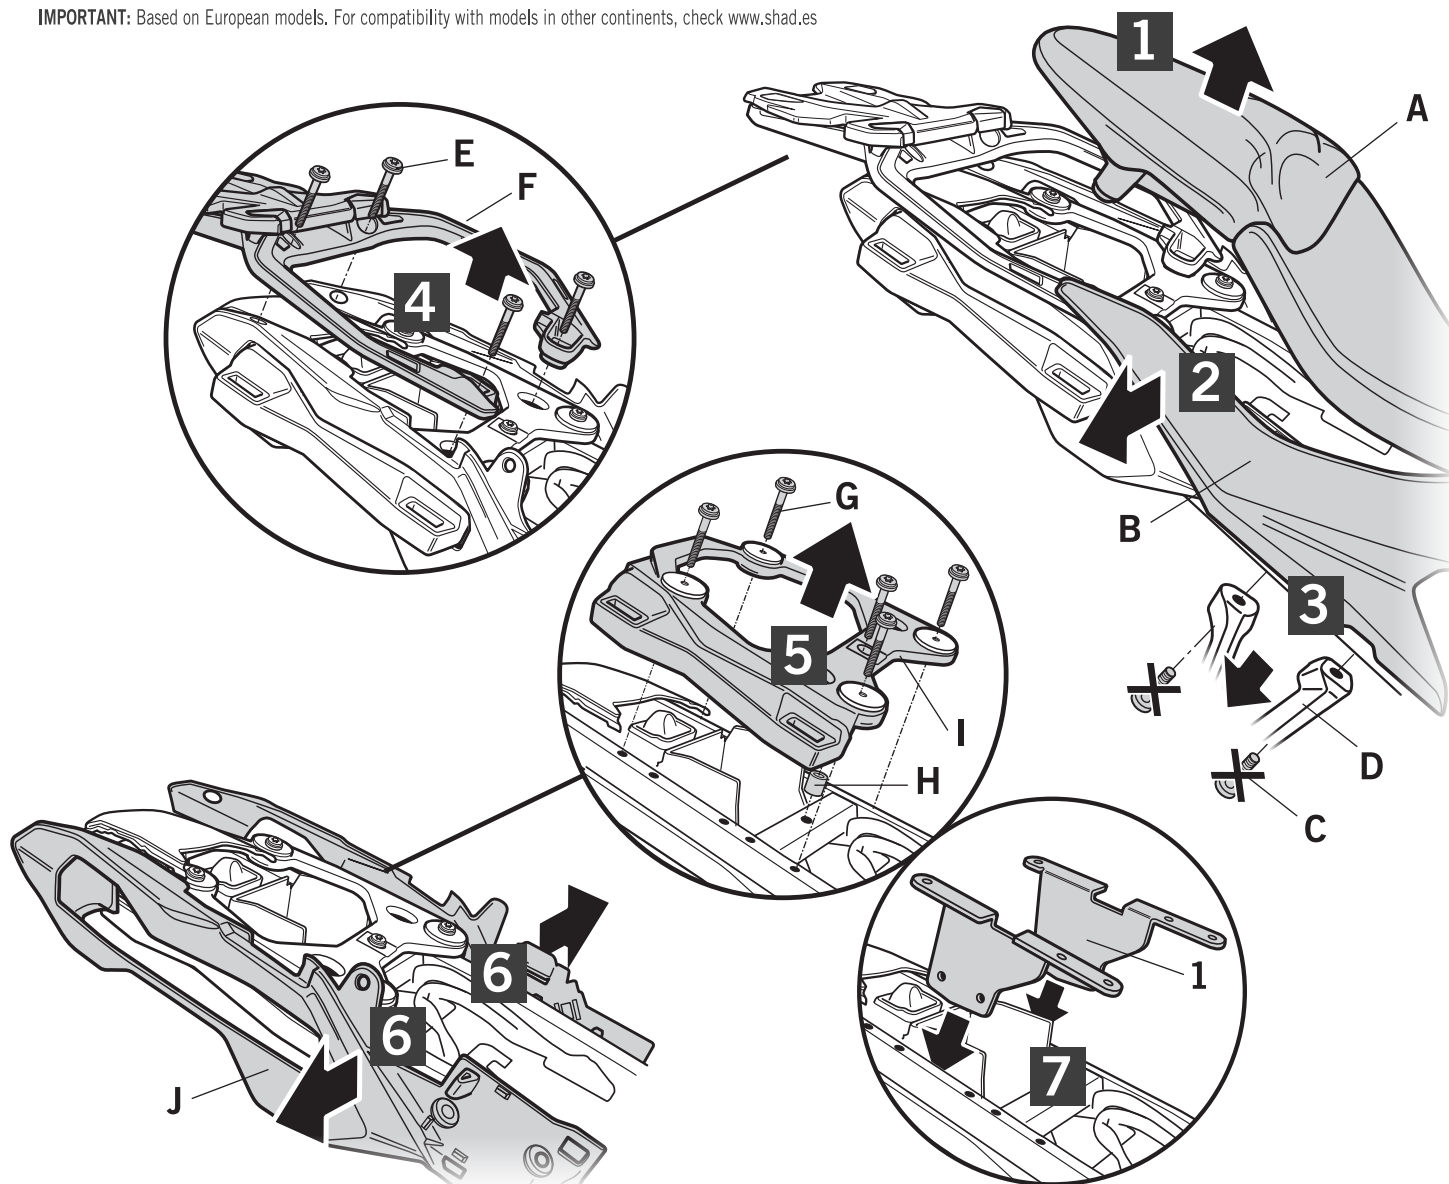

SHAD

BMW S 1000 XR '20
WOSX10IF

3P
SYSTEM

