


# SHAD

## BENELLI BN302 S '19

B0BN39IF

**3P**  
SYSTEM


DESIGNED IN  
BARCELONA

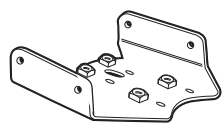

**1** 262497 x1



**2** 260564 x2  
Ø16 Ø9 x 33

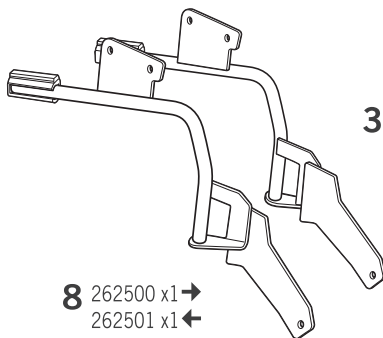

**8** 262500 x1 →  
262501 x1 ←



**3** 260900 x2  
Ø16 Ø9 x 36



**4** 303045 x13  
Ø8



**5** 304170 x4  
M8 x 60 Din 7380



**6** 303020 x4  
Ø8



**7** 304053 x6  
M8 x 30 Din 7380



**9** 304028 x4  
M8 x 25 Din 7380



**10** 302024 x4  
Ø8



**11** 260213 x1  
Ø16 Ø9 x 12



### WARNING!

**(GB)** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.




**(E)** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

**(D)** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.



**(I)** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

**(F)** Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

**ATTENTION:** For a full equip assembly, mount the 3P System after the top master.

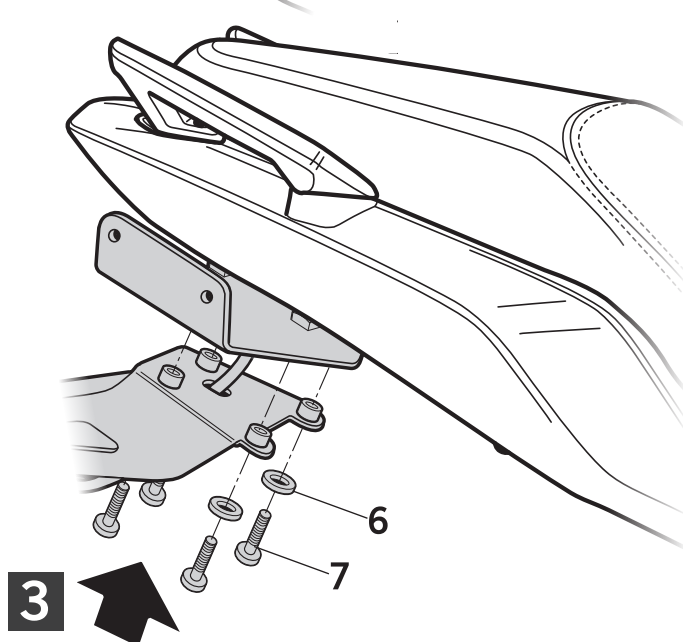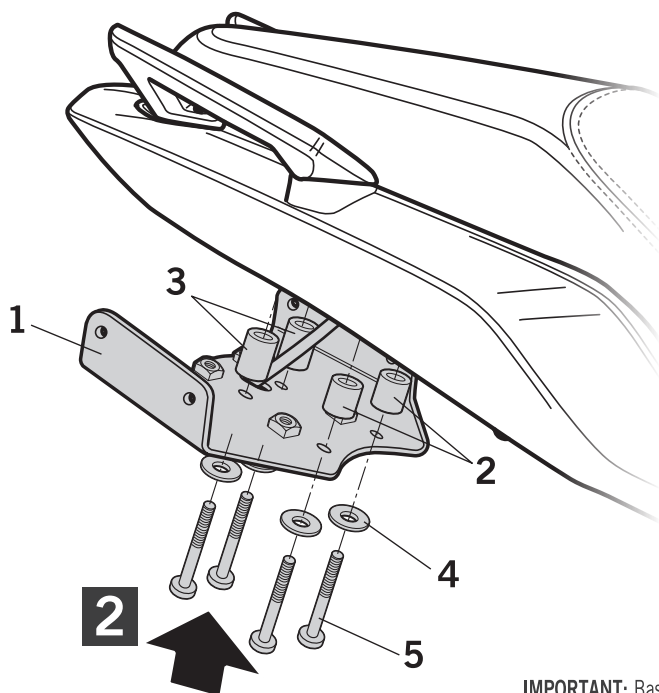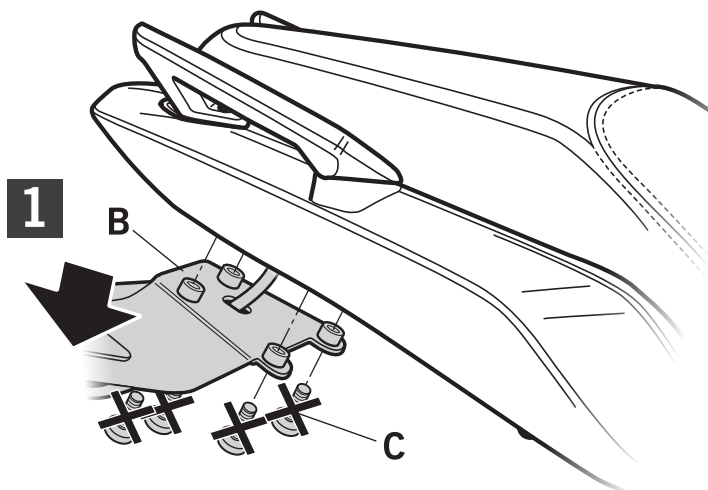

**IMPORTANT:** Based on European models. For compatibility with models in other continents, check [www.shad.es](http://www.shad.es)

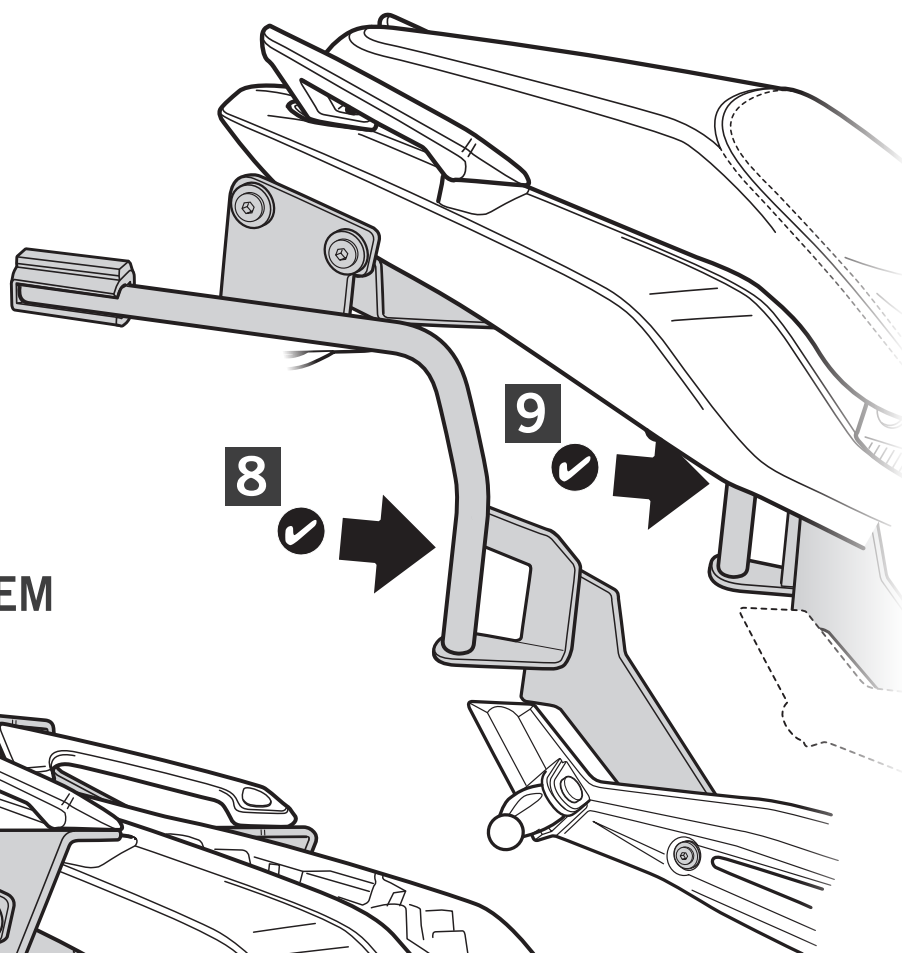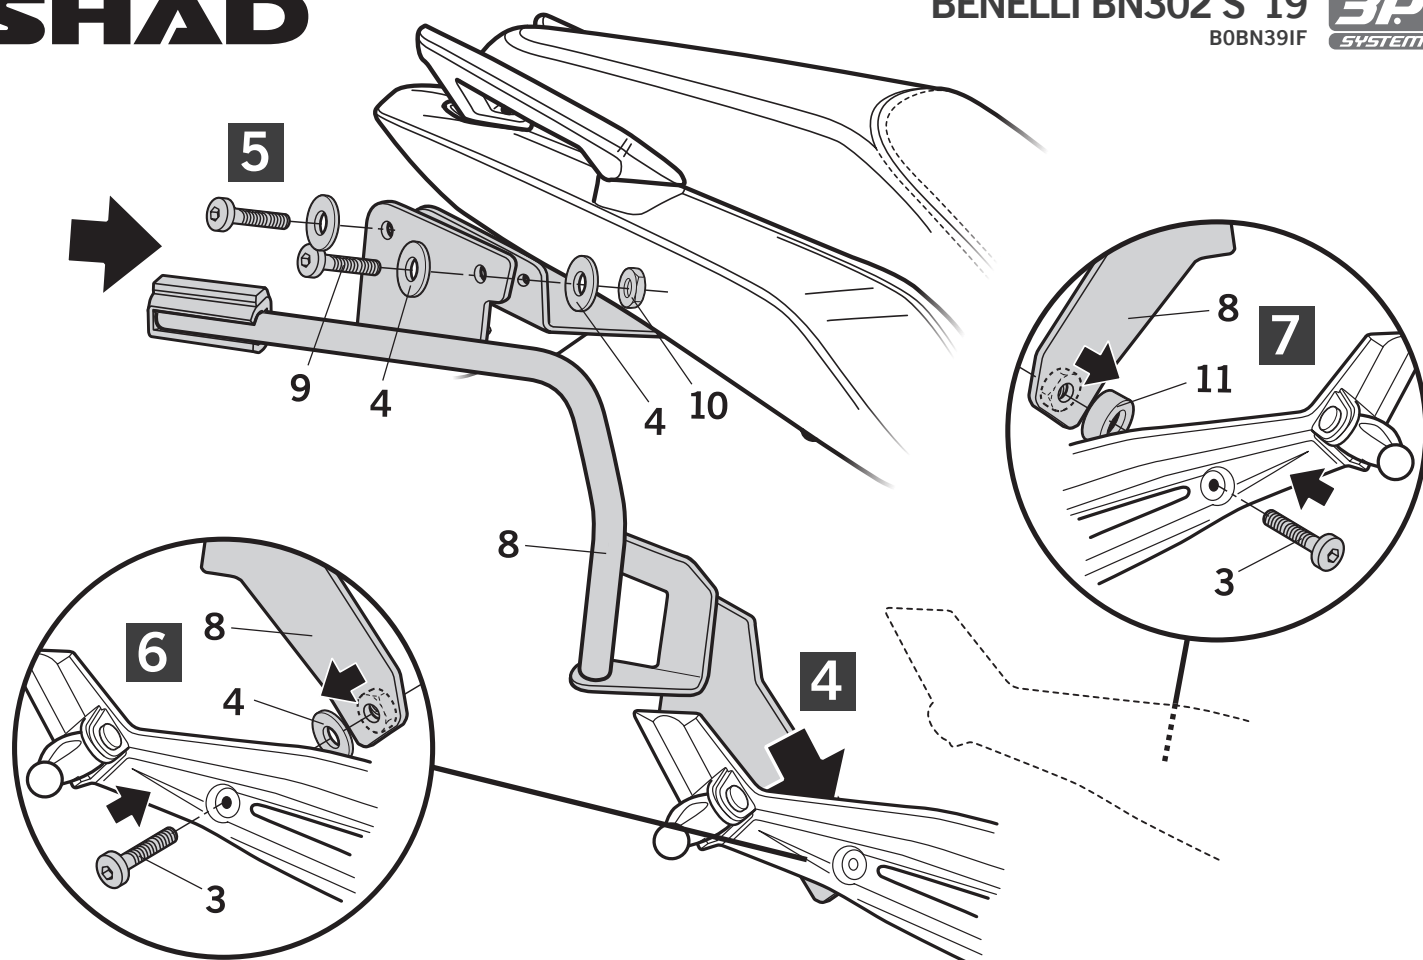

TOP MASTER + 3P SYSTEM

