


SHAD

YAMAHA NIKEN 900 '18

YONK98IF

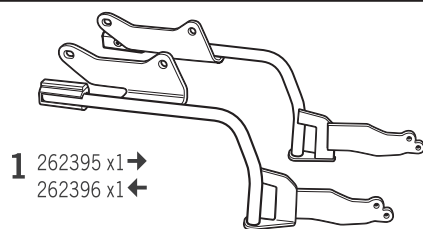

1 262395 x1 →
262396 x1 ←



2 260538 x4
Ø16 Ø9 x 9



3 303045 x4
Ø8



4 304174 x4
M8 x 80
DIN 7380



5 303017 x4
Ø6



6 304012 x4
M6 x 16
DIN 912

WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.




I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the top master before the 3P System.

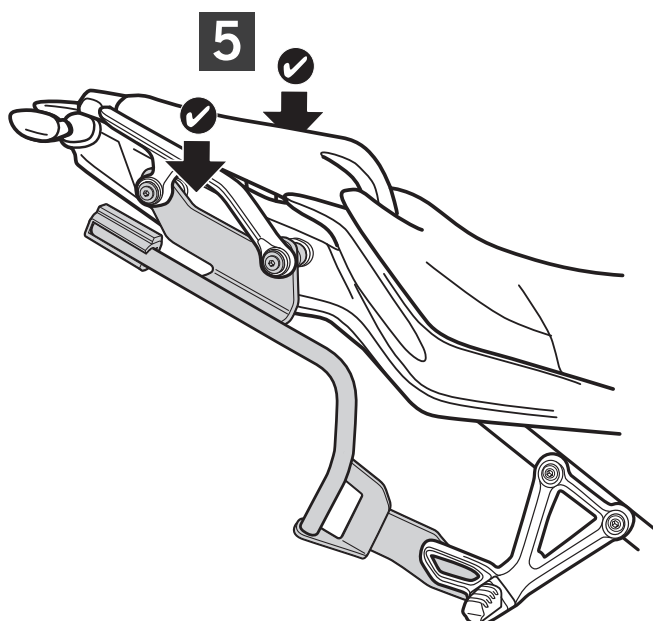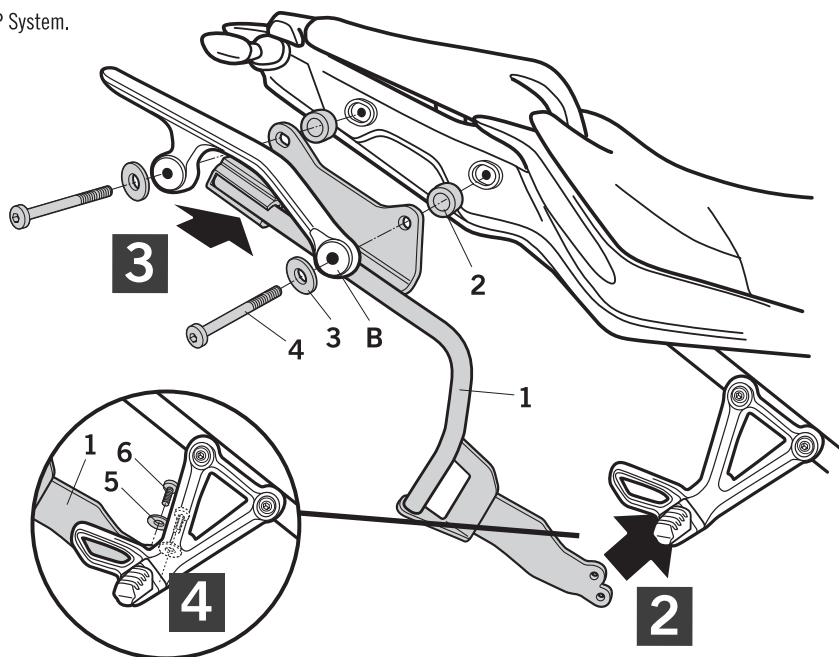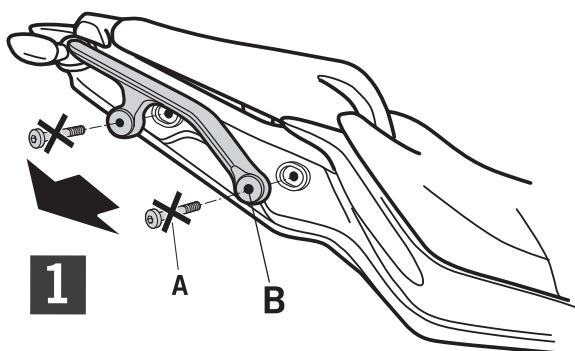

TOP MASTER
+
3P SYSTEM



IMPORTANT: Based on European models.
For compatibility with models in other continents, check www.shad.es

www.shad.es REF. 500479 Edición 2ª