


SHAD

SUZUKI SV 650 '16
SOSV68IF

3P
SYSTEM

DESIGNED IN
BARCELONA



1 262289 x1



2 262006 x4
Ø18 Ø11 Ø8
x 19-3




3 262007 x4
Ø18 Ø11 Ø8
x 6-3



4 303017 x4
Ø6



5 304201 x4
M6 x 40 Din 7380

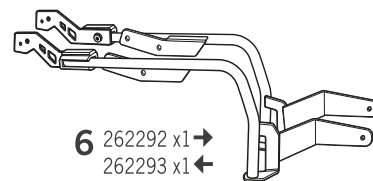

6 262292 x1
262293 x1



7 303045 x8
Ø8



8 304053 x4
M8 x 30
Din 7380



9 302024 x4
M8



10 304169 x4
M8 x 50
Din 7380



11 260648 x2
Ø16 Ø9 x5



12 260538 x4
Ø16 Ø9 x9



13 304272 x4
M8 x 35
Din 7380



14 260917 x2



15 260919 x4



16 260695 x4



WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the 3p system after the top master.

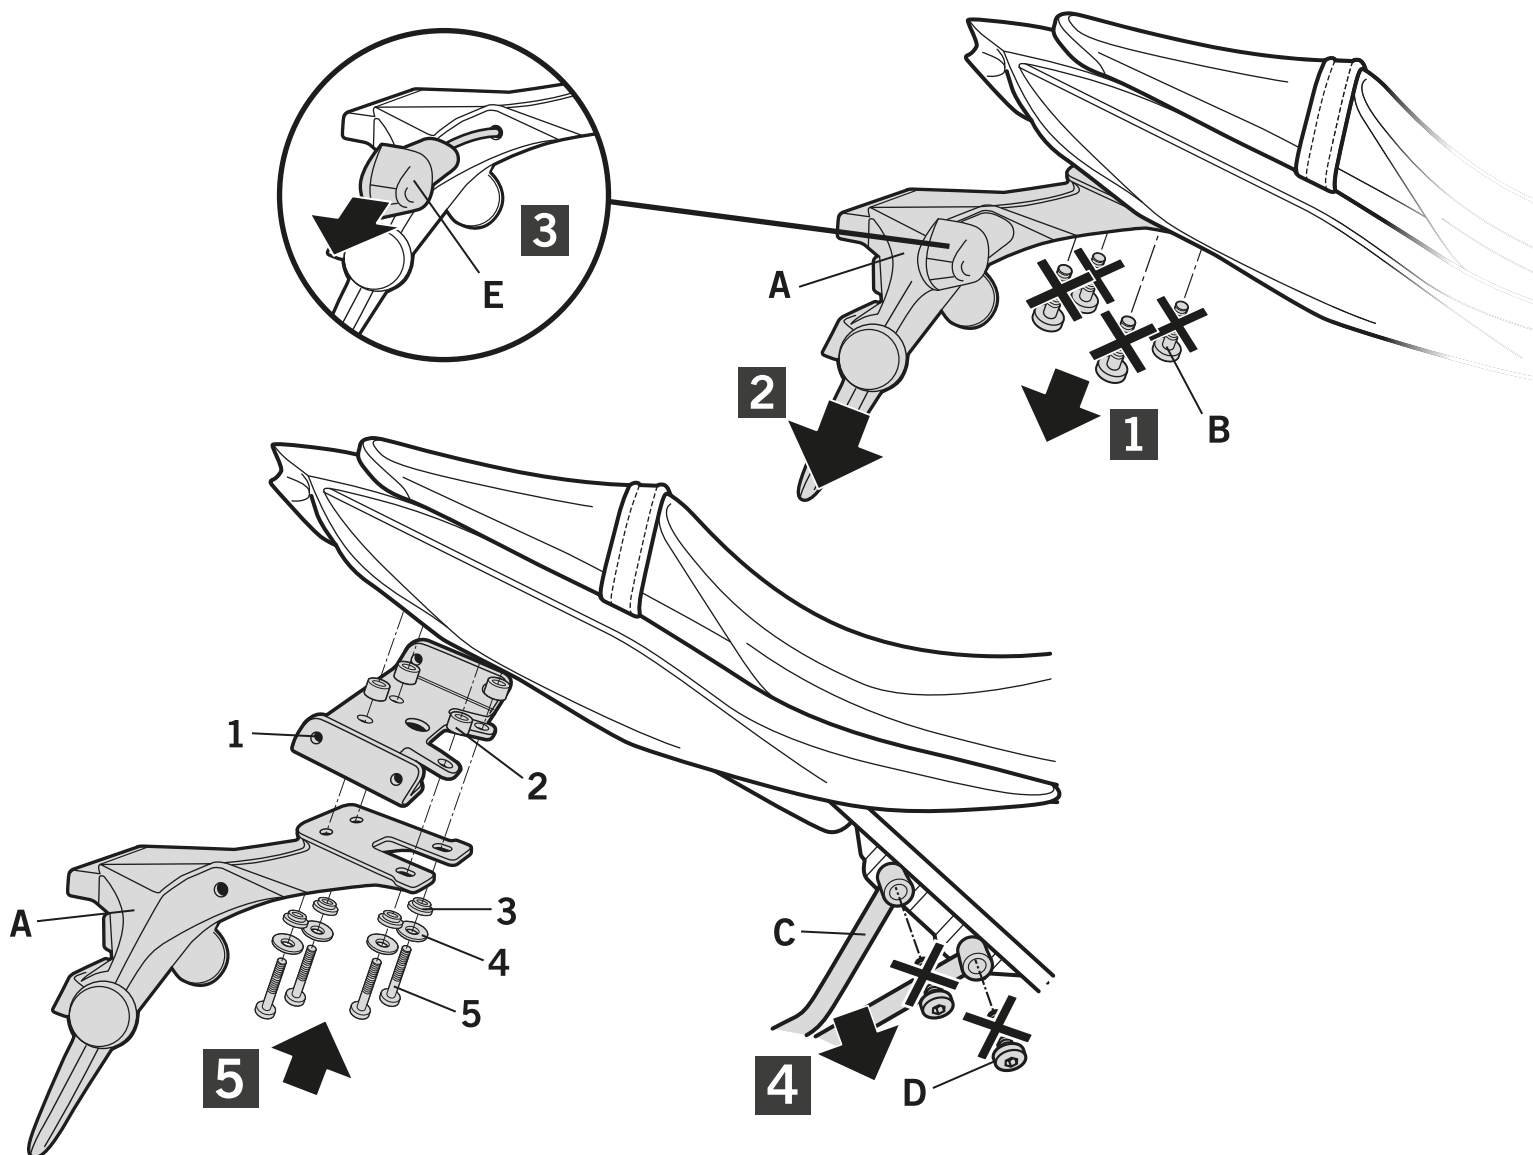

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

