


SHAD

TRIUMPH TIGER SPORT 1050 '16

TOTG16IF

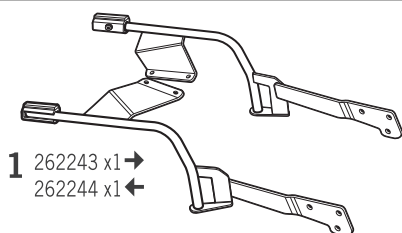

1 262243 x1 →
262244 x1 ←



2 303017 x6
Ø6



3 304280 x6
M6 x 16



4 303045 x4
Ø8



5 304039 x4
M8 x 40
Din 7380



6 261029 x4
Ø20 Ø10 x 15

! WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the top master after the 3p system.

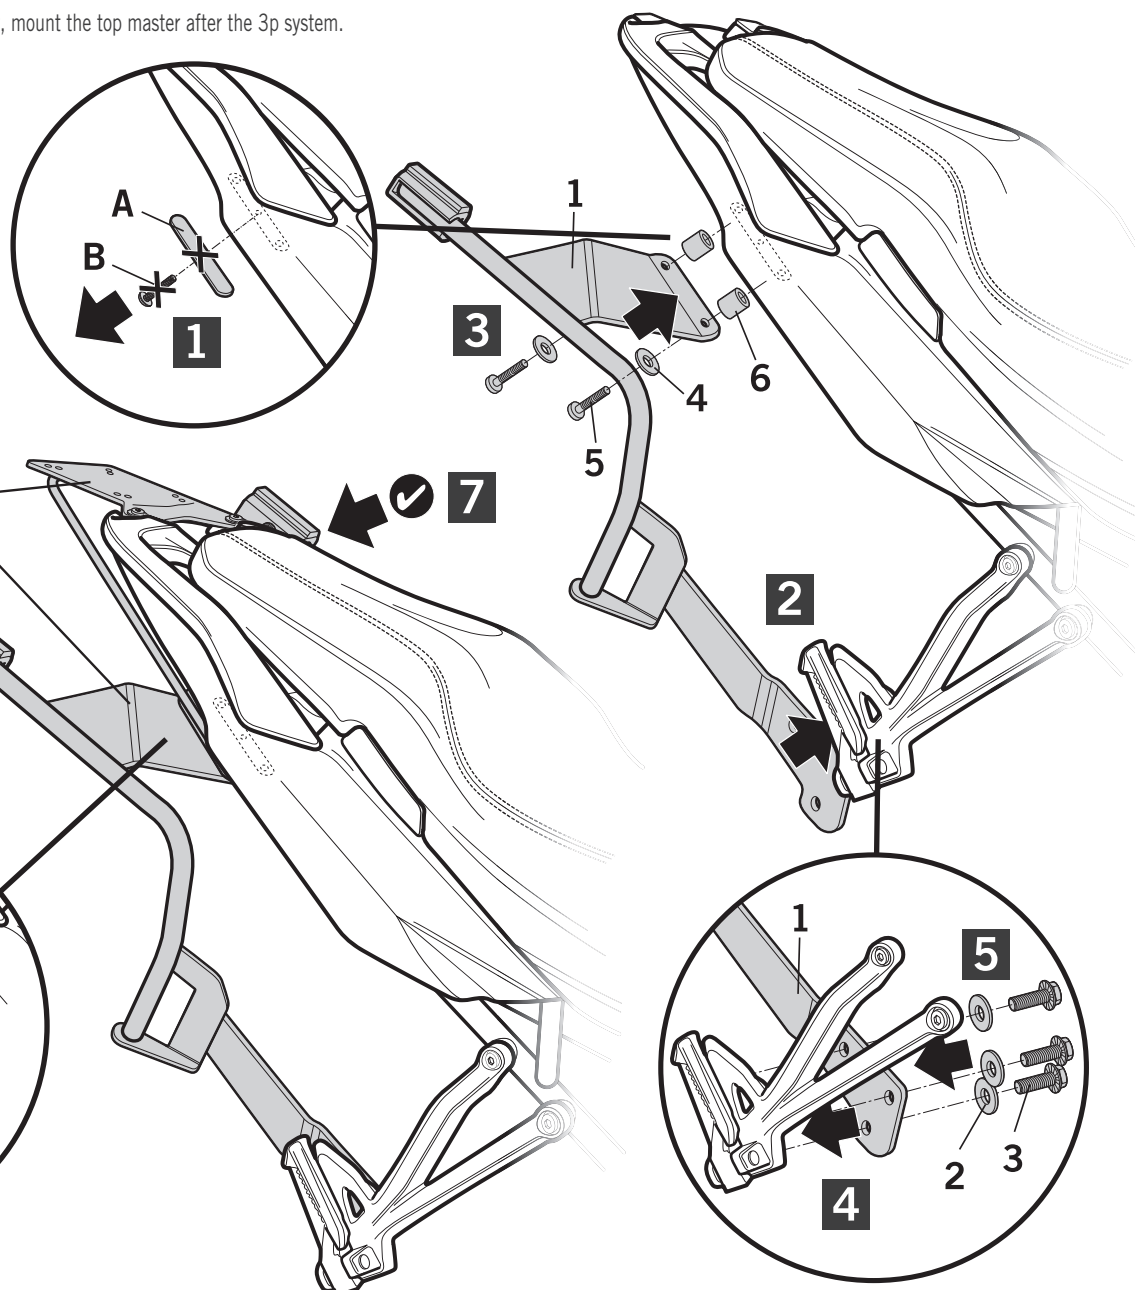

8 TOP MASTER
+
3P SYSTEM

