


SHAD

KAWASAKI VULCAN S 650 '15

KOVL65IF

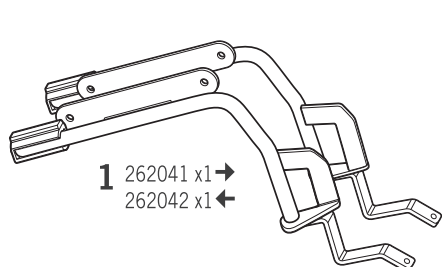

1 262041 x1 →
262042 x1 ←

2 304170 x4
M8 x 60 DIN 7380

3 304075 x2
M10 x 70 DIN 961

4 303045 x6
Ø8

5 303020 x2
Ø8

6 302024 x2
M8

7 260564 x2
Ø16 Ø9 x 33

8 261277 x2
Ø20 Ø11 x 25

9 303025 x2
Ø10

! WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the Sissy Bar before the 3p system.

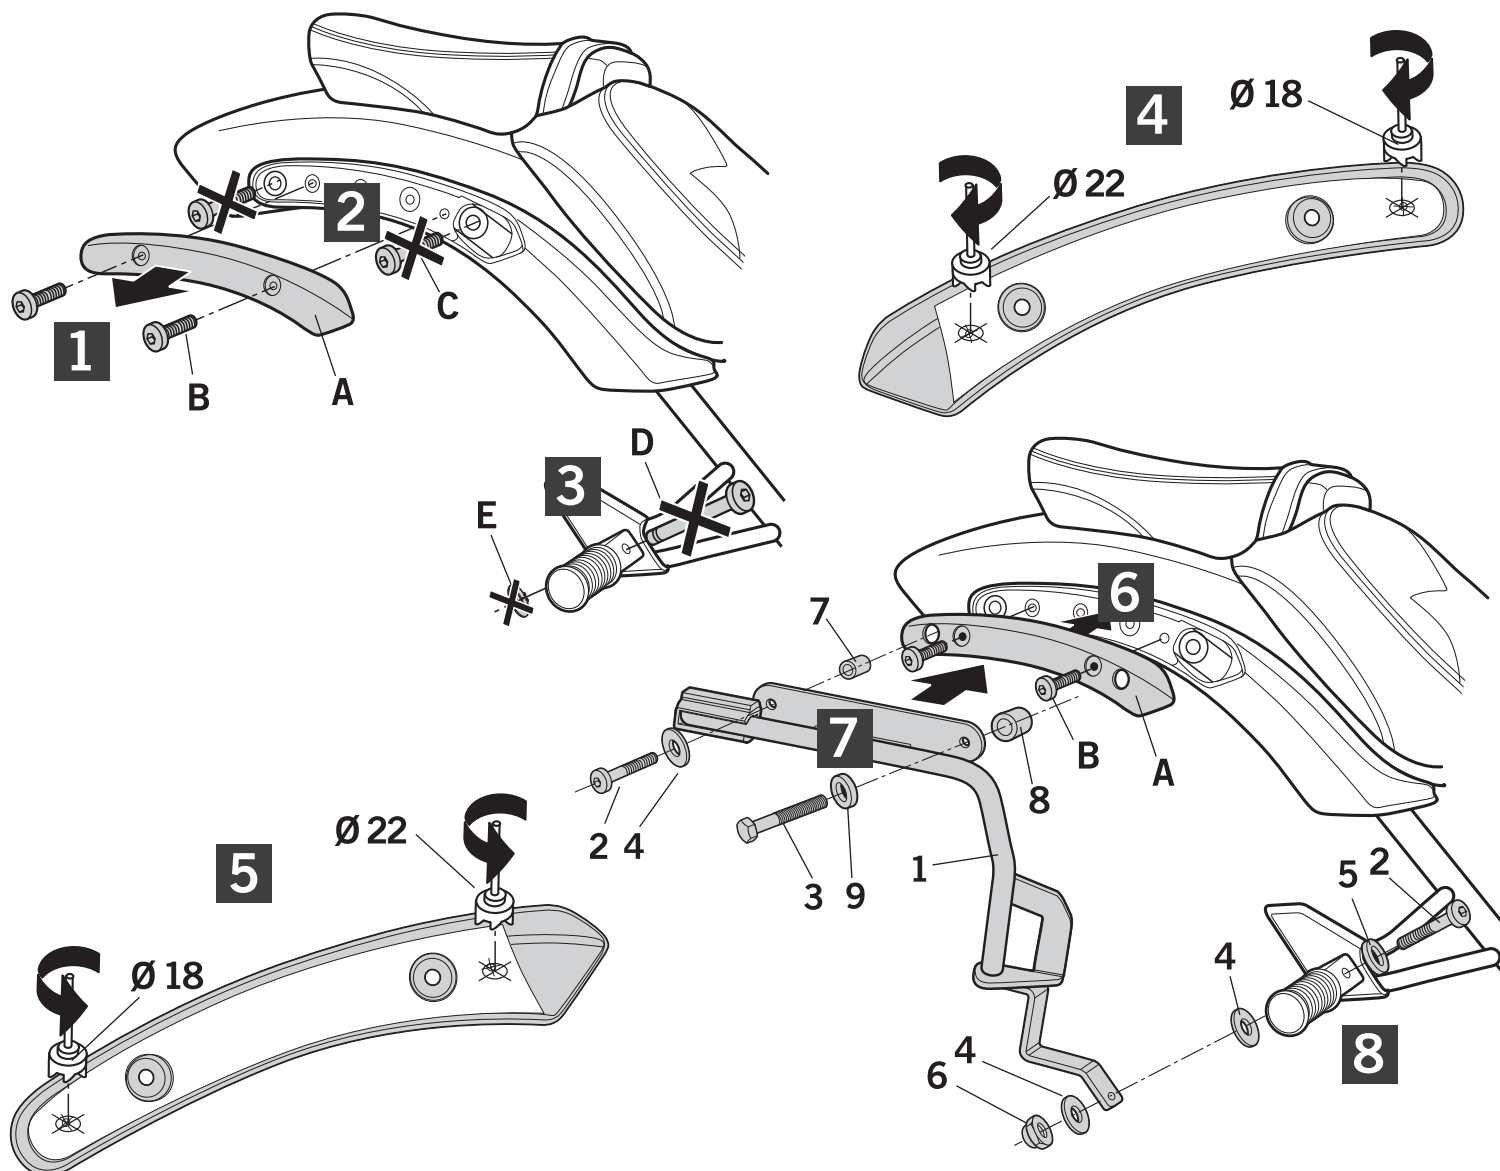

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

