

# SHAD

## BENELLI BN302 '15

BOBN35IF



**1** 261904 x1



**3** 303017 x4  
Ø6



**4** 304079 x4  
M6 x 30 Din 7380



**5** 303020 x4  
Ø8




**6** 303045 x10  
Ø8



**7** 304028 x6  
M8 x 25 Din 7380



**8** 302024 x4  
M8



**2** 261907 x1  
261908 x1



**9** 260917 x2



**10** 260919 x4



**11** 260695 x4



**12** 260596 x2  
Ø16 Ø9 x 20



**13** 260641 x2  
Ø16 Ø9 x 22



**14** 304169 x4  
M8 x 50  
Din 7380

### ! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.




(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

**ATTENTION:** For a full equip assembly, mount the top master before the 3p system.

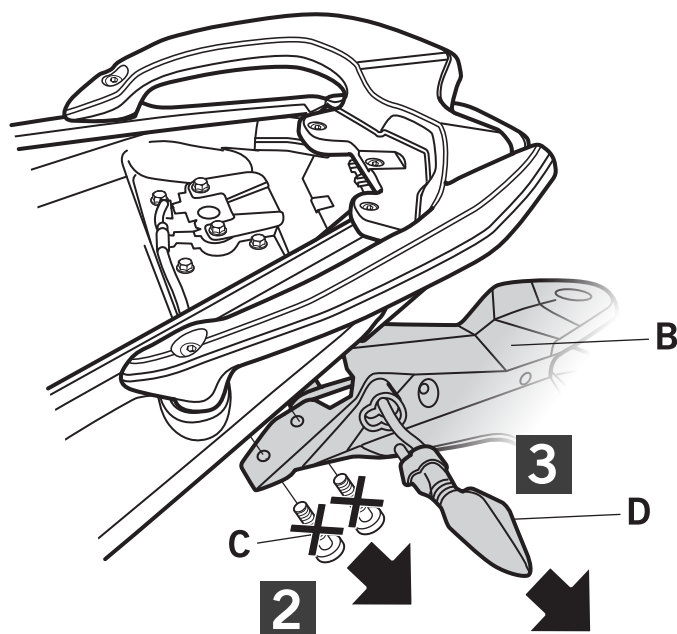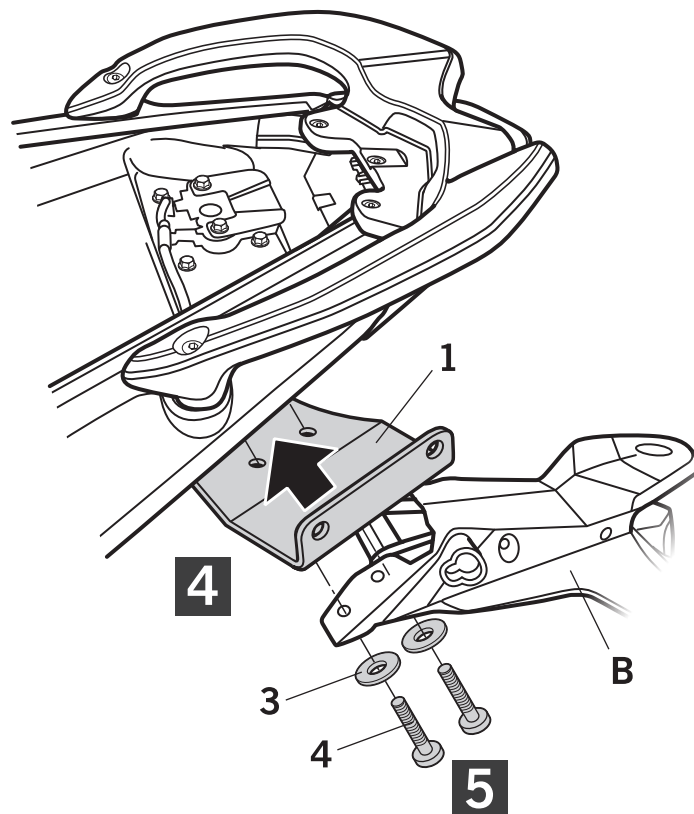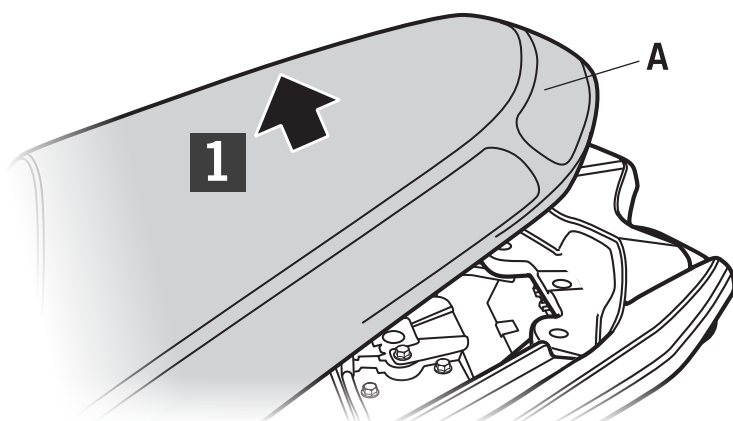

**IMPORTANT:** Based on European models. For compatibility with models in other continents, check [www.shad.es](http://www.shad.es)

