


SHAD

YAMAHA MT 10 '16
YOMT16IF

3P
SYSTEM

DESIGNED IN
BARCELONA

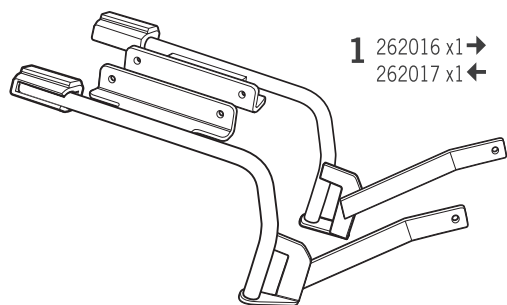

1 262016 x1 →
262017 x1 ←

2 260648 x4
Ø16 Ø9 x5

3 303045 x4
Ø8

4 304036 x2
M8 x 45 Din 7380

5 260523 x2
Ø16 Ø9 x25

6 304170 x2
M8 x 60 Din 7380

7 304272 x4
M8 x 35 Din 7380

8 303020 x4
Ø8

! WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the 3p system after the top master.

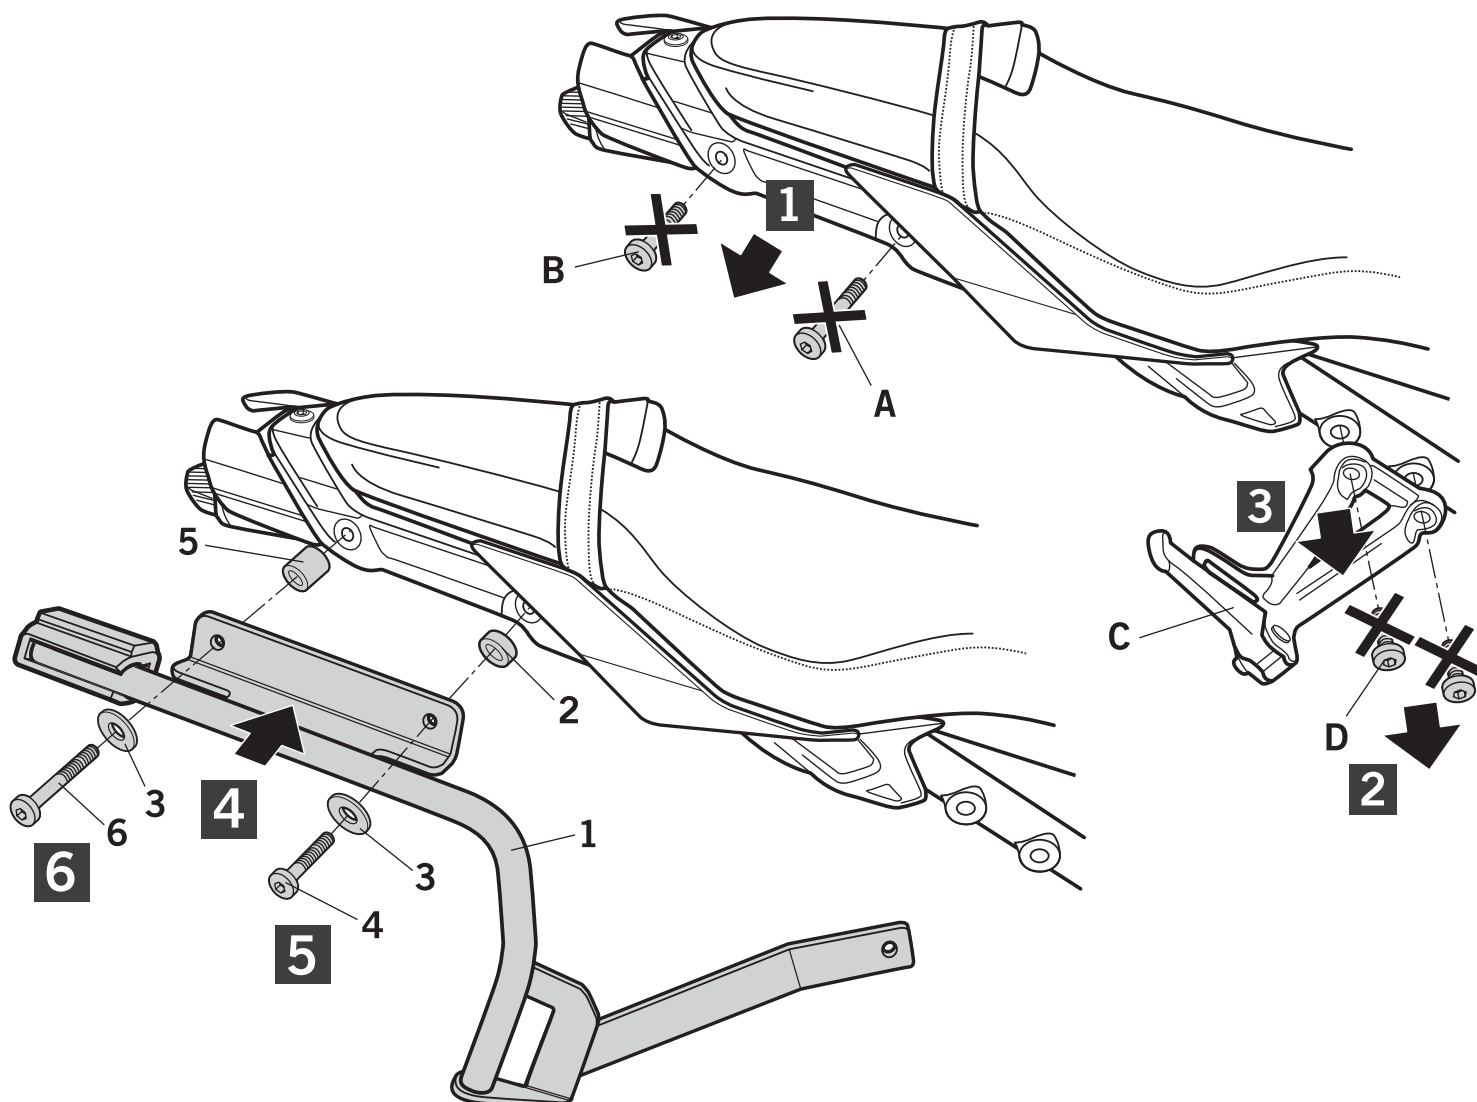

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

