


SHAD

VOGE 500 DS '20 - / DSX '21 -

V0DS504P

4P SYSTEM

BCN

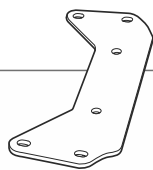

1 262695 x 1



2 260493 x 2
Ø20 - 12 Ø8,5 x 14-3




3 260686 x 2
Ø16 Ø9 x 8




4 303027 x 2
Ø8



5 303045 x 14
Ø8



6 304169 x 2
M8x50 DIN 7380

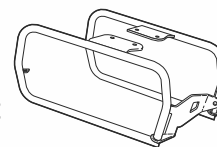

7 263014 x 1 →
263015 x 1 ←



8 304028 x 6
M8x25 DIN 7380



9 302024 x 6
M8



10 263016 x 1



11 304052 x 2
M6x20 DIN 7380



12 302021 x 2
M6



13 303017 x 4
Ø6

WARNING! ⚠






(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.


(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

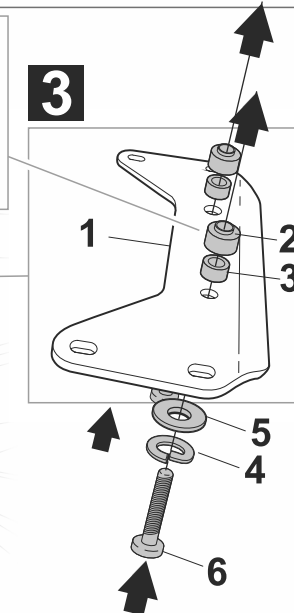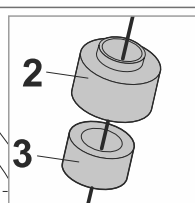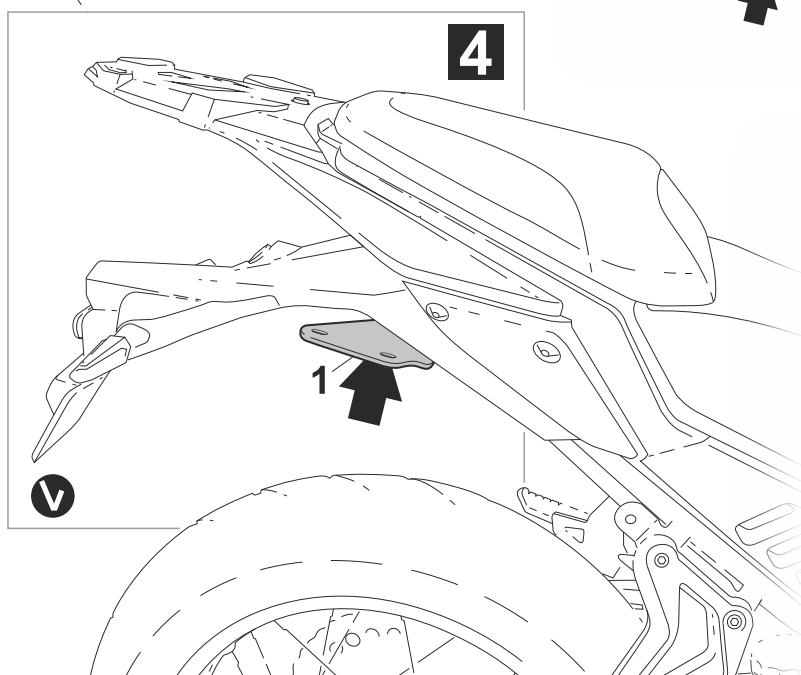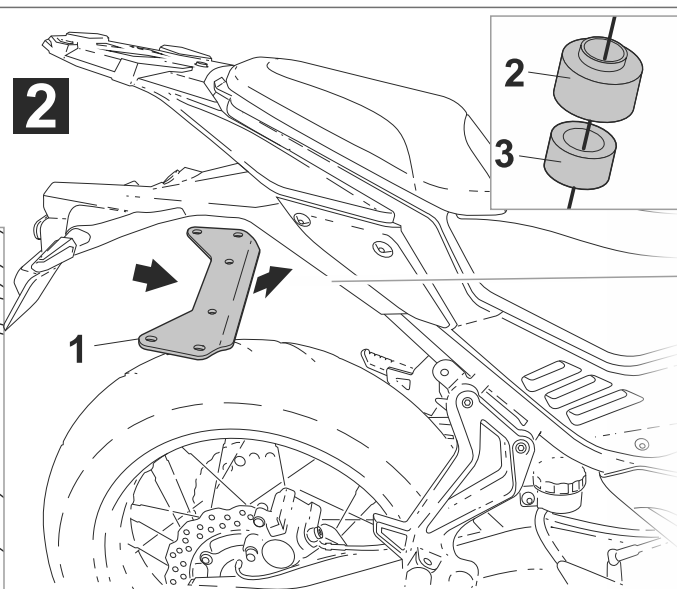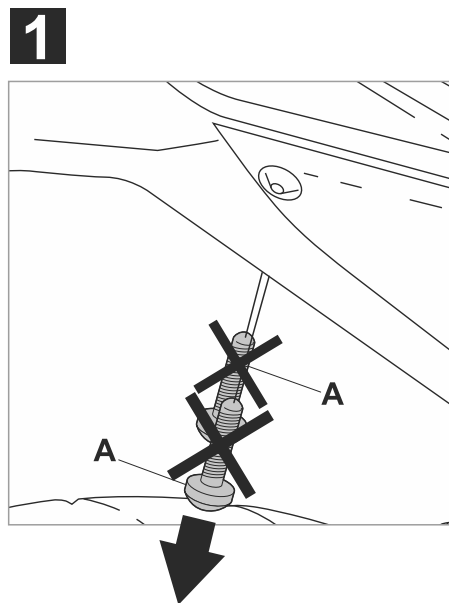

5

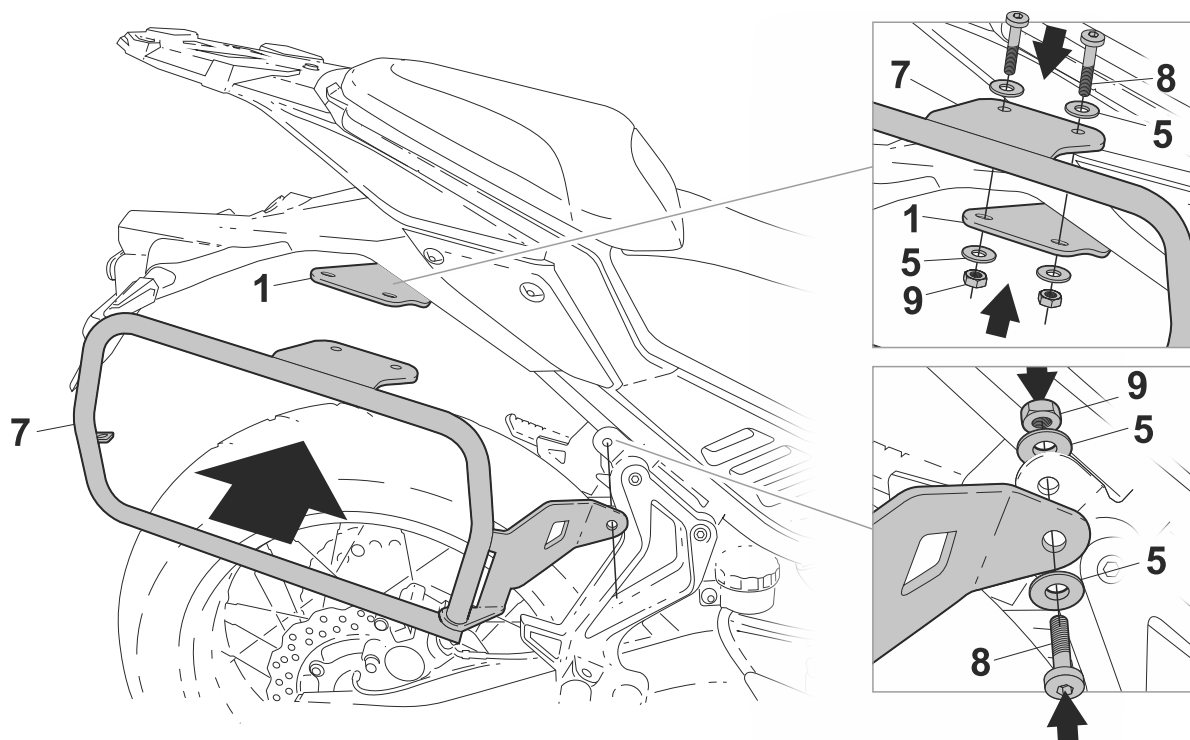

6

