



SHAD

HONDA SERIES NC 750 X '21 H0NC714P

4P
SYSTEM

DESIGNED IN
BARCELONA

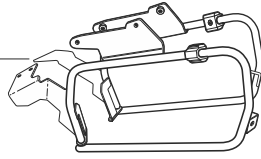

1 262600 x 1 →
262601 x 1 ←



2 304053 x 4
M8x30 DIN 7380



3 303027 x 12
Ø8

4 262963 x 1 →
262964 x 1 ←



5 304081 x 4
M8x20 DIN 7380




6 303045 x 8
Ø8



7 261072 x 4
Ø20 Ø9 x 32



8 304169 x 4
M8x50 DIN 7380



9 262965 x 1



10 304052 x 2
M6x20 DIN 7380



11 303017 x 4
Ø6



12 302021 x 2
M6

WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

