


SHAD

DUCATI MULTISTRADA 1200 V4 / V4 S / V4 S SPORT '21

DOMV114P




1 262774 x1



2 304053 x2
M8 x 30
Din 7380



3 303027 x2
Ø8

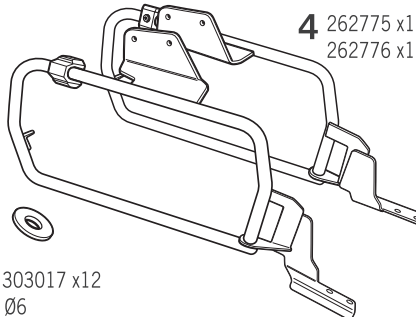

4 262775 x1 →
262776 x1 ←



5 304028 x4
M8 x 25
DIN 7380



6 303045 x8
Ø8



7 302024 x4
M8



8 304052 x6
M6 x 20
Din 7380



9 303099 x4
Ø6



10 303017 x12
Ø6



11 262777 x1



12 302021 x2
M6



WARNING!



(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

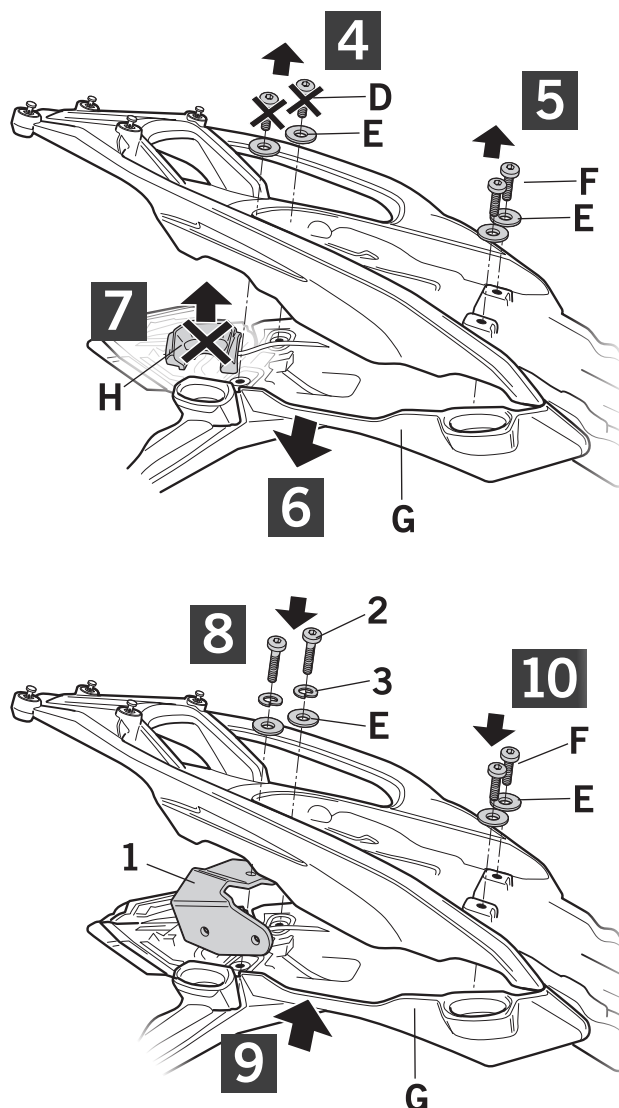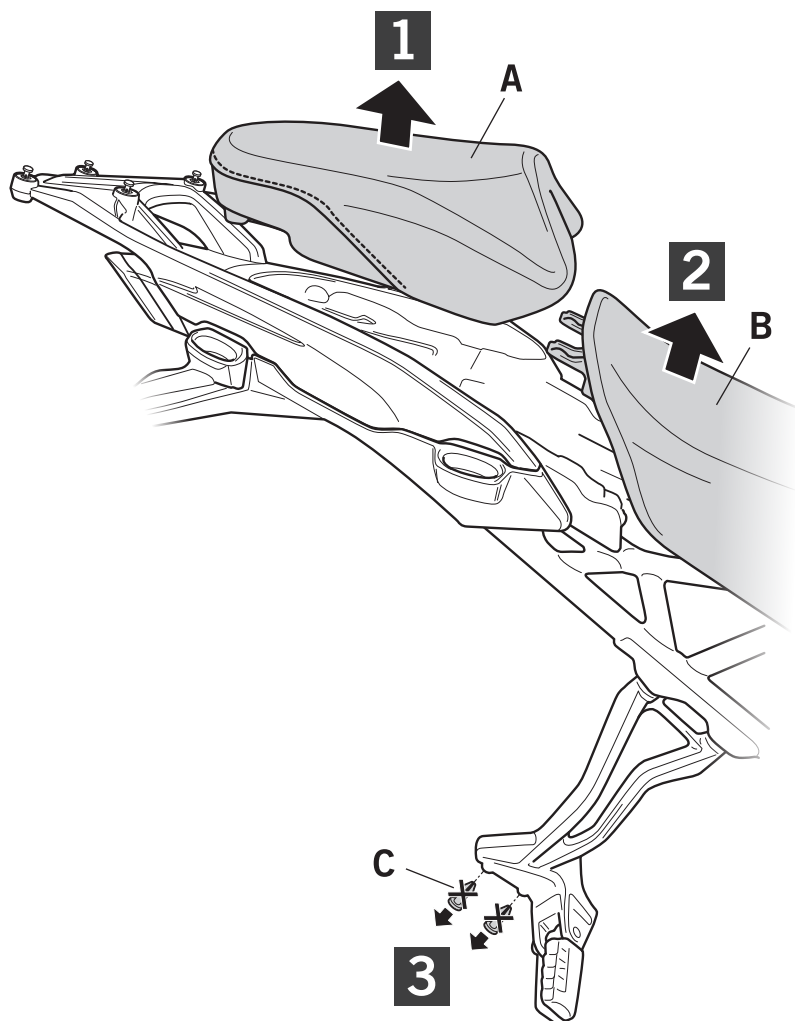

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

