

HONDA CB 500X '16-'20

HOICX594P



- | | | | | | | |
|---------------------------------------|----------------------------------|--|---------------------------------------|---------------------------|--|---------------------------------------|
| 1 ROS057 x1 →
ROS058 x1 ← | 2 FOD011 x2
Ø16 Ø9 x 5 | 3 | 4 EOD014 x4
M8 x 25 Din 912 | 5 EOD028 x11
Ø8 | 6 EOD035 x6
M8 | 7 EOD021 X1
M8 x 60 Din 912 |
| 8 EOD015 x1
M8 x 30 Din 912 | 9 EOD027 x4
Ø6 | 10 EOD047 x2
M6 x 20 Din 912 | | | 11 EOD005 x2
M6 x 15 Din 912 | 12 FID036 x1 |
| | | | | | 13 EOD034 x2
M6 | |

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.


(I)


Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

ATTENTION: For a full equip assembly, mount the 3P or 4P System after the top master.

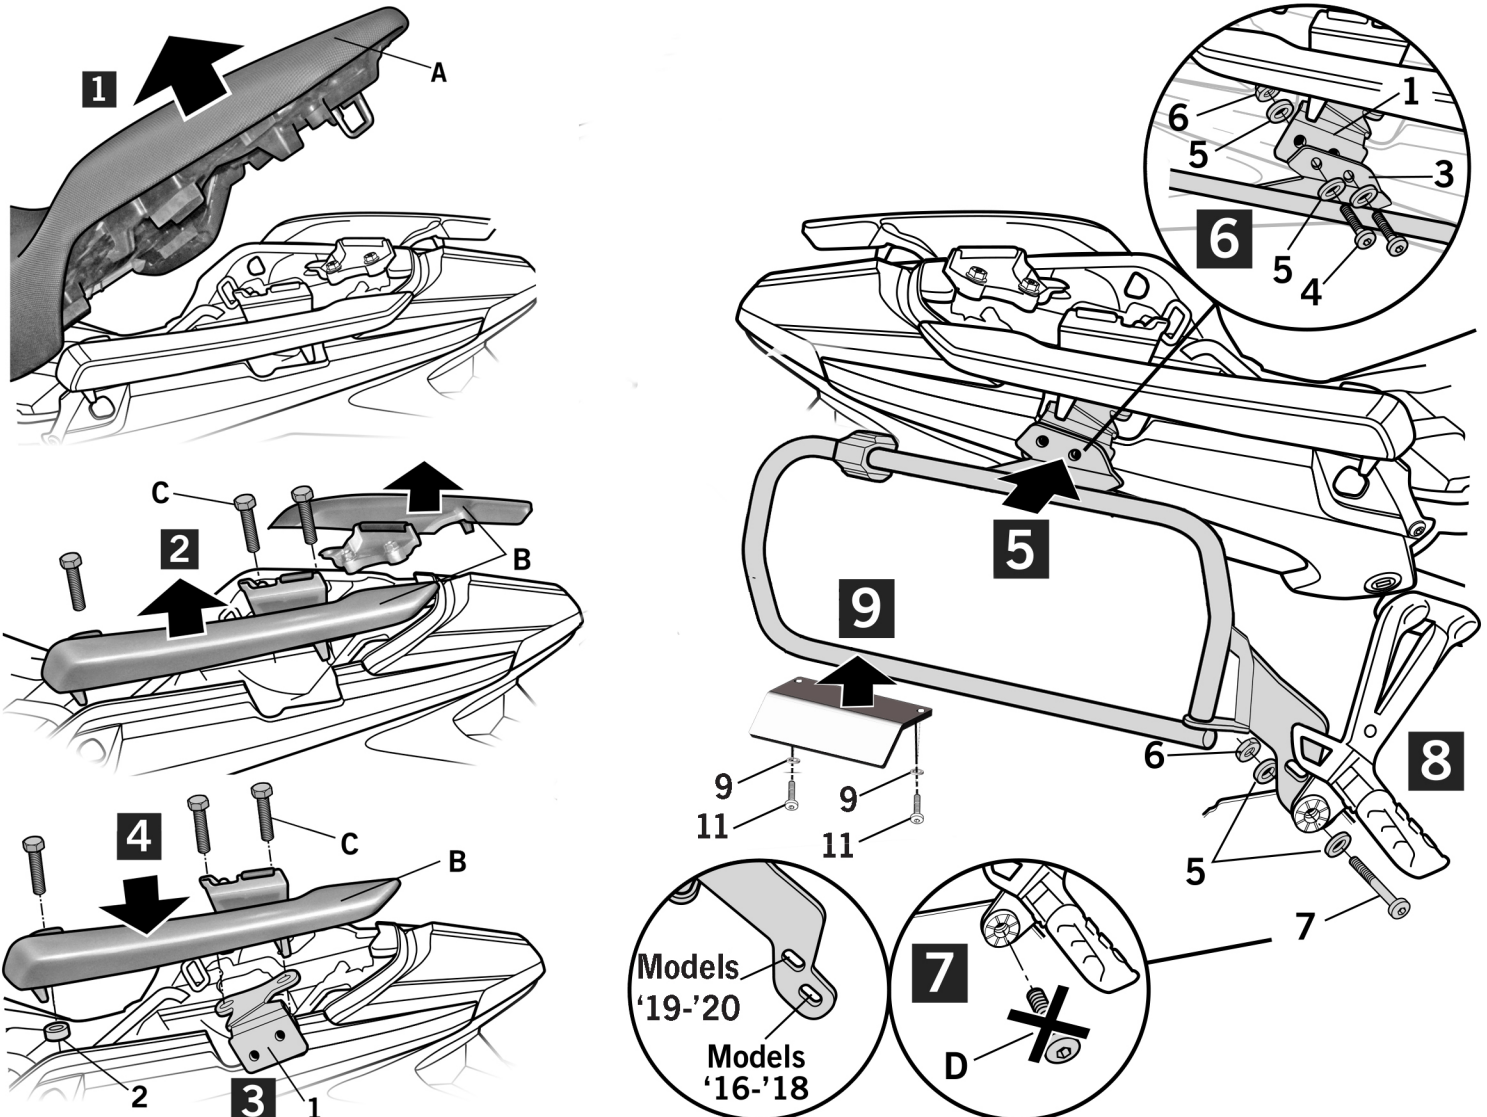

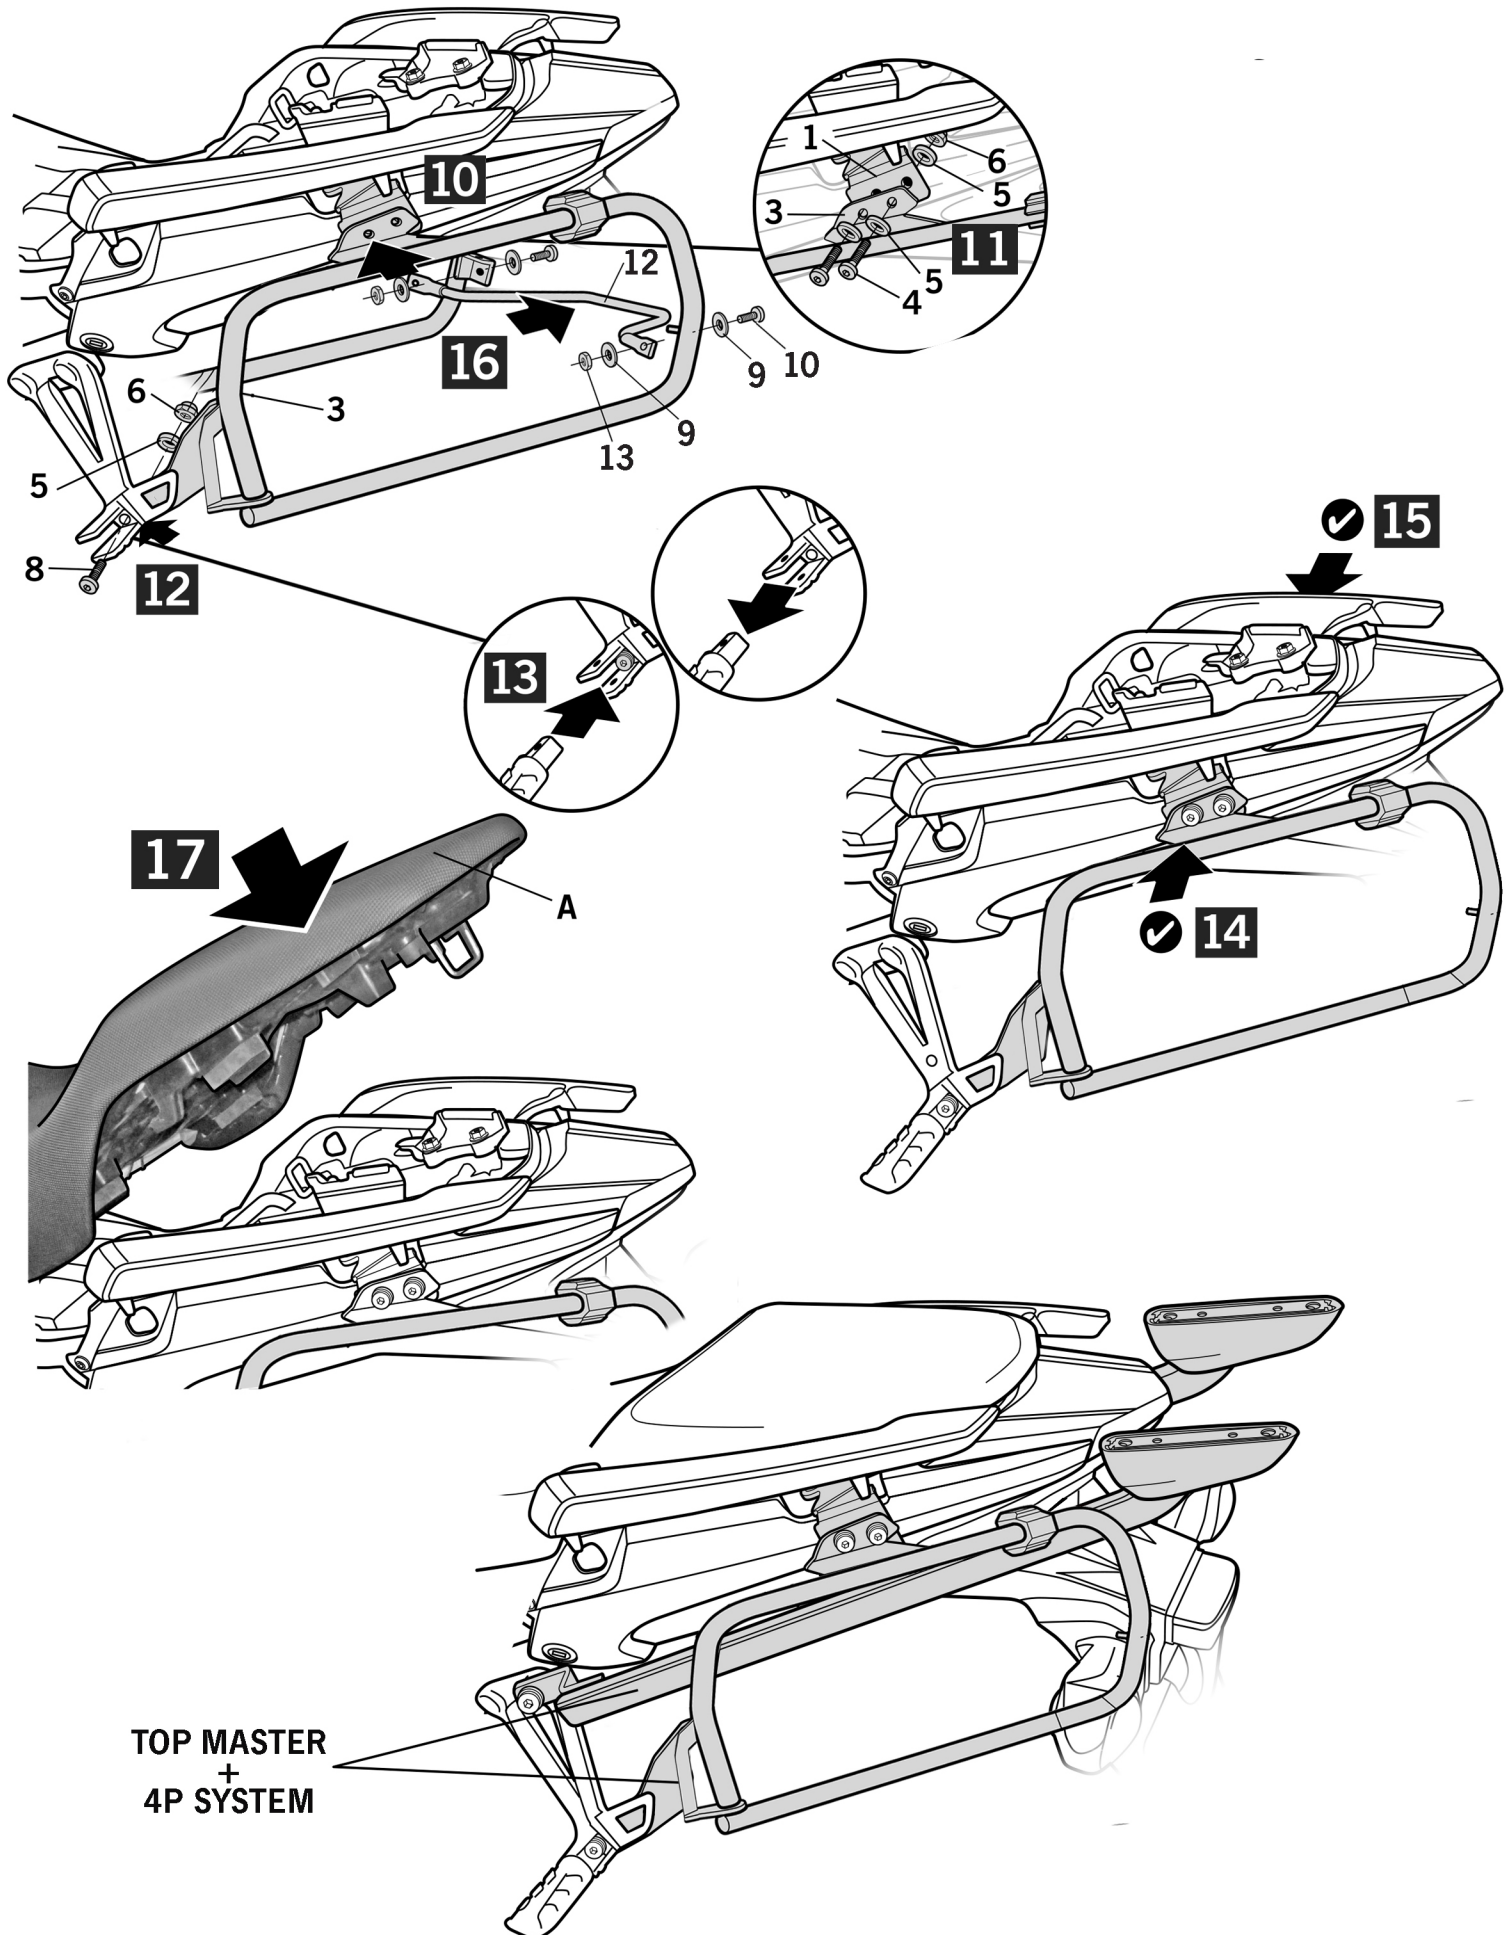

TOP MASTER
+
4P SYSTEM