


SHAD

SUZUKI V-STROM 1000 '14-'19 SUZUKI V-STROM 1050 '20 / 1050 XT '20

SOVS104P

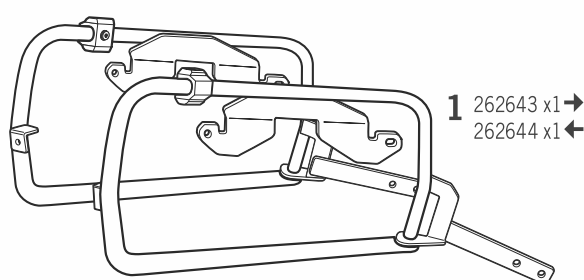


- | | | | | |
|-------------------------------------|---|---------------------------|---|---------------------------------------|
| 1 262643 x1 →
262644 x1 ← | 2 260983 x4
Ø14 Ø9 x 29 | 3 303017 x16
Ø6 | 4 303099 x4
Ø6 | 5 304071 x4
M6 x 50 Din 912 |
| 6 302021 x6
M6 | 7 304079 x4
M6 x 30
Din 7380 | 8 262645 x1 | 9 304052 x2
M6 x 20
Din 7380 | 10 260648 x4
Ø16 Ø9 x 5 |

WARNING!

- (GB)** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.
- (E)** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.
- (D)** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.
- (I)** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.
- (F)** Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

V-STROM 1000 '14-'19 V-STROM 1050 '20

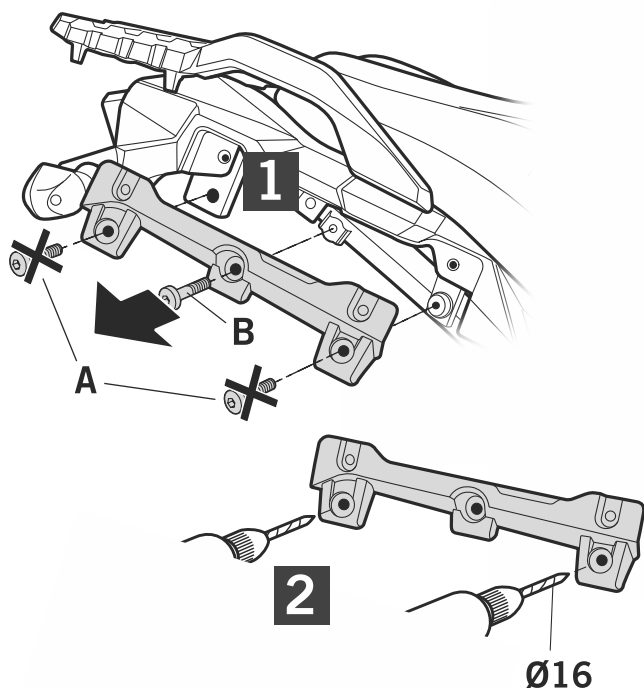

V-STROM 1050 XT '20

