



SHAD

BENELLI TRK 502 X '20

KIT TOP BOTX50ST

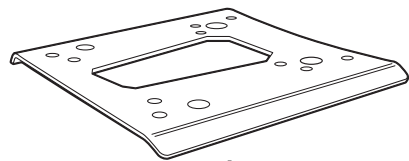

1 262591 x1



2 304221 x2
M6 x 45 Din 7380




3 303017 x6
Ø6



4 260731 x4
Ø16 Ø11 x 10



5 302021 x4
M6




6 304330 x2
M8 x 110 Din 7991



7 303025 x2
Ø10



8 261121 x2
Ø20 Ø11 x 18



9 304093 x2
M6 x 40 Din 7991

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

