


SHAD

ZONTES U1 125 / U 125 '20

TOP MASTER ZOU110ST

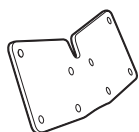


1 262675 x1




2 260213 x4
Ø16 Ø9 x12



3 303020 x6
Ø8



4 304169 x4
M8 x 50
DIN 7380

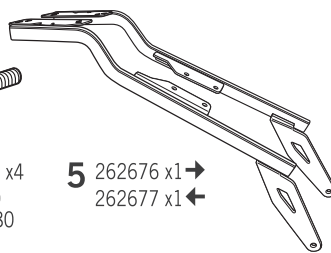

5 262676 x1 →
262677 x1 ←



6 303045 x10
Ø8



7 304053 x6
M8 x 30
DIN 7380



8 302024 x6
M8



WARNING!

Ⓒ Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.





Ⓔ No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

Ⓓ Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

Ⓘ Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

Ⓕ Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

ATTENTION: For a full equip assembly, mount the side bag holder above the bracket (5).

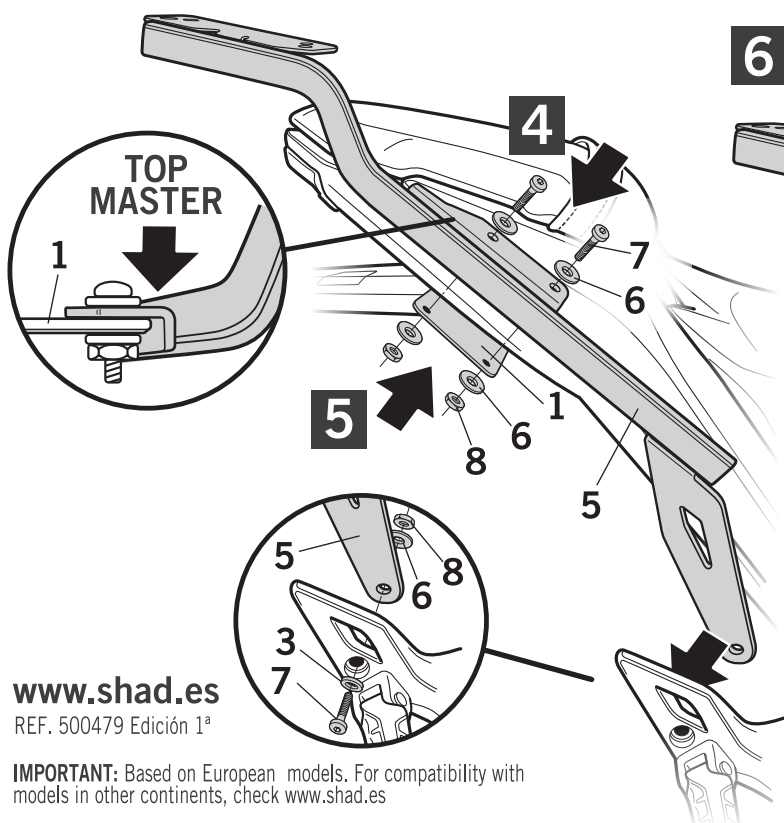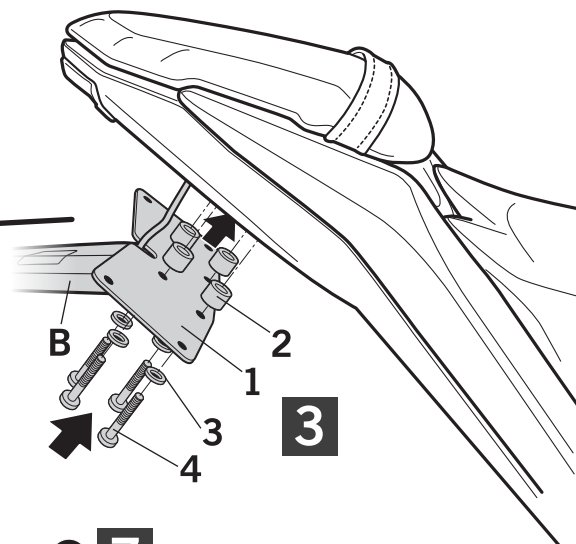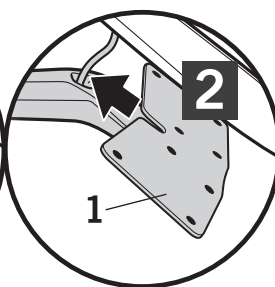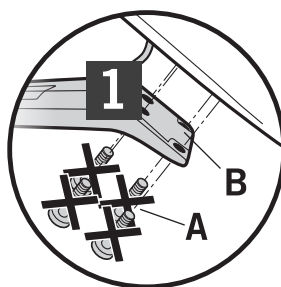

TOP MASTER
+
DOSS5SE

www.shad.es
REF. 500479 Edición 1ª

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es