


SHAD

SYM MAXSYM 400 '21 TOP MASTER SOMS41ST

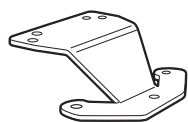

1 262739 x1



2 260740 x3
Ø20 Ø11 x 11




3 303045 x7
Ø8



4 304039 x3
M8 x 40
Din 7380



5 304258 x2
M8 x 35
Din 933

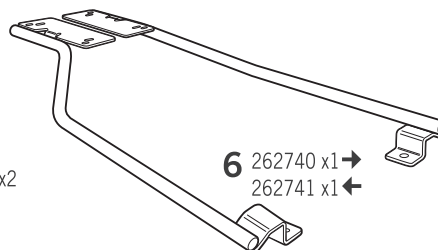

6 262740 x1
262741 x1



7 303017 x2
Ø6

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)




Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

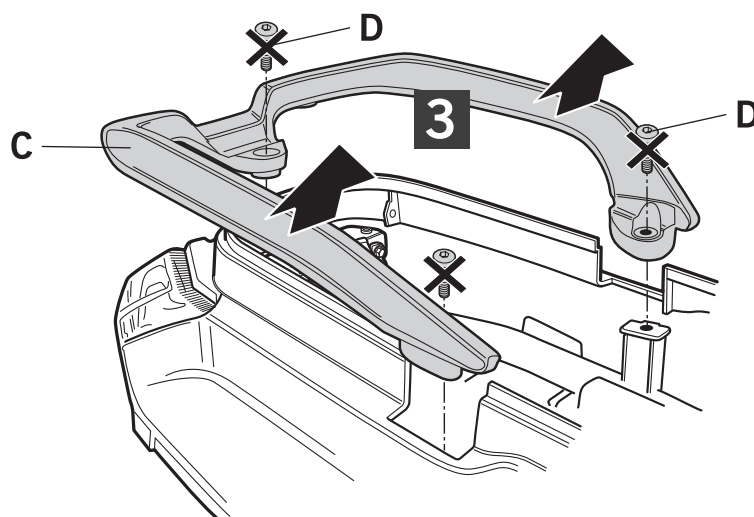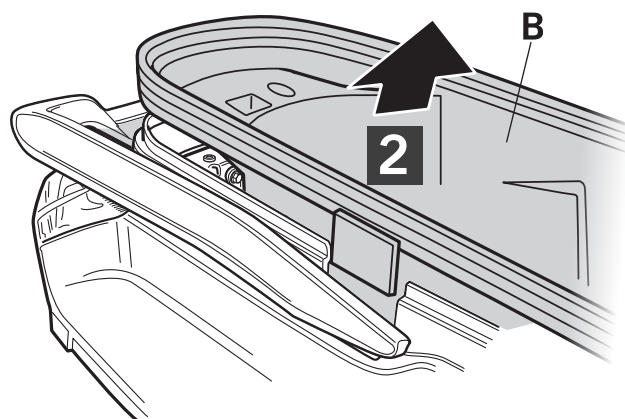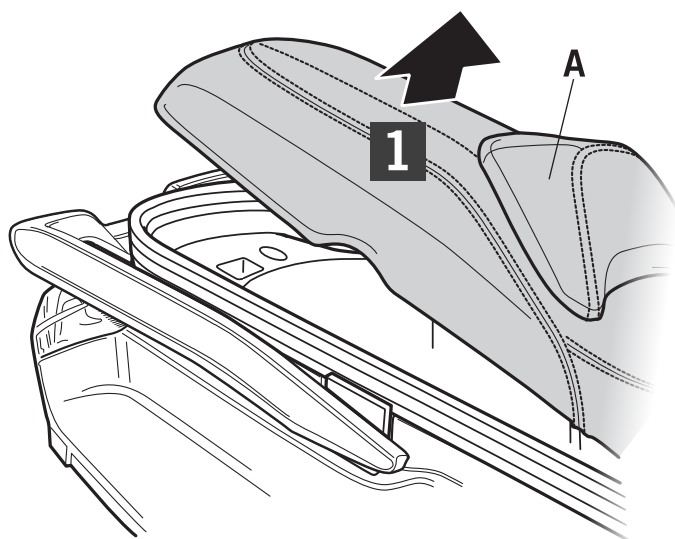

IMPORTANT: Based on European models.

For compatibility with models in other continents, check www.shad.es

