

SHAD

BMW G 310 R '17 KIT TOP WOG317ST




1 262233 x1



2 303020 x4
Ø8



3 304169 x2
M8 x 50 Din 7380

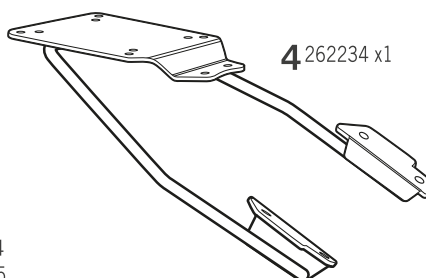

4 262234 x1



5 304171 x4
M8 x 65 Din 7380



6 303045 x6
Ø8



7 302024 x2
M8



8 304028 x2
M8 x 25 Din 7380



9 260648 x4
Ø16 Ø9 x 5



10 260596 x2
Ø16 Ø9 x 20




11 260523 x2
Ø16 Ø9 x 25




WARNING!

- (GB)** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.
- (E)** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.
- (D)** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.
- (I)** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.
- (F)** Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

ATTENTION: For a full equip assembly, mount the 3p system before the top master.

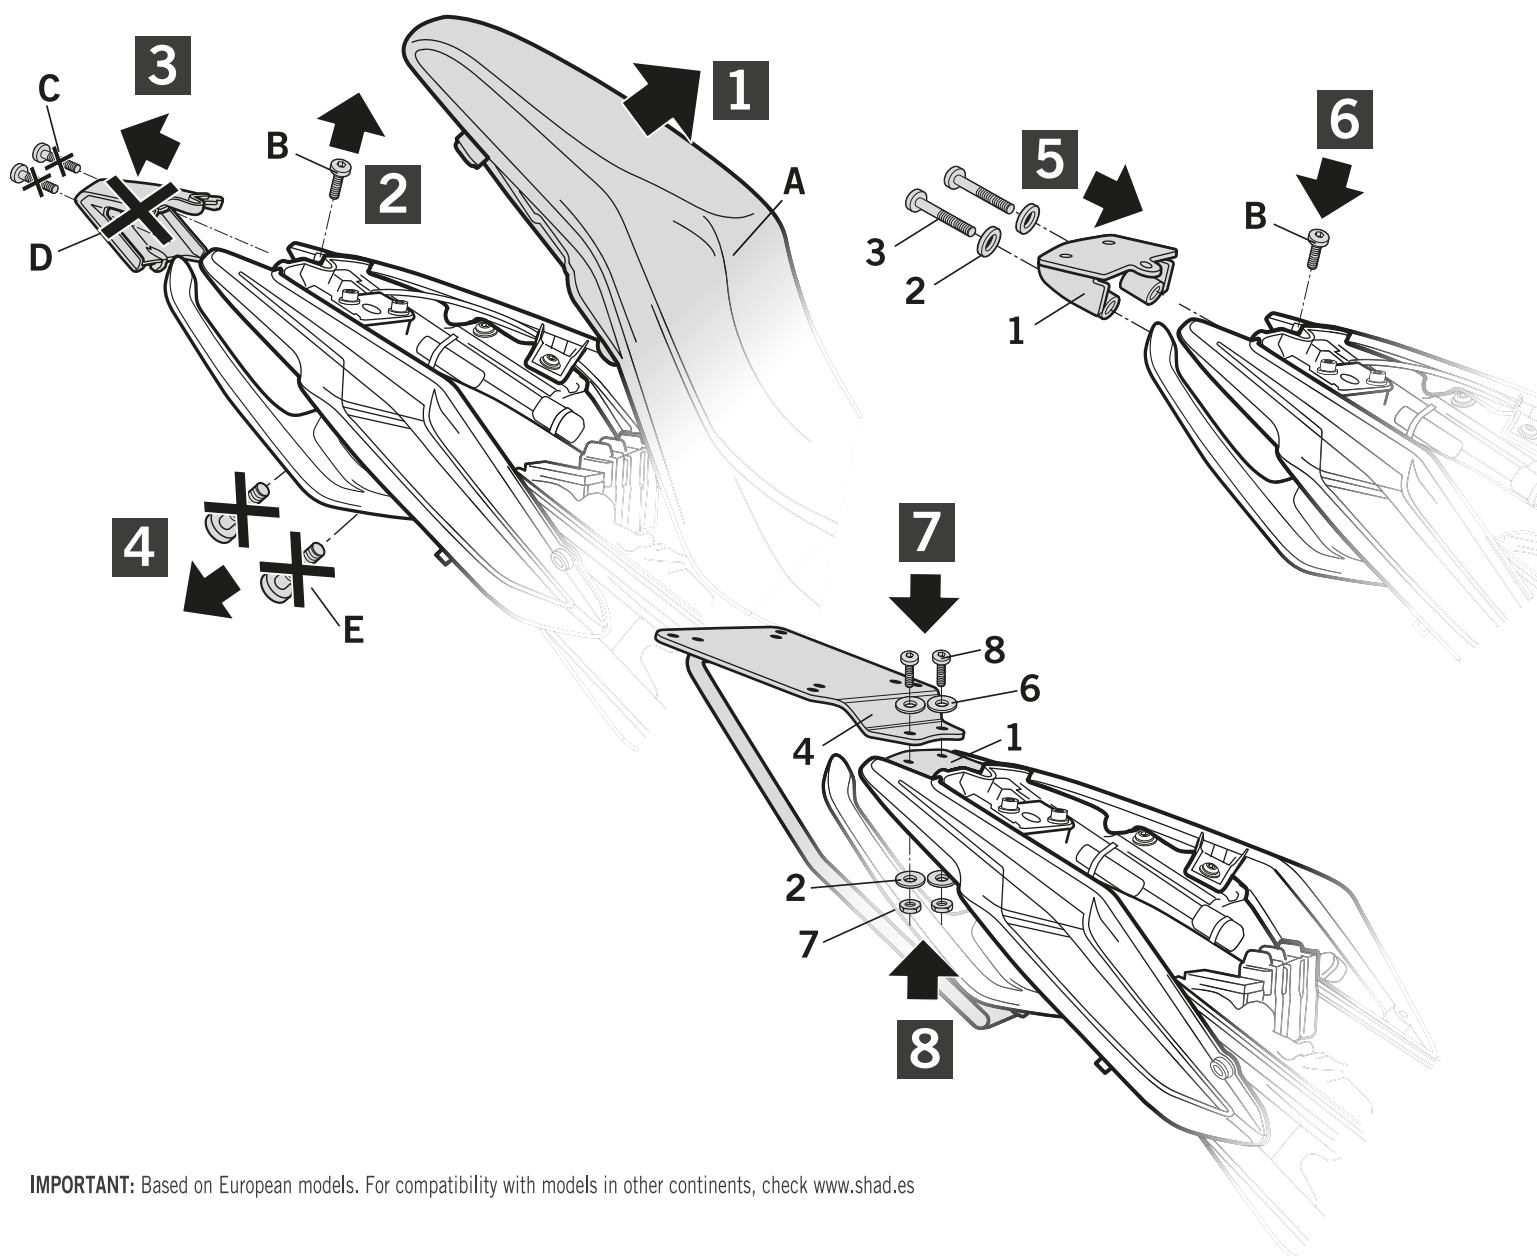

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

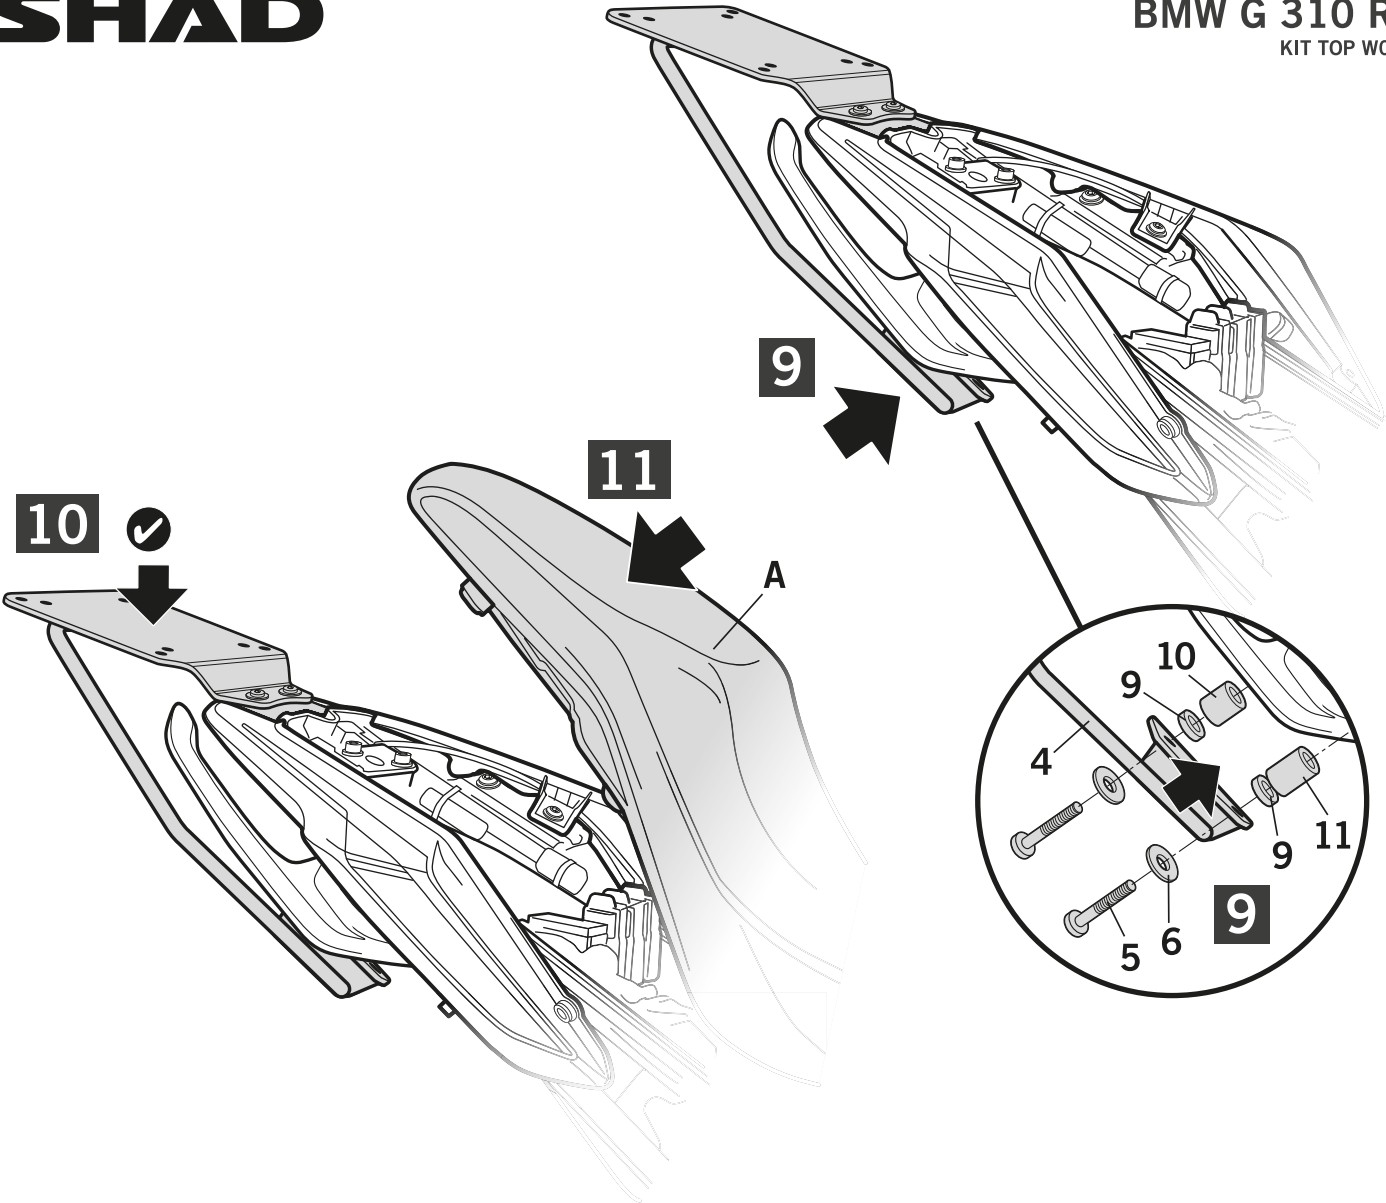

**TOP MASTER
+
3P SYSTEM**

