


SHAD

BMW C 650GT '12

KIT TOP W0CG62ST



1 261440 x1



2 303017 x2
Ø6



3 304012 x2
M6 x 16 Din 912



4 260747 x1
Ø20 Ø9 x 13



5 303020 x1
Ø8



6 304272 x1
M8 x 35 Din 7380




7 260648 x1
Ø16 Ø9 x 5



WARNING!

- GB** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.
- E** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.
- D** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.
- I** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.
- F** Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

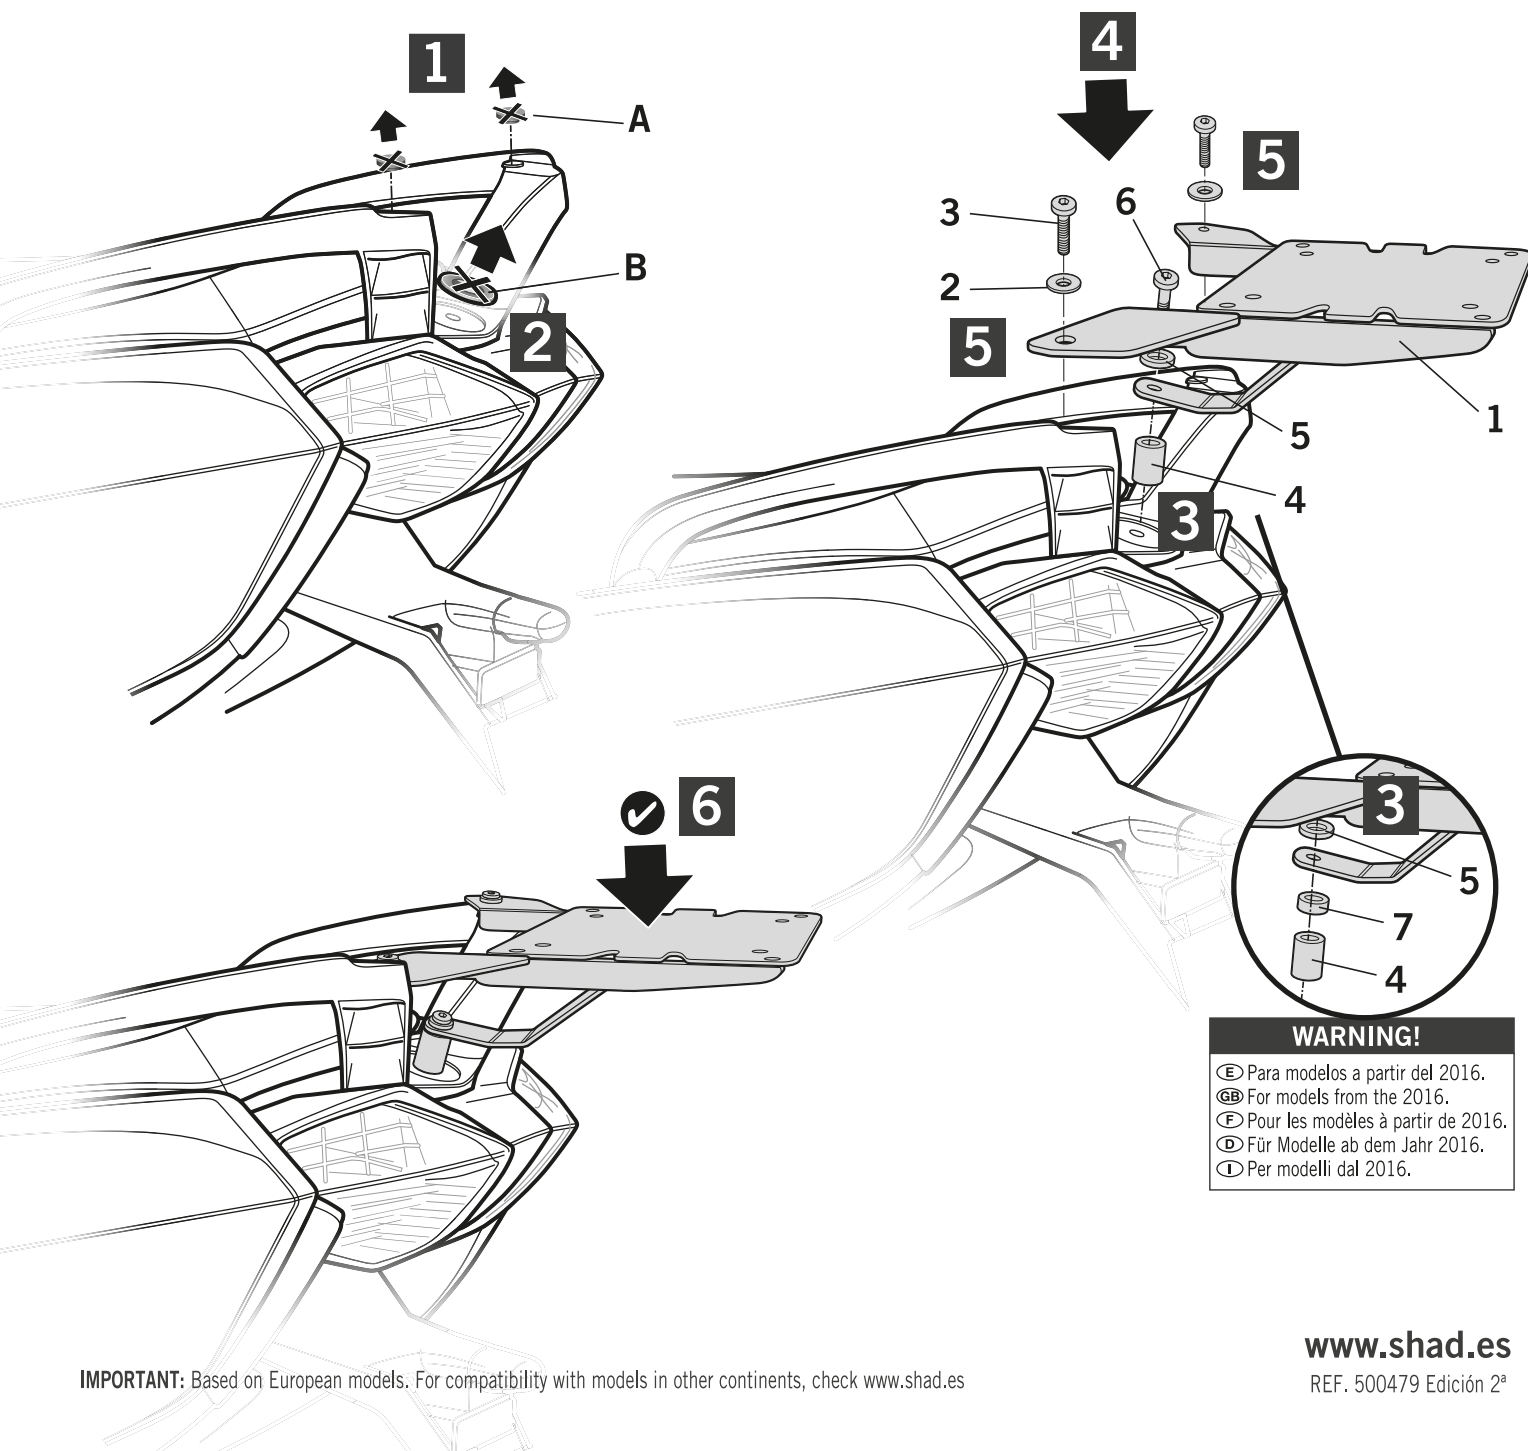

WARNING!

- E** Para modelos a partir del 2016.
- GB** For models from the 2016.
- F** Pour les modèles à partir de 2016.
- D** Für Modelle ab dem Jahr 2016.
- I** Per modelli dal 2016.