


SHAD

YAMAHA TRACER 900 / GT '21

TOP MASTER YOTR91ST

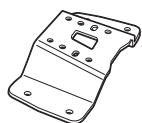

1 262791 x1



2 304052 x2
M6 x 20
Din 7380



3 303000 x14
Ø6



4 302021 x8
M6



5 304038 x2
M6 x 22
Din 912



6 262790 x2



7 262789 x1



8 304037 x2
M6 x 35
Din 912



9 262792 x1



10 260685 x2
Ø16 Ø9 x6




11 304039 x2
M8 x 40
Din 7380



12 303045 x12
Ø8



13 302024 x6
M8

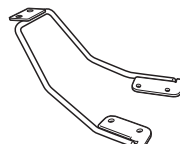

14 262793 x1



15 304091 x2
M6 x 20
Din 7991



16 304053 x4
M8 x 30
Din 7380



WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

