



SHAD

YAMAHA MT 03 '21 TOP MASTER YOMT31ST




1 262723 x1



2 260641 x2
Ø16 Ø9 x 22




3 260596 x2
Ø16 Ø9 x 20



4 304178 x4
M6 x 60 Din 912




5 303017 x8
Ø6

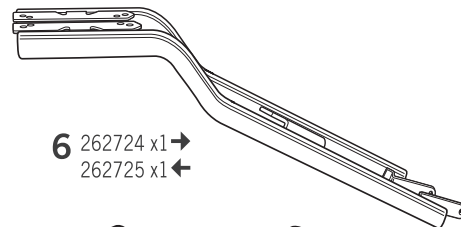

6 262724 x1 →
262725 x1 ←



7 302021 x4
M6



8 304053 x4
M8 x 30 Din 7380



9 303045 x8
Ø8



10 302024 x4
M8



11 304039 x4
M8 x 40 Din 7380



12 303020 x4
Ø8



13 260648 x2
Ø16 Ø9 x 5



WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.


(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

ATTENTION: For a complete set of equipment, mount the TOP bracket under the stand (1).

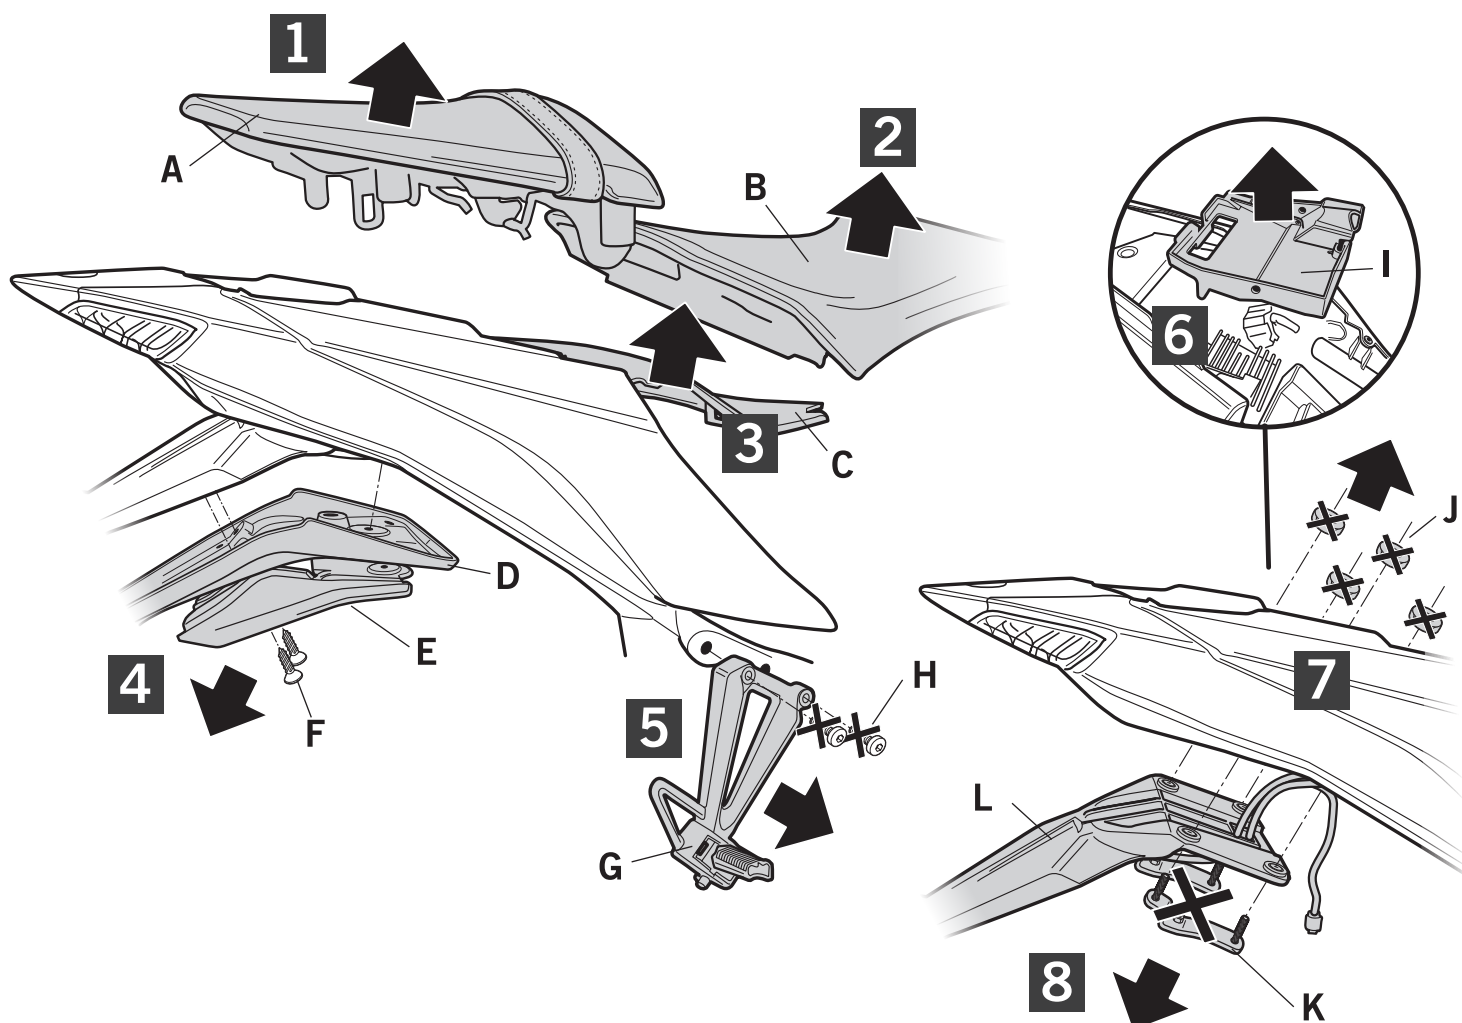

IMPORTANT: Based on European models. For compatibility with models in other continents, check www.shad.es

SHAD

YAMAHA MT 03 '21

TOP MASTER YOMT31ST

