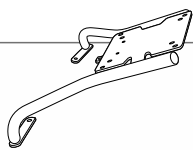


SHAD

KYMCO SUPER 8 50/125/150 '21- TOP MASTER K0SP51ST

BCN**1** 263031 x 1**2** 260712 x 2
Ø20 Ø11 x 22**3** 303045 x 3
Ø8**4** 304039 x 3
M8x40 DIN 7380**5** 260760 x 1
Ø20 Ø11 x 16

WARNING!

-Compatible with Small (D1B29PA), Medium (D1B40PA), Large mounting plate (D1B48PA) & aluminium.
-(NOTE): Compatible with TOP CASES SH26 – SH48 only.


GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

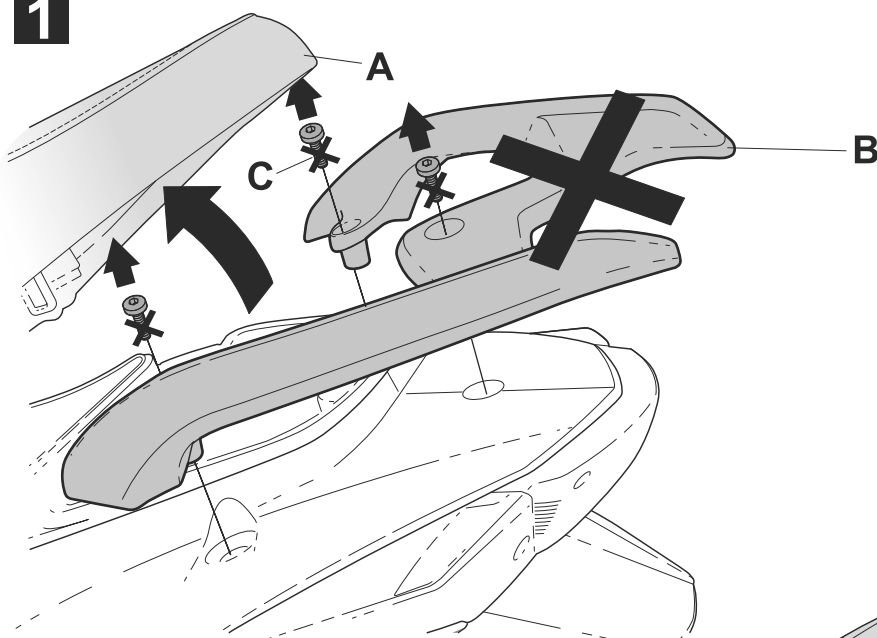1**2**