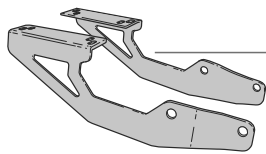


SHAD

VOGE 500 AC '22

TOP MASTER V0AC52ST

BCN

1 263171 x 1 →
263172 x 1 ←



2 260417 x 4
Ø16 Ø9 x 16



3 304169 x 2
M8x50 DIN 7380



4 304039 x 2
M8x40 DIN 7380



5 304036 x 2
M8x45 DIN 7380

WARNING!


GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

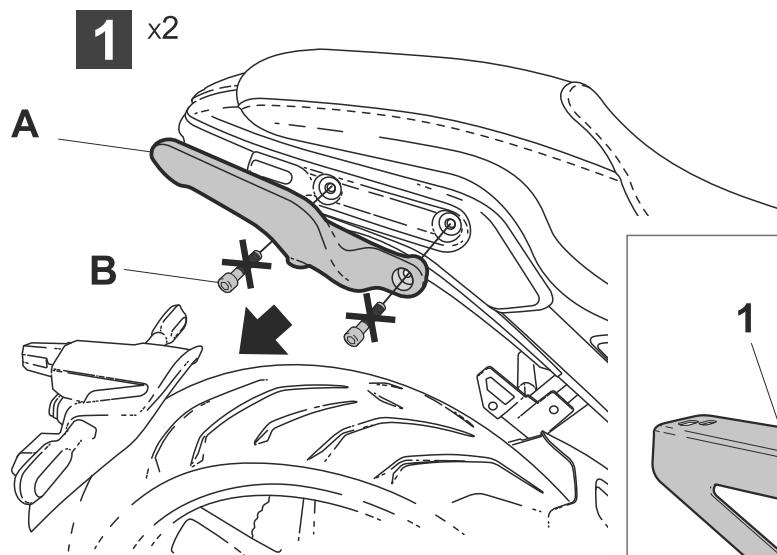

TOP + SR

