


SHAD

KYMCO X-TOWN CITY / CT 125 / 300 '22

TOP MASTER K0XT11ST

BCN

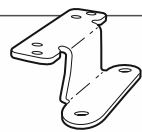

1 263019 x 1




2 261277 x 2
Ø20 Ø11 x 25




3 303045 x 4
Ø8



4 303027 x 4
Ø8



5 304174 x 2
M8x80 DIN 7380

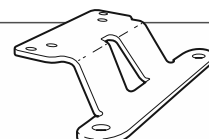

6 263020 x 1



7 304081 x 2
M8x20 DIN 7380

WARNING!





GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

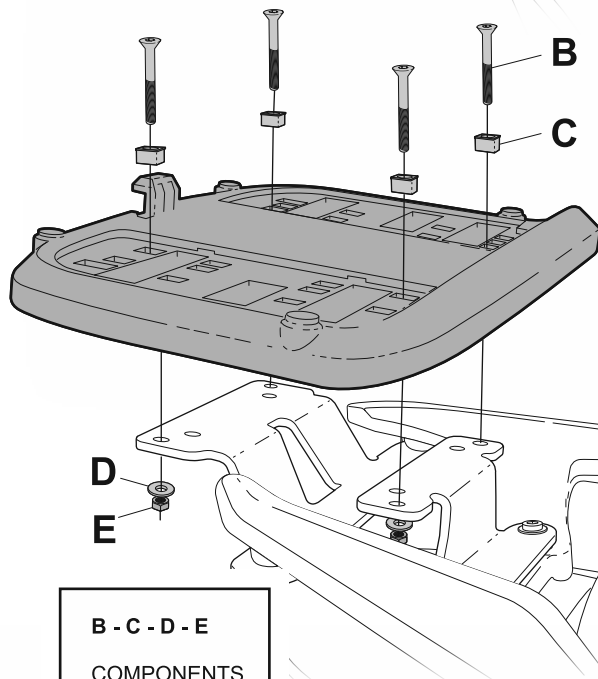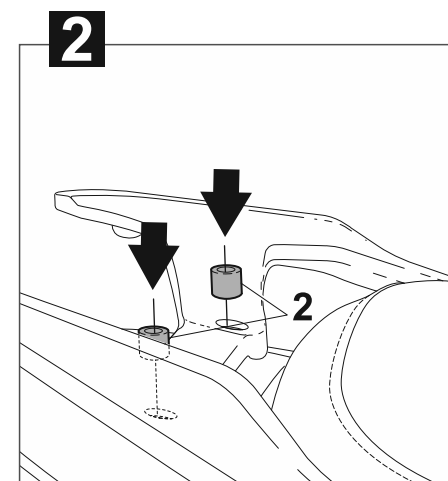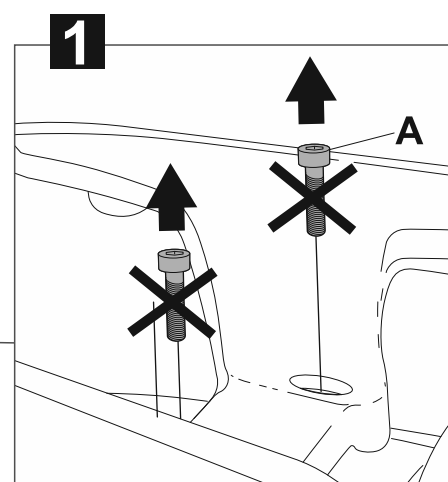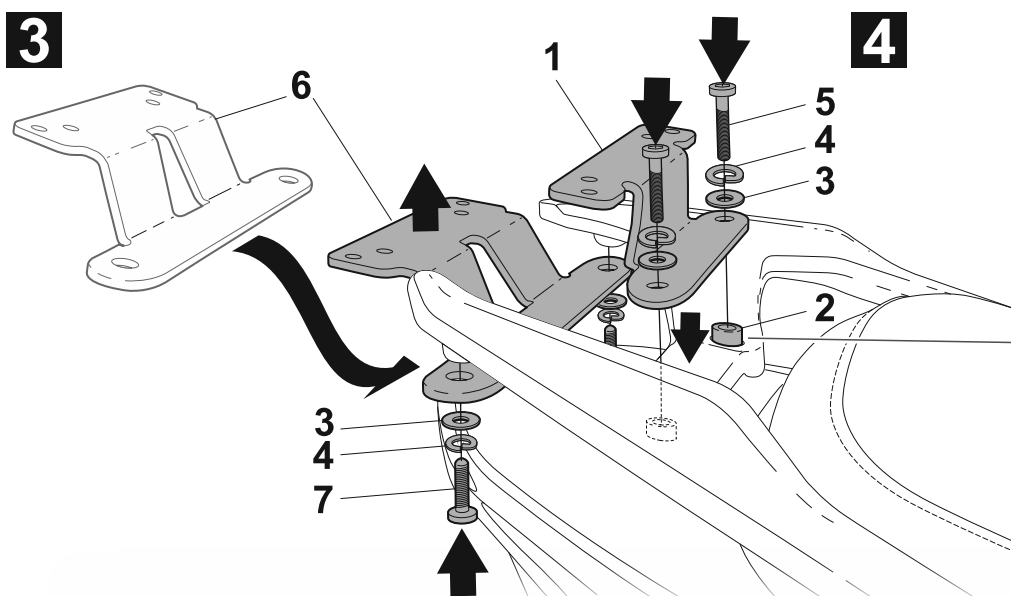

B - C - D - E

COMPONENTS
NOT INCLUDED
USE THOSE OF
TOP CASE