




SHAD

CF MOTO 800 NK '23- CONK83IF

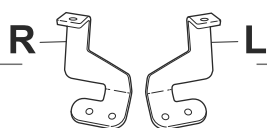


1 263516 x 1 →
263517 x 1 ←

2 304038 x 2
M6x22 DIN 912

3 303099 x 2
Ø6

4 303017 x 2
Ø6

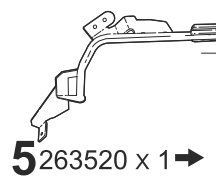

5 263520 x 1 →

6 304053 x 4
M8x30 DIN 7380

7 303045 x 12
Ø8

8 302024 x 6
Ø8

9 260648 x 8
Ø16 Ø9 x 5

10 304431 x 2
M8x55 DIN 912

11 263521 x 1 ←

WARNING!




(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months..

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.







(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.





(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.

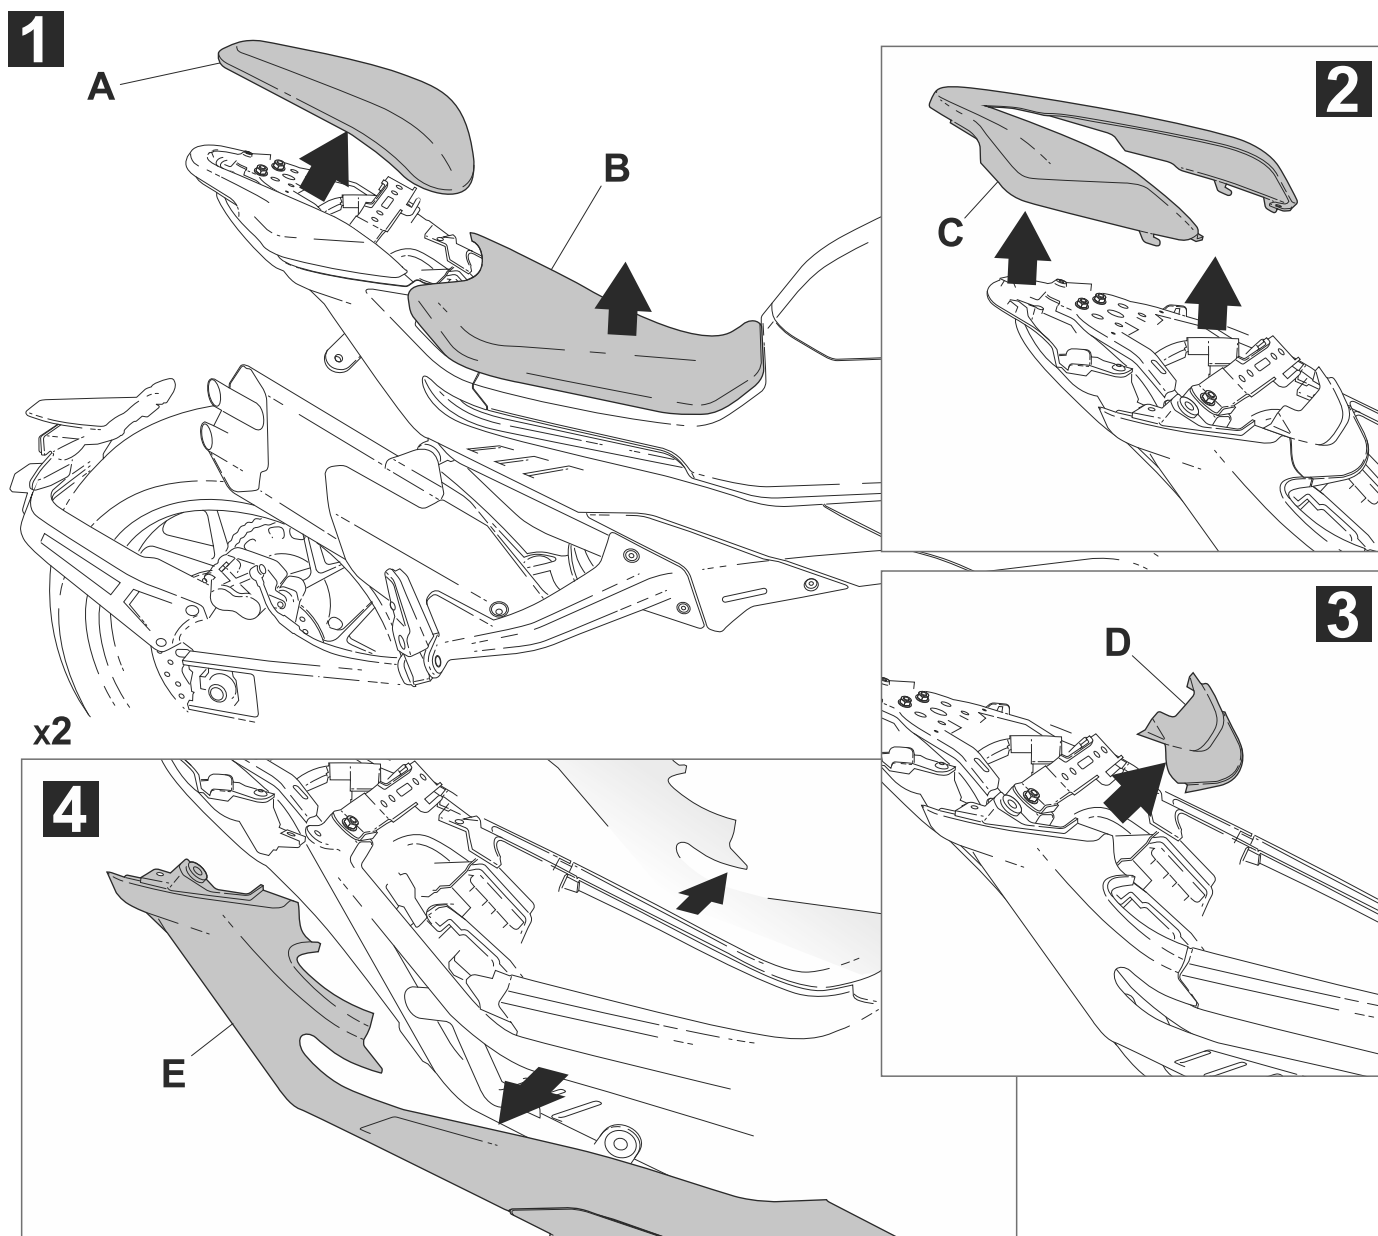

IMPORTANT: Based on European models. For compatibility with models in other continen check www.shad.es

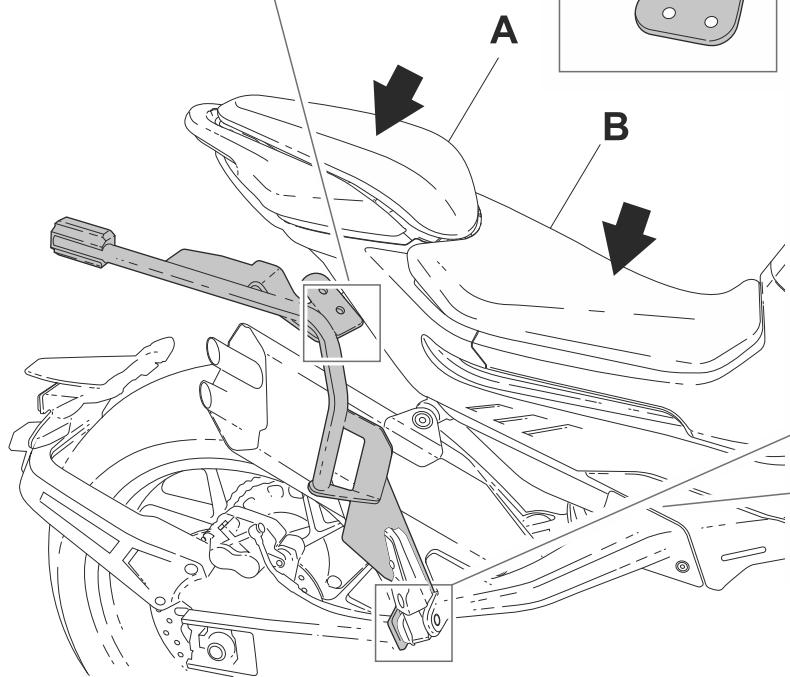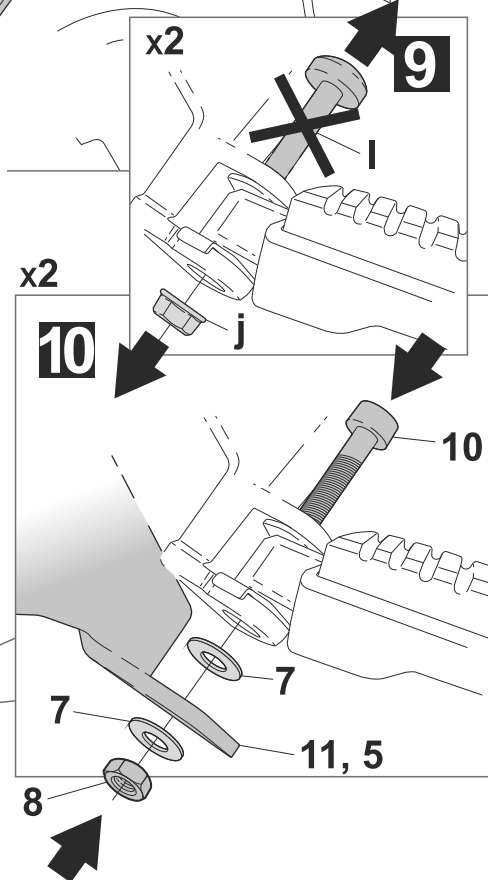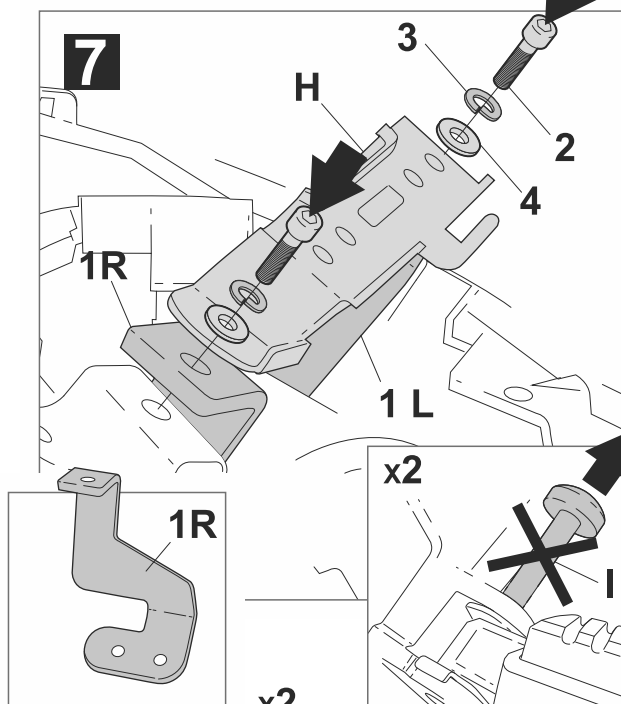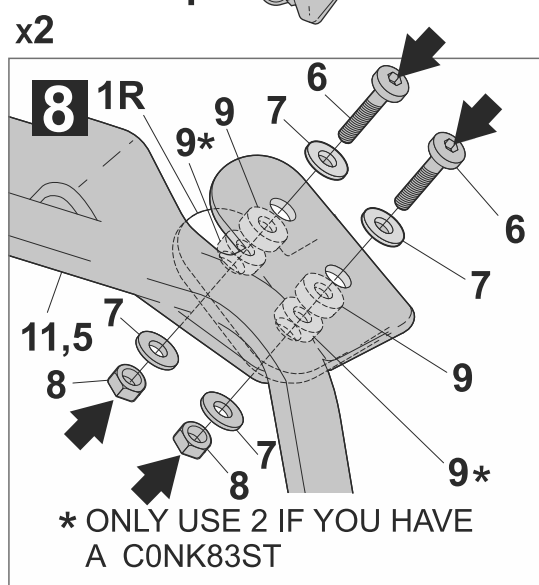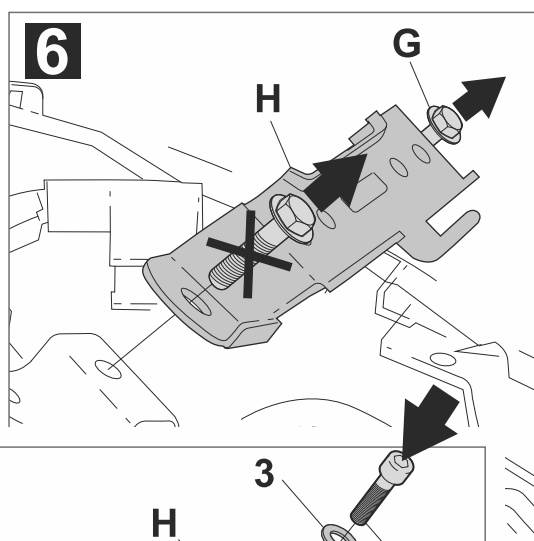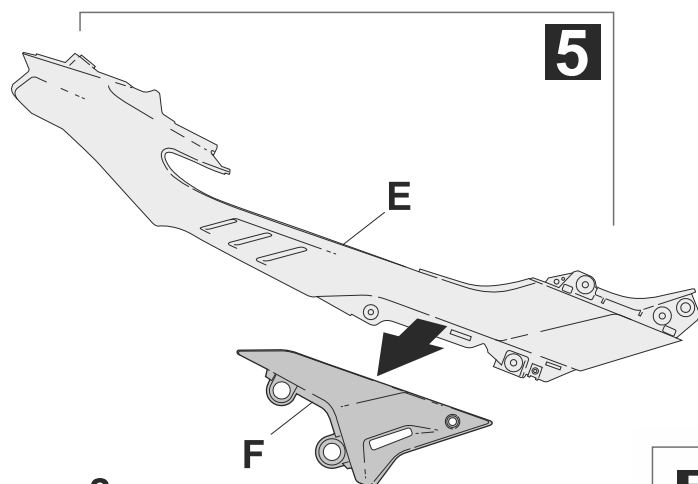

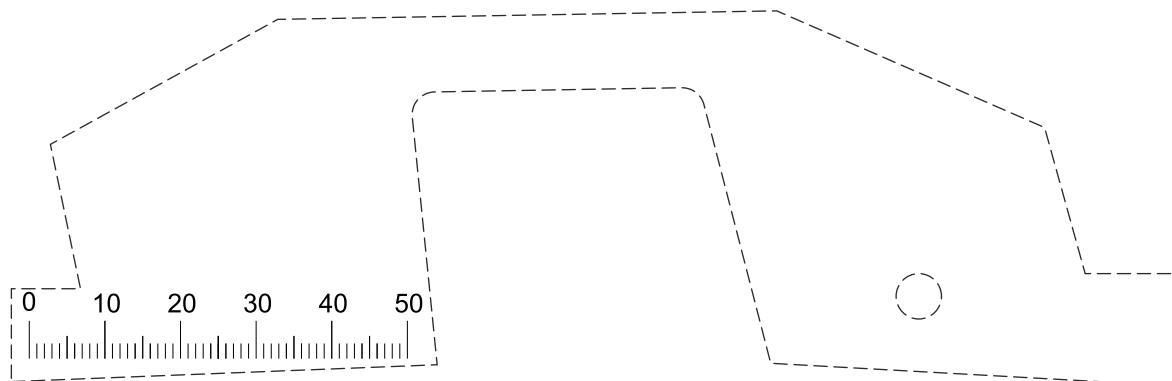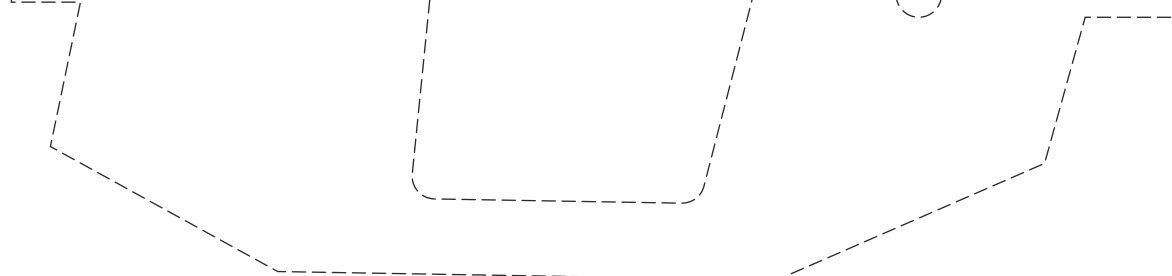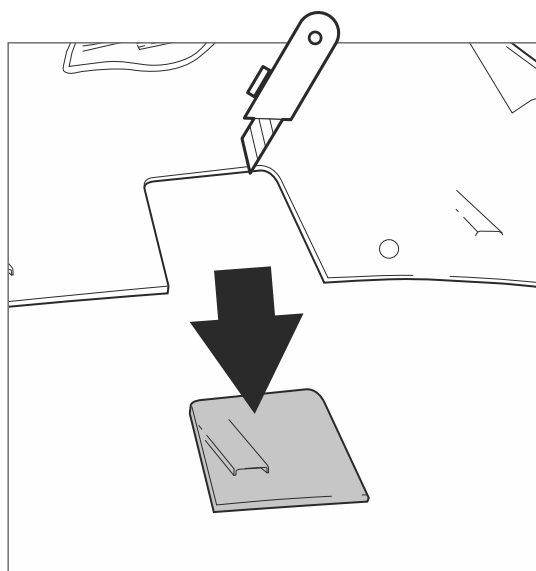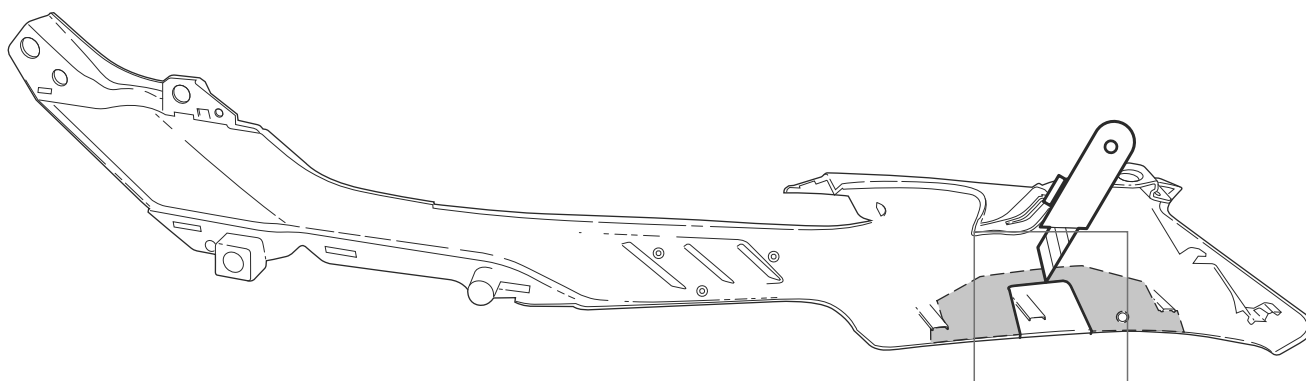

SCALE:1:1